



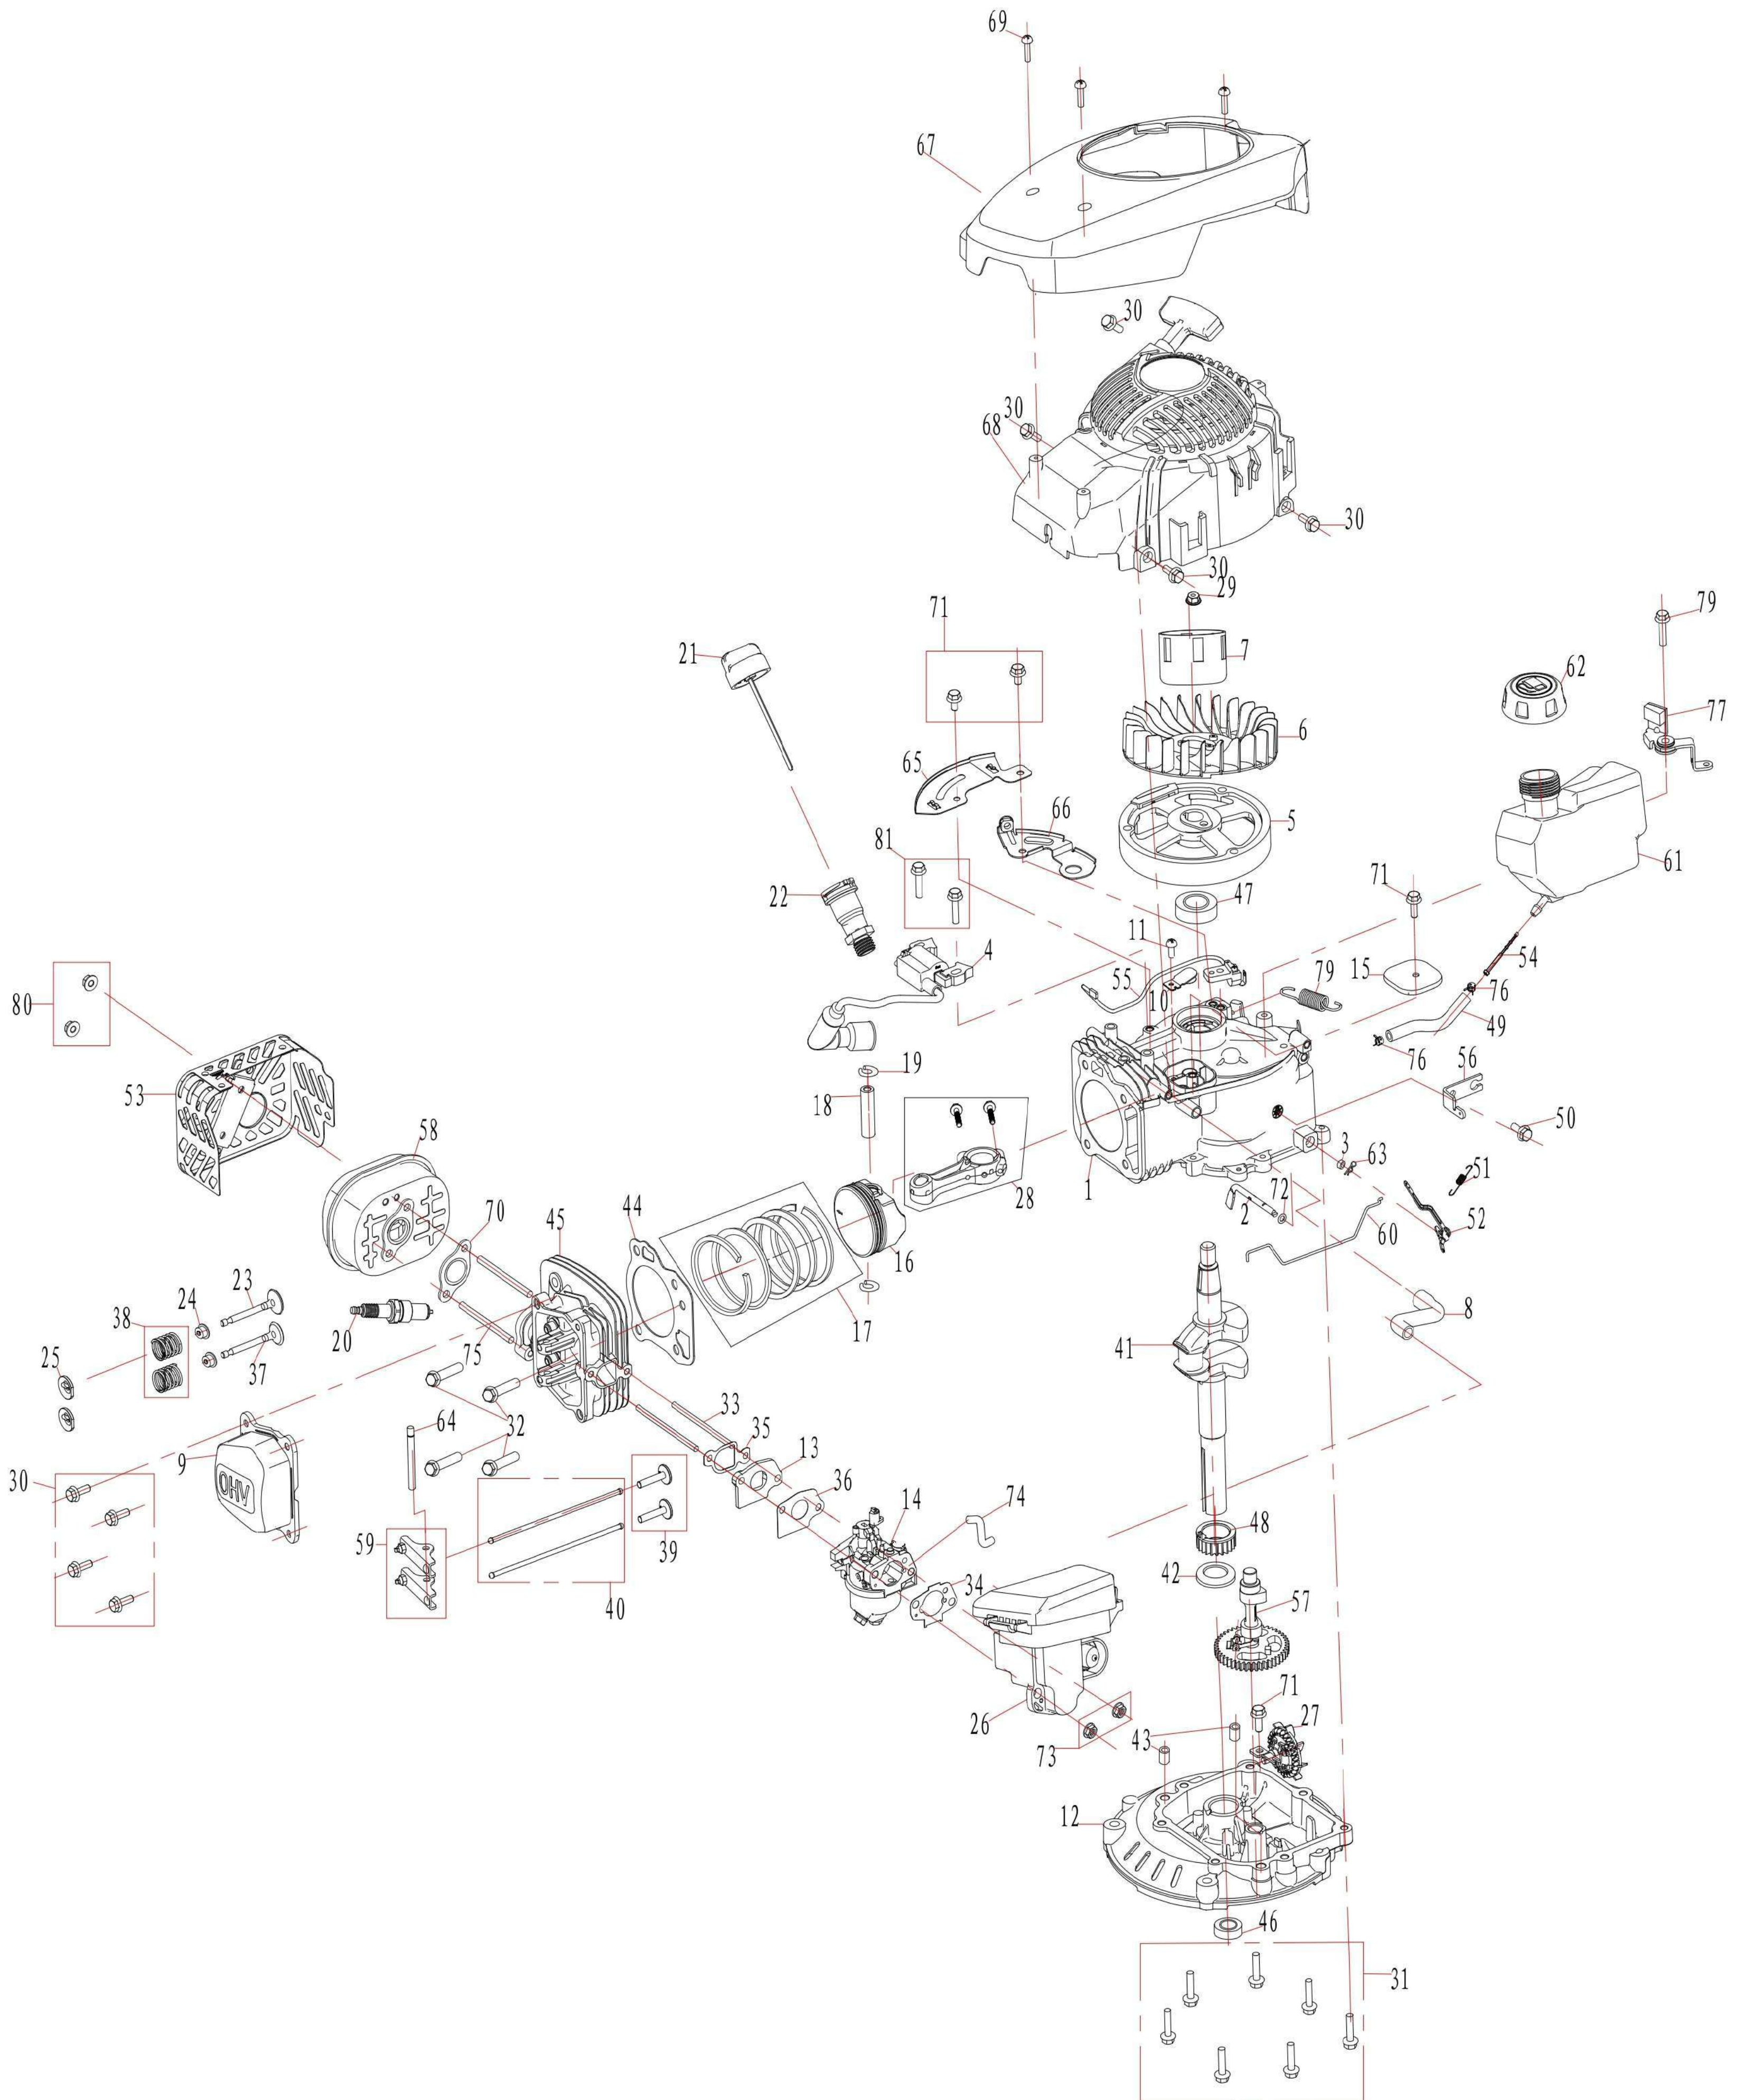

PART NO.	PART REFERENCE CODE	PART DESCRIPTION	QTY
1	DLM5100SP/P1/01/SP.....	THE CRANKSHAFT BOX BODY.....	1
2	DLM5100SP/P1/02/SP.....	SWINGING ROD.....	1
3	DLM5100SP/P1/03/SP.....	PENDULUM STEM SEAL.....	1
4	DLM5100SP/P1/04/SP.....	IGNITER.....	1
5	DLM5100SP/P1/05/SP.....	THE FLYWHEEL COMPONENTS.....	1
6	DLM5100SP/P1/06/SP.....	FAN, RECOIL STARTER.....	1
7	DLM5100SP/P1/07/SP.....	PULLEY, STARTER.....	1
8	DLM5100SP/P1/08/SP.....	EXHAUST PIPE.....	1
9	DLM5100SP/P1/09/SP.....	CYLINDER CRANIUM.....	1
10	DLM5100SP/P1/10/SP.....	PLATE, BREATHER.....	1
11	DLM5100SP/P1/11/SP.....	BOLT M4*6.....	1
12	DLM5100SP/P1/12/SP.....	CRANKCASE COVER.....	1
13	DLM5100SP/P1/13/SP.....	CARBURETOR CONNECTION BLOCK.....	1
14	DLM5100SP/P1/14/SP.....	CARBURETOR ASSEMBLY.....	1
15	DLM5100SP/P1/15/SP.....	BACK OF THE OIL CHAMBER.....	1
16	DLM5100SP/P1/16/SP.....	THE PISTON.....	1
17	DLM5100SP/P1/17/SP.....	PISTON RING ASSEMBLY.....	1
18	DLM5100SP/P1/18/SP.....	THE PISTON PIN.....	1
19	DLM5100SP/P1/19/SP.....	PISTON PIN RETAINER.....	2
20	DLM5100SP/P1/20/SP.....	THE SPARK PLUG.....	1
21	DLM5100SP/P1/21/SP.....	OIL GAUGE ASSEMBLY.....	1
22	DLM5100SP/P1/22/SP.....	EXTENSION, OIL FILLER.....	1
23	DLM5100SP/P1/23/SP.....	INLET VALVE.....	1
24	DLM5100SP/P1/24/SP.....	VALVE OIL SEAL	2
25	DLM5100SP/P1/25/SP.....	INLET VALVE SPRING SEAT.....	2
26	DLM5100SP/P1/26/SP.....	AIR FILTER ELEMENT.....	1
27	DLM5100SP/P1/27/SP.....	CENTRIFUGAL GOVERNOR GEAR ASSEMBLY.....	1
28	DLM5100SP/P1/28/SP.....	CONNECTING ROD COMPONENT.....	1
29	DLM5100SP/P1/29/SP.....	NUT M12*1.25.....	1
30	DLM5100SP/P1/30/SP.....	BOLT M6X16.....	8
31	DLM5100SP/P1/31/SP.....	BOLT M6X25.....	7
32	DLM5100SP/P1/32/SP.....	BOLT M8X45.....	4
33	DLM5100SP/P1/33/SP.....	STUD M6X92.....	2
34	DLM5100SP/P1/34/SP.....	AIR FILTER GASKET.....	1
35	DLM5100SP/P1/35/SP.....	INTAKE GASKET.....	1
36	DLM5100SP/P1/36/SP.....	CARBURETOR GASKET.....	1
37	DLM5100SP/P1/37/SP.....	THE EXHAUST VALVE.....	1
38	DLM5100SP/P1/38/SP.....	VALVE SPRINGS.....	2
39	DLM5100SP/P1/39/SP.....	THE VALVE LIFTER.....	2
40	DLM5100SP/P1/40/SP.....	THE VALVE PUSH ROD.....	2
41	DLM5100SP/P1/41/SP.....	THE CRANKSHAFT.....	1
42	DLM5100SP/P1/42/SP.....	FLAT WASHER.....	1
43	DLM5100SP/P1/43/SP.....	POSITIONING PIN OF CRANKCASE.....	2
44	DLM5100SP/P1/44/SP.....	GASKET, BREATHER.....	1
45	DLM5100SP/P1/45/SP.....	CYLINDER HEAD.....	1
46	DLM5100SP/P1/46/SP.....	THE CRANKSHAFT OIL SEAL.....	1
47	DLM5100SP/P1/47/SP.....	THE CRANKSHAFT OIL SEAL.....	1
48	DLM5100SP/P1/48/SP.....	CRANKSHAFT TIMING DRIVING GEAR.....	1
49	DLM5100SP/P1/49/SP.....	FUEL PIPE.....	1
50	DLM5100SP/P1/50/SP.....	BOLT M6*12.....	1
51	DLM5100SP/P1/51/SP.....	SPEED REGULATING SPRING B.....	1
52	DLM5100SP/P1/52/SP.....	CONTROL ARM.....	1
53	DLM5100SP/P1/53/SP.....	MUFFLER HOUSING.....	1
54	DLM5100SP/P1/54/SP.....	FILTER.....	1
55	DLM5100SP/P1/55/SP.....	FLAMEOUT WIRE.....	1
56	DLM5100SP/P1/56/SP.....	SPEED CONTROL CONTROLLER.....	1
57	DLM5100SP/P1/57/SP.....	CAMSHAFT ASSEMBLY.....	1
58	DLM5100SP/P1/58/SP.....	MUFFLER.....	1
59	DLM5100SP/P1/59/SP.....	ROCKER ARM.....	2
60	DLM5100SP/P1/60/SP.....	THE THROTTLE LEVER.....	1
61	DLM5100SP/P1/61/SP.....	THE FUEL TANK.....	1
62	DLM5100SP/P1/62/SP.....	THE CAP.....	1
63	DLM5100SP/P1/63/SP.....	CHECK BACK CLIP.....	1
64	DLM5100SP/P1/64/SP.....	PIN, ARM, ROCKER.....	1
65	DLM5100SP/P1/65/SP.....	WIND SHIELD, RH.....	1
66	DLM5100SP/P1/66/SP.....	WIND SHIELD, RH.....	1
67	DLM5100SP/P1/67/SP.....	IN THE HOOD.....	1
68	DLM5100SP/P1/68/SP.....	HOOD, FAN.....	1
69	DLM5100SP/P1/69/SP.....	BOLT M4.2*16.....	3
70	DLM5100SP/P1/70/SP.....	PACKING, EXHAUST.....	1
71	DLM5100SP/P1/71/SP.....	BOLT M6*10.....	4
72	DLM5100SP/P1/72/SP.....	FLAT WASHER.....	1
73	DLM5100SP/P1/73/SP.....	NUT M6.....	2
74	DLM5100SP/P1/74/SP.....	TUBE.....	1
75	DLM5100SP/P1/75/SP.....	STUD.....	2
76	DLM5100SP/P1/76/SP.....	FUEL PIPE CLAMP	2
77	DLM5100SP/P1/77/SP.....	THE BRAKE COMPONENTS.....	1
78	DLM5100SP/P1/78/SP.....	BRAKE SPRING.....	1
79	DLM5100SP/P1/79/SP.....	BOLT M6*22.....	1
80	DLM5100SP/P1/80/SP.....	NUT M6.....	2
81	DLM5100SP/P1/81/SP.....	BOLT M6*30.....	2

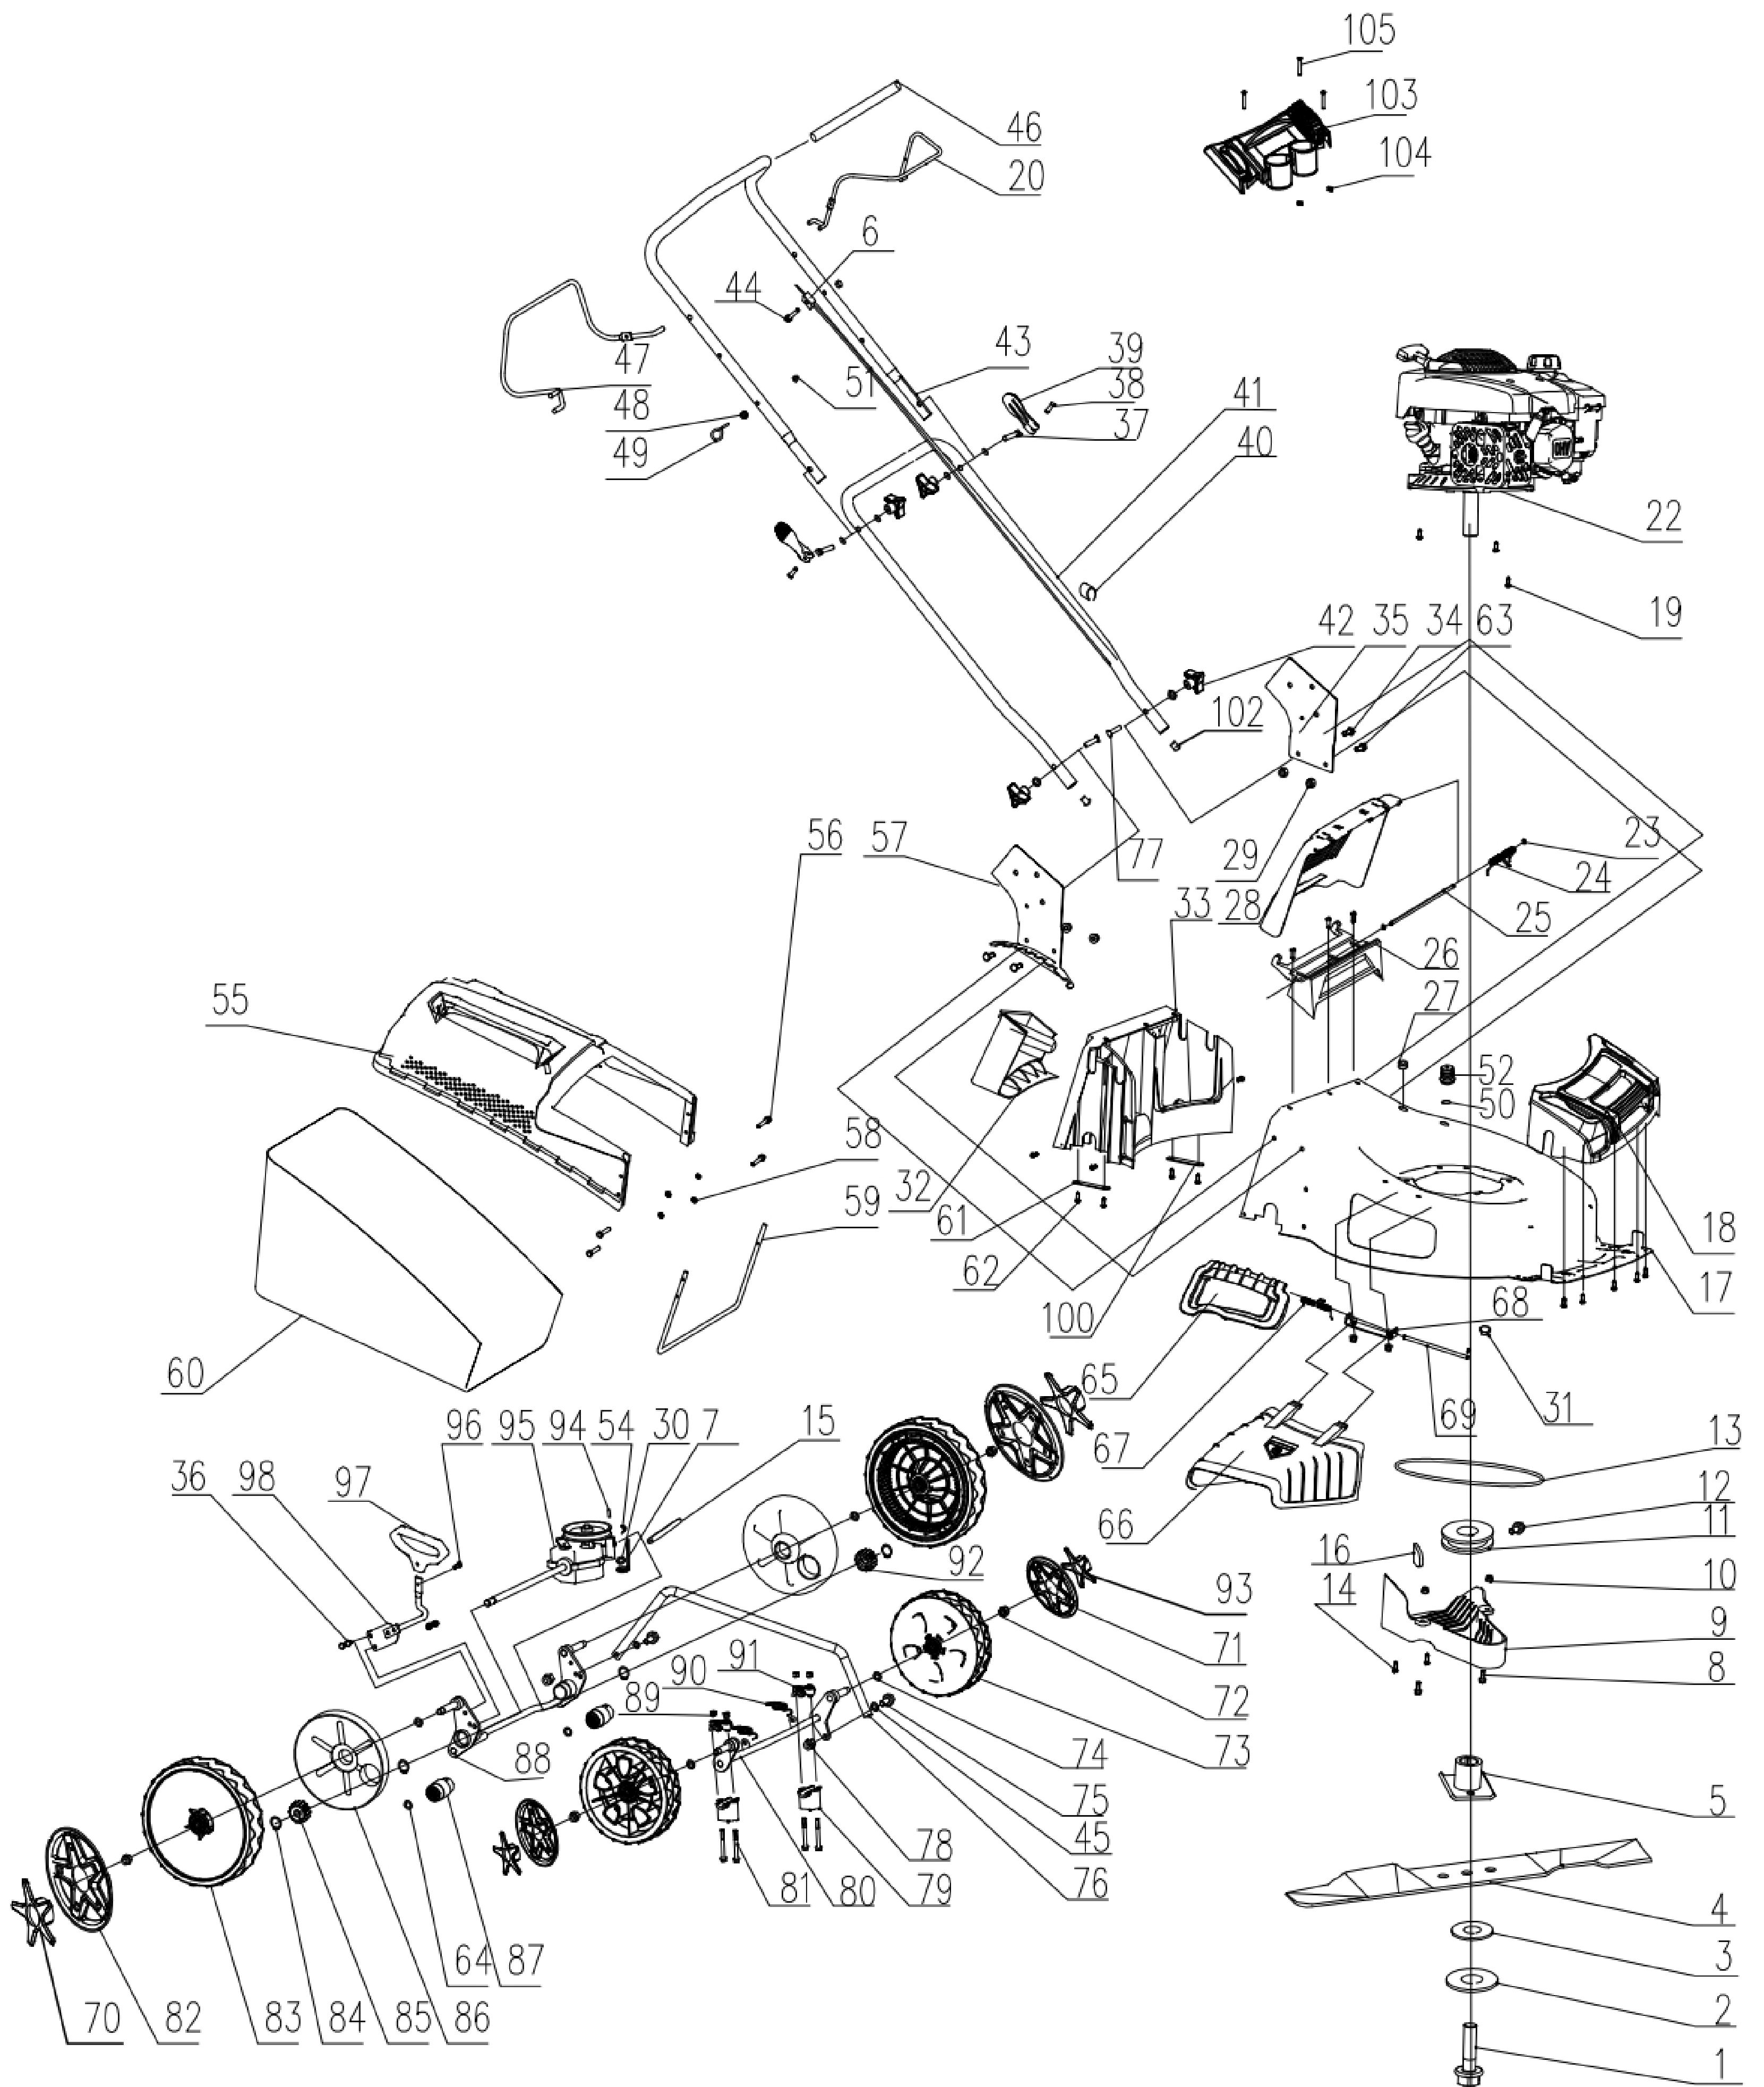

PART NO.	PART REFERENCE CODE	PART DESCRIPTION	QTY
1	DLM5100SP/P2/01/SP.....	BOLT.....	1
2	DLM5100SP/P2/02/SP.....	FLAT WASHER.....	1
3	DLM5100SP/P2/03/SP.....	WASHER.....	1
4	DLM5100SP/P2/04/SP.....	BLADE.....	1
5	DLM5100SP/P2/05/SP.....	BLADE ADAPTER.....	1
6	-.....	-.....	-
7	DLM5100SP/P2/07/SP.....	GEAR LEVER.....	1
8	DLM5100SP/P2/08/SP.....	BOLT M6×16.....	2
9	DLM5100SP/P2/09/SP.....	BELT COVER.....	1
10	DLM5100SP/P2/10/SP.....	BOLT M6.....	4
11	DLM5100SP/P2/11/SP.....	INITIATIVE PULLEY.....	1
12	DLM5100SP/P2/12/SP.....	BOLT M6×8.....	2
13	DLM5100SP/P2/13/SP.....	BELT.....	1
14	DLM5100SP/P2/14/SP.....	SCREW.....	15
15	DLM5100SP/P2/15/SP.....	THE METAL CLIP.....	1
16	DLM5100SP/P2/16/SP.....	WOODRUFF KEY.....	1
17	DLM5100SP/P2/17/SP.....	DECK.....	1
18	DLM5100SP/P2/18/SP.....	DECORATIVE COVER (FRONT).....	1
19	DLM5100SP/P2/19/SP.....	SCREW.....	3
20	DLM5100SP/P2/20/SP.....	BRAKE LEVEL.....	1
21	DLM5100SP/P2/21/SP.....	WASHER.....	6
22	DLM5100SP/P2/22/SP.....	ENGINE.....	1
23	DLM5100SP/P2/23/SP.....	CIRCLIP.....	3
24	DLM5100SP/P2/24/SP.....	TORSIONAL SPRING (REAR COVER).....	1
25	DLM5100SP/P2/25/SP.....	AXLE (REAR COVER).....	1
26	DLM5100SP/P2/26/SP.....	PLASTIC PART.....	1
27	DLM5100SP/P2/27/SP.....	CABLE PROTECTION PIPE.....	1
28	DLM5100SP/P2/28/SP.....	REAR COVER.....	1
29	DLM5100SP/P2/29/SP.....	NUT M8.....	5
30	DLM5100SP/P2/30/SP.....	WASHER.....	1
31	DLM5100SP/P2/31/SP.....	FLYWHEEL NUT.....	1
32	DLM5100SP/P2/32/SP.....	MULCHING PLUG.....	1
33	DLM5100SP/P2/33/SP.....	BACK PANEL.....	1
34	DLM5100SP/P2/34/SP.....	BOLT M8×20.....	3
35	DLM5100SP/P2/35/SP.....	LEFT HANDLE SUPPORT.....	1
36	DLM5100SP/P2/36/SP.....	BOLT M6X14.....	2
37	DLM5100SP/P2/37/SP.....	FIXED BOLT M8*68.....	2
38	DLM5100SP/P2/38/SP.....	FIXED PIN	2
39	DLM5100SP/P2/39/SP.....	HANDLE FAST FIX.....	2
40	DLM5100SP/P2/40/SP.....	CLIP.....	1
41	DLM5100SP/P2/41/SP.....	LOWER HANDLE.....	1
42	DLM5100SP/P2/42/SP.....	TRIANGLE KNOB.....	4
43	DLM5100SP/P2/43/SP.....	UPPER HANDLE.....	1
44	DLM5100SP/P2/44/SP.....	BOLT M6*35.....	1
45	DLM5100SP/P2/45/SP.....	WASHER.....	2
46	DLM5100SP/P2/46/SP.....	SOFT GRIP.....	1
47	DLM5100SP/P2/47/SP.....	CLUTCH LEVER	1
48	DLM5100SP/P2/48/SP.....	NUT M6.....	1
49	DLM5100SP/P2/49/SP.....	ROPE GUIDE SUPPORT.....	1
50	DLM5100SP/P2/50/SP.....	O-RINGS.....	1
51	DLM5100SP/P2/51/SP.....	NUT M6.....	2
52	DLM5100SP/P2/52/SP.....	WASH MOUTH.....	1
54	DLM5100SP/P2/54/SP.....	TENSION TENSION SPRING.....	1
55	DLM5100SP/P2/55/SP.....	LOWER COVER ASSEMBLY.....	1

PART NO.	PART REFERENCE CODE	PART DESCRIPTION	QTY
56	DLM5100SP/P2/56/SP.....	SCREW M5X22.....	4
57	DLM5100SP/P2/57/SP.....	RIGHT HANDLE SUPPORT.....	1
58	DLM5100SP/P2/58/SP.....	NUT M5	4
59	DLM5100SP/P2/59/SP.....	FRAME.....	1
60	DLM5100SP/P2/60/SP.....	INFERIOR PART.....	1
61	DLM5100SP/P2/61/SP.....	REAR AXLE PLANK.....	1
62	DLM5100SP/P2/62/SP.....	SCREW.....	8
63	DLM5100SP/P2/63/SP.....	BOLT M8×30.....	1
64	DLM5100SP/P2/64/SP.....	PLAIN WASHER.....	2
65	DLM5100SP/P2/65/SP.....	SIDE DISCHAGR COVER.....	1
66	DLM5100SP/P2/66/SP.....	SIDE DISCHARGE CHUTE.....	1
67	DLM5100SP/P2/67/SP.....	TORSIONAL SPRING	1
68	DLM5100SP/P2/68/SP.....	BRACKET (SIDE DISCHARGE COVER).....	1
69	DLM5100SP/P2/69/SP.....	AXLE (SIDE DISCHARGE COVER).....	1
70	DLM5100SP/P2/70/SP.....	WHEEL COVER.....	2
71	DLM5100SP/P2/71/SP.....	WHEEL COVER.....	2
72	DLM5100SP/P2/72/SP.....	NUT M10*1.5.....	4
73	DLM5100SP/P2/73/SP.....	FRONT WHEEL.....	2
74	DLM5100SP/P2/74/SP.....	WASHER.....	4
75	DLM5100SP/P2/75/SP.....	FIXED BOLT.....	2
76	DLM5100SP/P2/76/SP.....	HEIGHT ADJUSTMENT LINK BAR.....	1
77	DLM5100SP/P2/77/SP.....	BOLT M8*45.....	2
78	DLM5100SP/P2/78/SP.....	NUT M6.....	4
79	DLM5100SP/P2/79/SP.....	HOLD HOOP.....	2
80	DLM5100SP/P2/80/SP.....	FRONT WHEEL AXLE.....	1
81	DLM5100SP/P2/81/SP.....	BOLT M6×50.....	4
82	DLM5100SP/P2/82/SP.....	WHEEL COVER.....	2
83	DLM5100SP/P2/83/SP.....	REAR WHEEL.....	2
84	DLM5100SP/P2/84/SP.....	CIRCLIP.....	4
85	DLM5100SP/P2/85/SP.....	RIGHT GEAR ASSY.....	1
86	DLM5100SP/P2/86/SP.....	INNER WHEEL COVER.....	2
87	DLM5100SP/P2/87/SP.....	NYLON COLLAR.....	2
88	DLM5100SP/P2/88/SP.....	REAR WHEEL AXLE.....	1
89	DLM5100SP/P2/89/SP.....	BOLT M6.....	4
90	DLM5100SP/P2/90/SP.....	HEIGHT ADJUSTER SPRING.....	2
91	DLM5100SP/P2/91/SP.....	HOLD HOOP.....	2
92	DLM5100SP/P2/92/SP.....	LEFT GEAR ASSY.....	1
93	DLM5100SP/P2/93/SP.....	WHEEL COVER.....	2
94	DLM5100SP/P2/94/SP.....	GEAR PIN(TRANSMISSION).....	2
95	DLM5100SP/P2/95/SP.....	GEARBOX.....	1
96	DLM5100SP/P2/96/SP.....	SCREW.....	1
97	DLM5100SP/P2/97/SP.....	HEIGHT ADJUSTER COVER.....	1
98	DLM5100SP/P2/98/SP.....	HEIGHT-ADJUSTING HANDLE BAR ASSEMBLY.....	1
100	DLM5100SP/P2/100/SP.....	LEFT REAR AXLE PLANK.....	1
102	DLM5100SP/P2/102/SP.....	PUSH DOWN THE PLUG.....	2
103	DLM5100SP/P2/103/SP.....	PANEL.....	1
104	DLM5100SP/P2/104/SP.....	BUTTERFLY NUT M5.....	3
105	DLM5100SP/P2/105/SP.....	SCREW.....	3