



AGM LTM 108-22

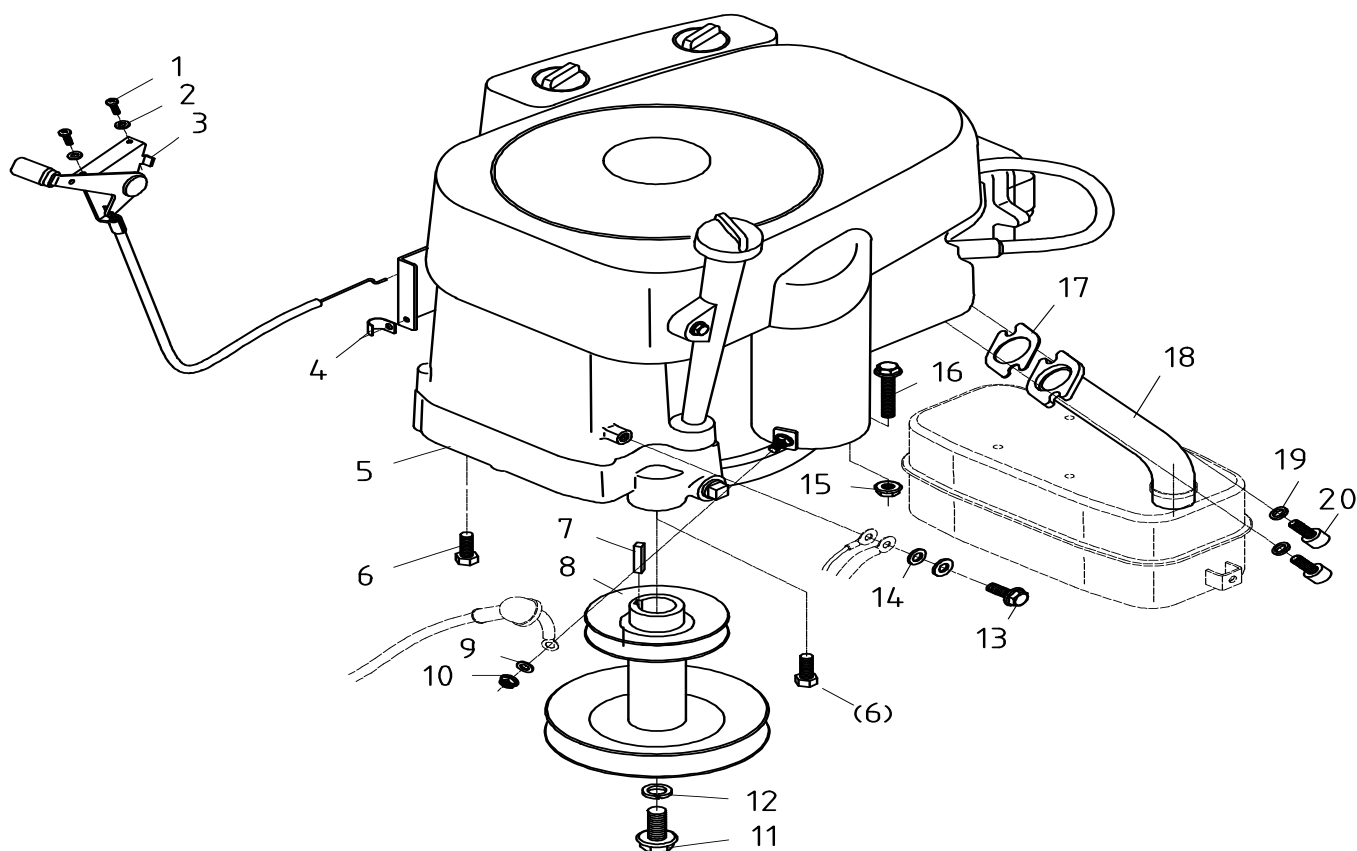

No	Code	Name	Qty	No	Code	Name	Qty
1		SCREW	2	13		SCREW	1
2		WASHER	2	14		WASHER	2
3	58666	THROTTLE CABLE	1	15		FLANGE LOCK NUT	1
4		CLIP	1	16		FLANGE BOLT	1
5	67922	ENGINE	1	17	58671	GASKET	1
6	58667	TAPPING SCREW	3	18	58672	EXHAUST PIPE	1
7	58668	FLAT KEY	1	19		SPRING WASHER	2
8	67923	STEP PULLEY	1				
9	58812	WASHER	1				
10		FLANGE LOCK NUT	1				
11	58670	BOLT	1				
12		SPRING WASHER	1				

Engine


AGM LTM 108-22

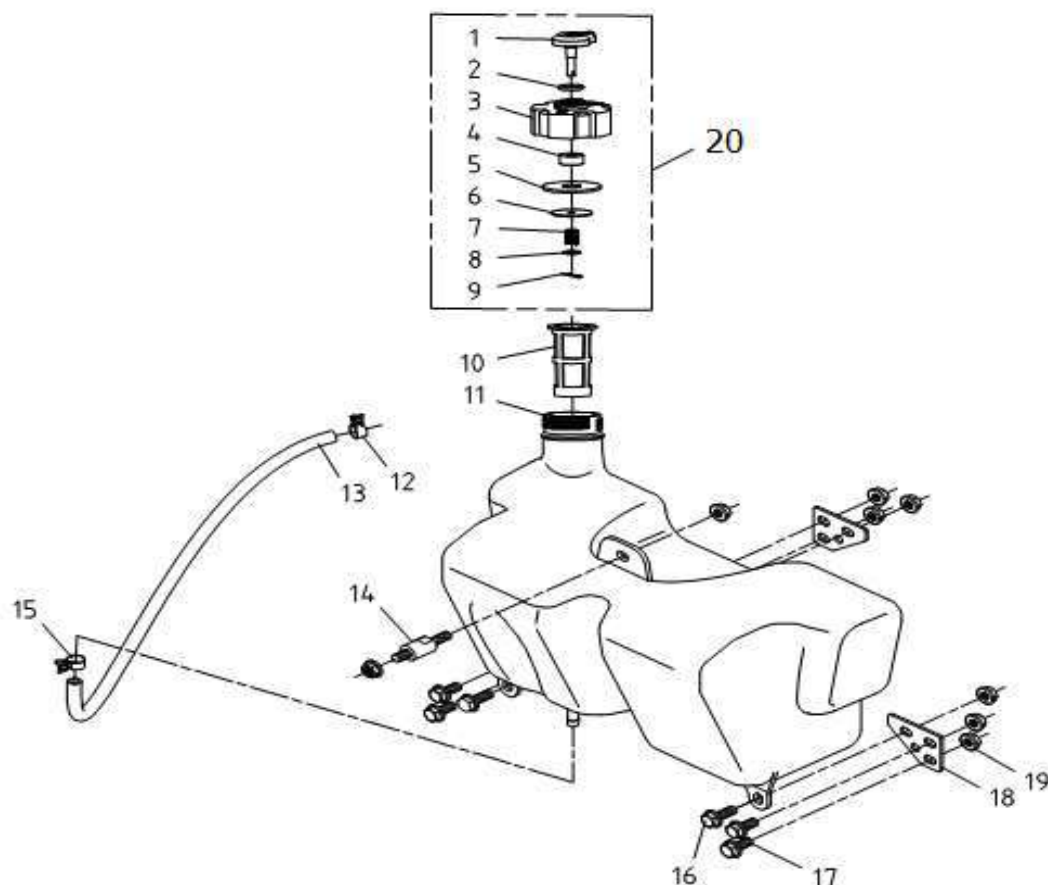

No	Code	Name	Qty	No	Code	Name	Qty
1		FUEL TANK CAP LEVER	1	13	67924	FUEL HOSE	1
2		O RING	1	14		FUEL TANK BOLT	1
3		FUEL TANK CAP	1	15		CLIP	1
4		FUEL TANK CAP FILTER	1	16		FLANGE BOLT	2
5		FUEL TANK CAP SEAL	1	17		BOLT	4
6		GASKET	1	18		FUEL TANK SUPPORT	2
7		FUEL TANK CAP SPRING	1	19		FLANGE LOCK NUT	8
8	58812	WASHER	1	20	67925	FUEL TANK CAP ASY	1
9		SPLIT PIN	1				
10	58673	FILTER CAP	1				
11	58674	FUEL TANK	1				
12	58675	CLIP	1				

Fuel Tank


AGM LTM 108-22

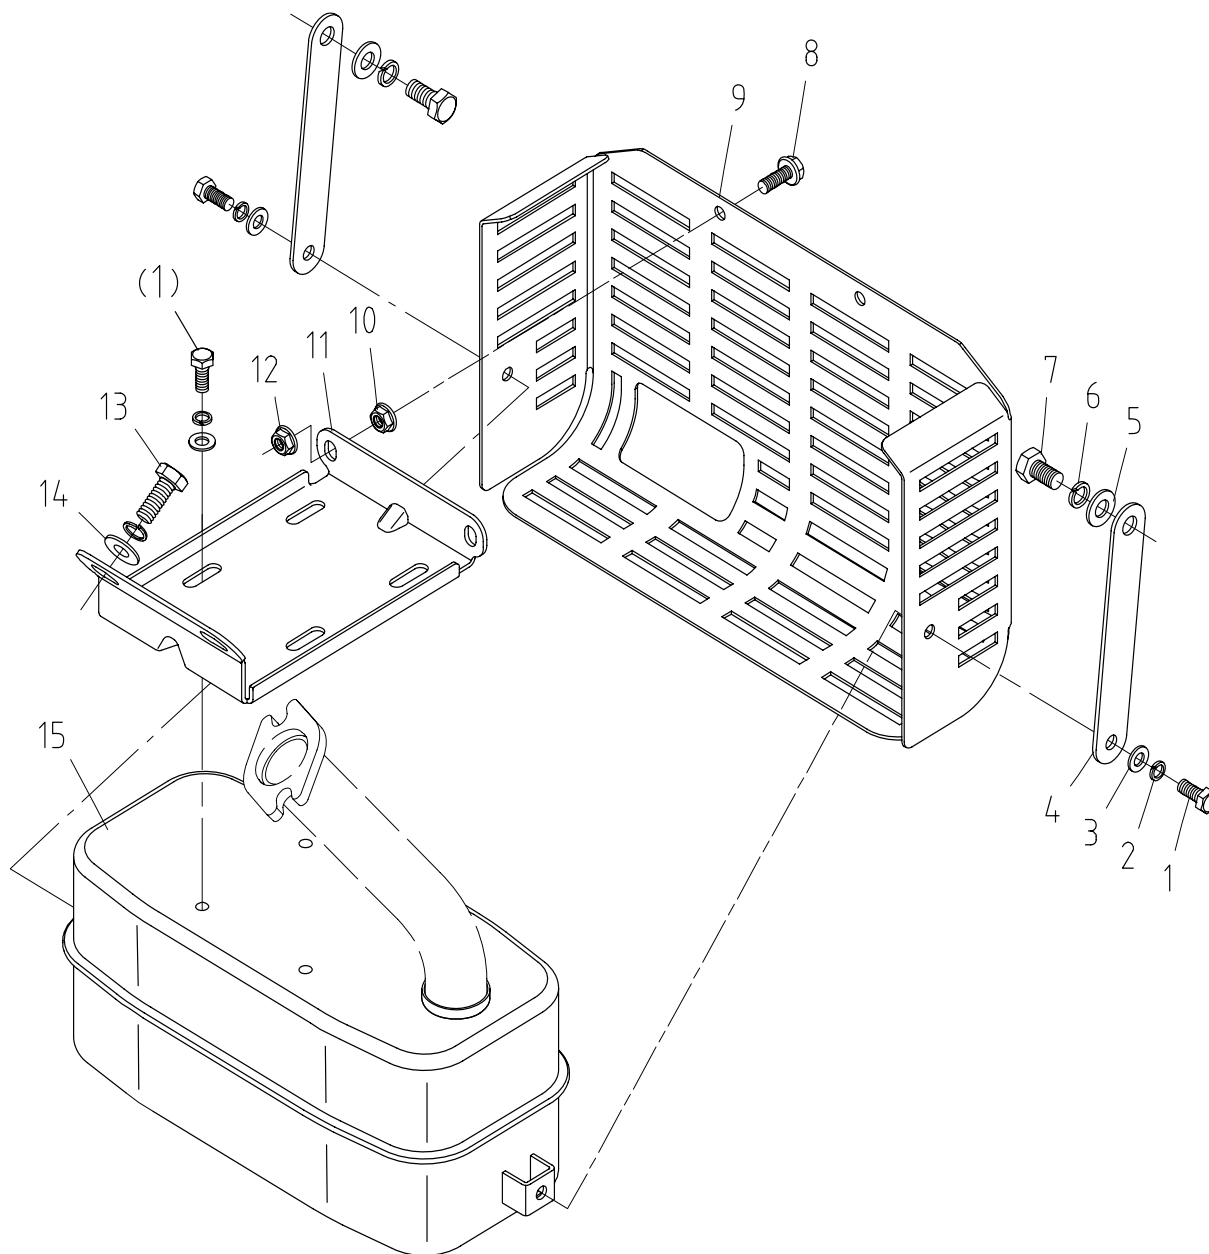

No	Code	Name	Qty	No	Code	Name	Qty
1		BOLT	6	13		FLANGE BOLT	2
2	14668	SPRING WASHER	6	14		BIG WASHER	2
3		BIG WASHER	6	15	58678	MUFFLE	1
4		MUFFLER ROD	2				
5	58812	WASHER	2				
6	14668	SPRING WASHER	4				
7		BOLT	2				
8		FLANGE BOLT	2				
9	58677	FRONT SHIELD	1				
10		FLANGE NUT	2				
11		BRACKET	1				
12		FLANGE LOCK NUT	2				

Muffler Shield


AGM LTM 108-22

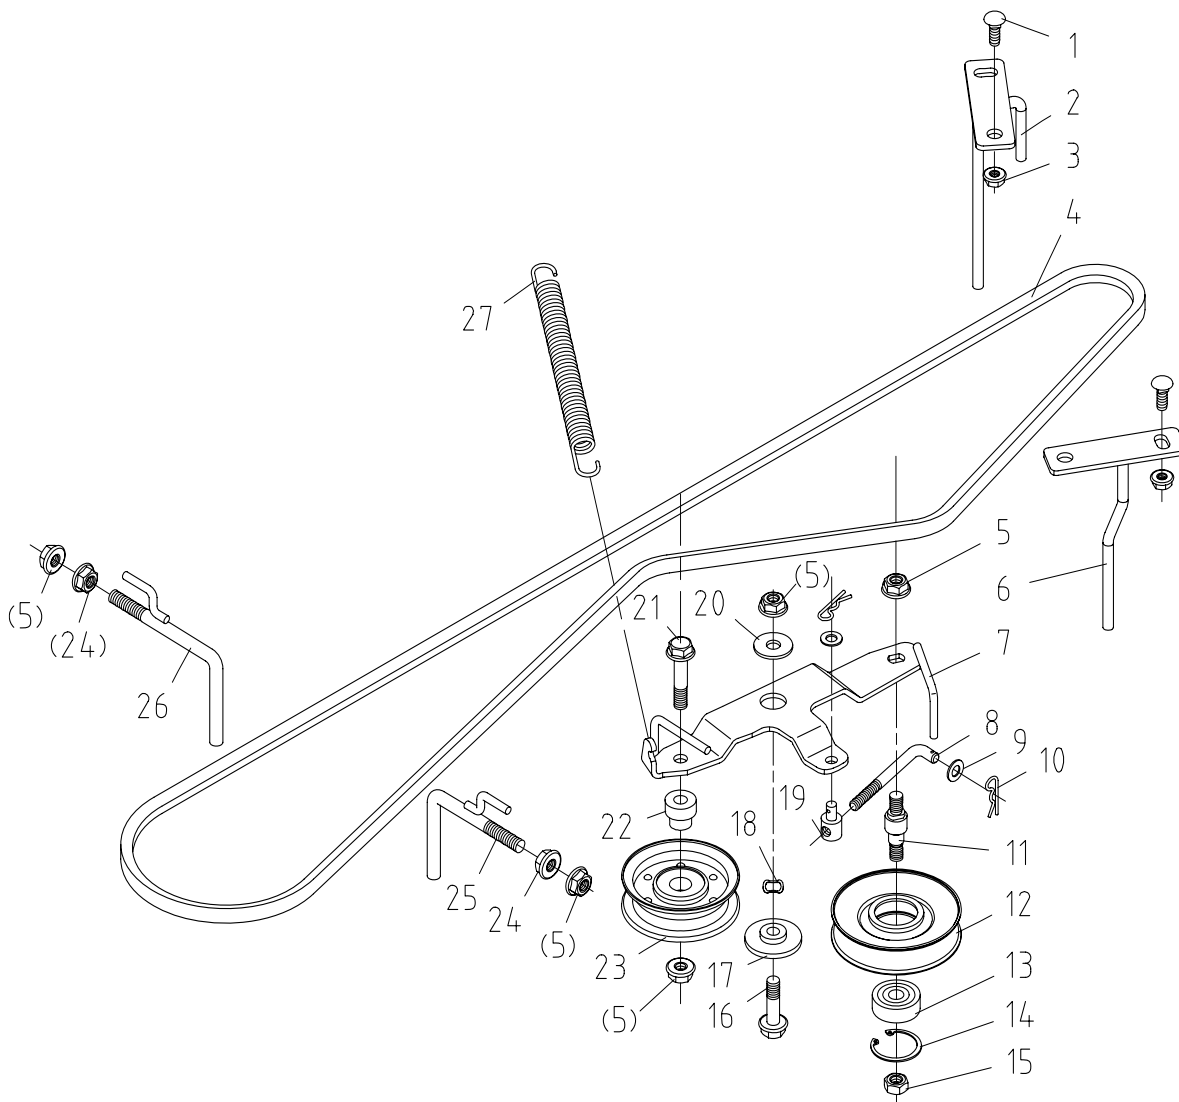

No	Code	Name	Qty	No	Code	Name	Qty
1		BOLT	4	18	56107	WASHER	1
2	58679	LEFT ROD	1	19	58688	GEAR SHIFT PIN	1
3		FLANGE LOCK NUT	4	20		BIG WASHER	1
4	67927	V BELT	1	21		FLANGE BOLT	1
5	58819	FLANGE LOCK NUT	5	22	58689	TENTION PULLEY BUSHING	1
6		RIGHT ROD	1	23	58690	TENTION PULLEY	1
7	58682	DRIVING TENTION ARM	1	24		FLANGE NUT	2
8	58683	CONNECTING ROD	1	25	58691	REAR ROD R	1
9	58812	WASHER	2	26	58692	REAR ROD L	1
10	74316	SPRING PIN	2	27	58693	SPRING	1
11	58684	TENTION PULLEY SHAFT	1				
12	58685	TENTION PULLEY	1				
13	58686	BEARING	1				
14		SNAP RING	1				
15	58737	LOCK NUT	1				
16		FLANGE BOLT	1				
17	58687	DRIVING TENTION ARM BUSHING	1				

Drive Clutch


AGM LTM 108-22

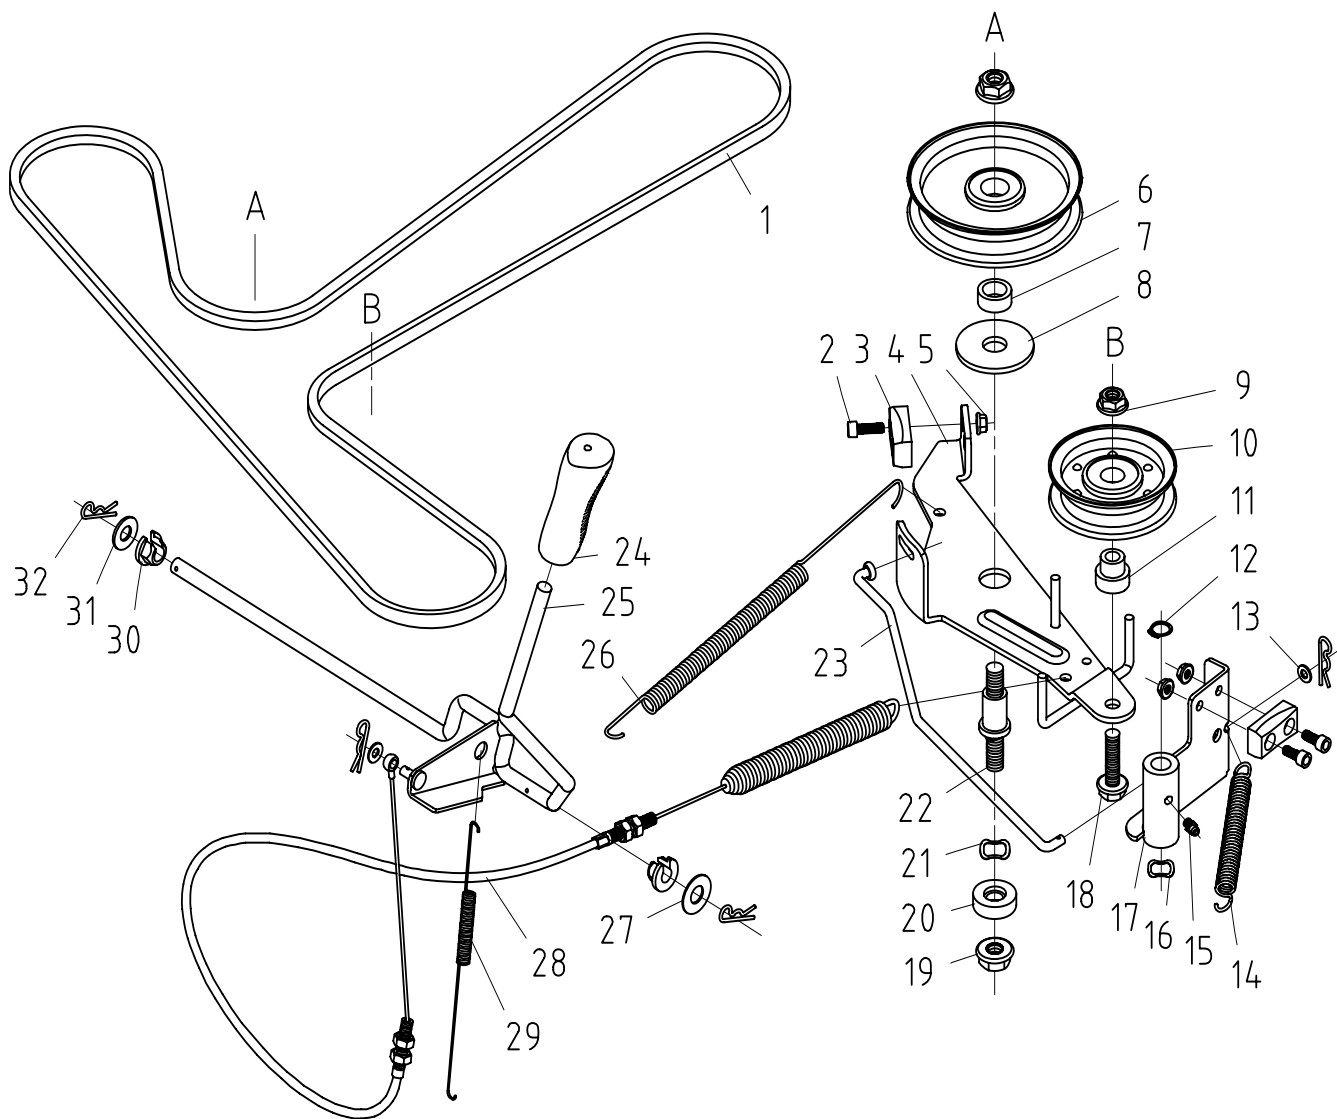

No	Code	Name	Qty	No	Code	Name	Qty
1	67927	V BELT	1	17	58703	BRAKE ARM R	1
2		SCREW	4	18		FLANGE BOLT	1
3	58695	BRAKE SHOE	2	19		FLANGE LOCK NUT	2
4	58696	CUTTING ARM	1	20	58704	BUSHING	1
5		FLANGE LOCK NUT	4	21	56107	WASHER	1
6	58697	IDLENESS PULLEY	1	22	58705	IDLENESS PULLEY SHAFT	1
7	58698	BUSHING	1	23	78796	CUTTING ROD R	1
8		WASHER	1	24	58707	HANDLE	1
9	58819	FLANGE LOCK NUT	1	25	58708	CLUTCH LEVER	1
10	58699	TENTION PULLEY	1	26	58709	BRAKE SPRING L	1
11	58700	TENTION PULLEY BUSHING	1	27		WASHER	1
12		SNAP RING	1	28	58710	CUT DRIVE CABLE	1
13	58812	WASHER	2	29	58711	CLUTCH LEVER SPRING	1
14	58701	BRAKE SPRING R	1	30	58712	HATCH BUSHING	2
15	58702	OIL INJECTION NOZZLE	1	31		WASHER	2
16		WASHER	1	32	74316	SPRING PIN	4

Cutting Clutch


AGM LTM 108-22

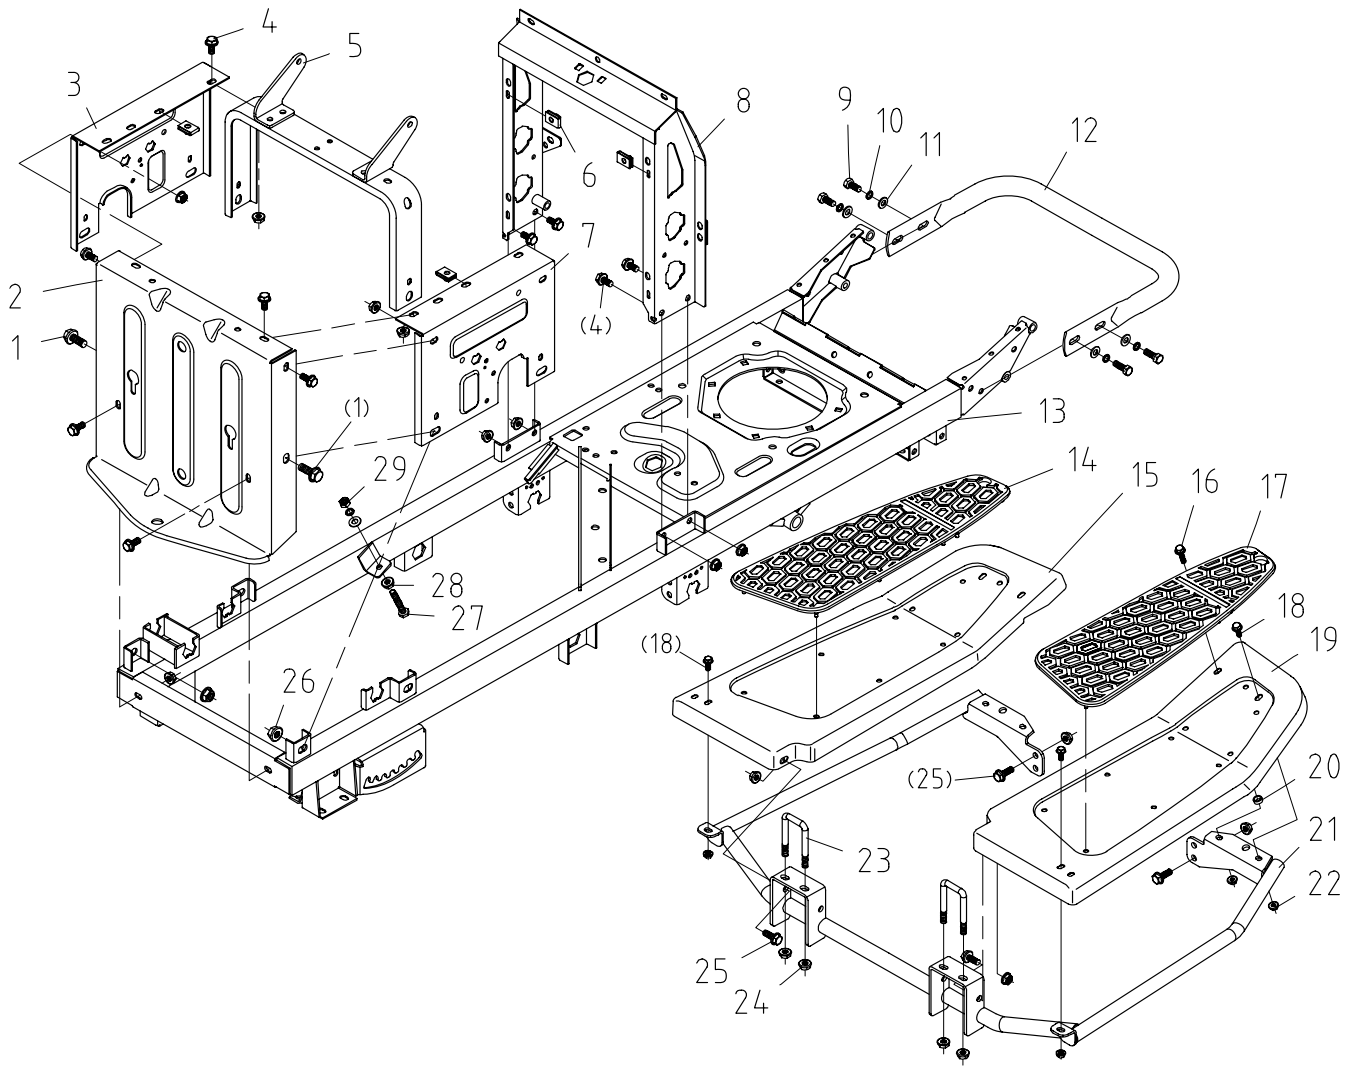

No	Code	Name	Qty	No	Code	Name	Qty
1		FLANGE BOLT	2	15		FOOT BOARD L	1
2		REAR BRACKET	1	16		FLANGE BOLT	2
3		LEFT BRACKET	1	17	76651	MAT R	1
4	58815	FLANGE BOLT	12	18		FLANGE BOLT	4
5		SEAT BRACKET	1	19		FOOT BOARD R	1
6		BUCKLE NUT	8	20		BUSHING	2
7		RIGHT BRACKET	1	21		FOOT BRACKET	1
8		STEERING BRACKET	1	22		FLANGE LOCK NUT	6
9		BOLT	4	23		U BOLT	2
10	14668	SPRING WASHER	5	24		FLANGE LOCK NUT	22
11		BIG WASHER	5	25		FLANGE BOLT	6
12	58713	BUMPER	1	26	58819	FLANGE LOCK NUT	3
13		FRAME	1	27		BOLT	1
14	76650	MAT L	1	28		FLANGE NUT	1
15		FOOT BOARD L	1	29	58738	NUT	1

Frame


AGM LTM 108-22

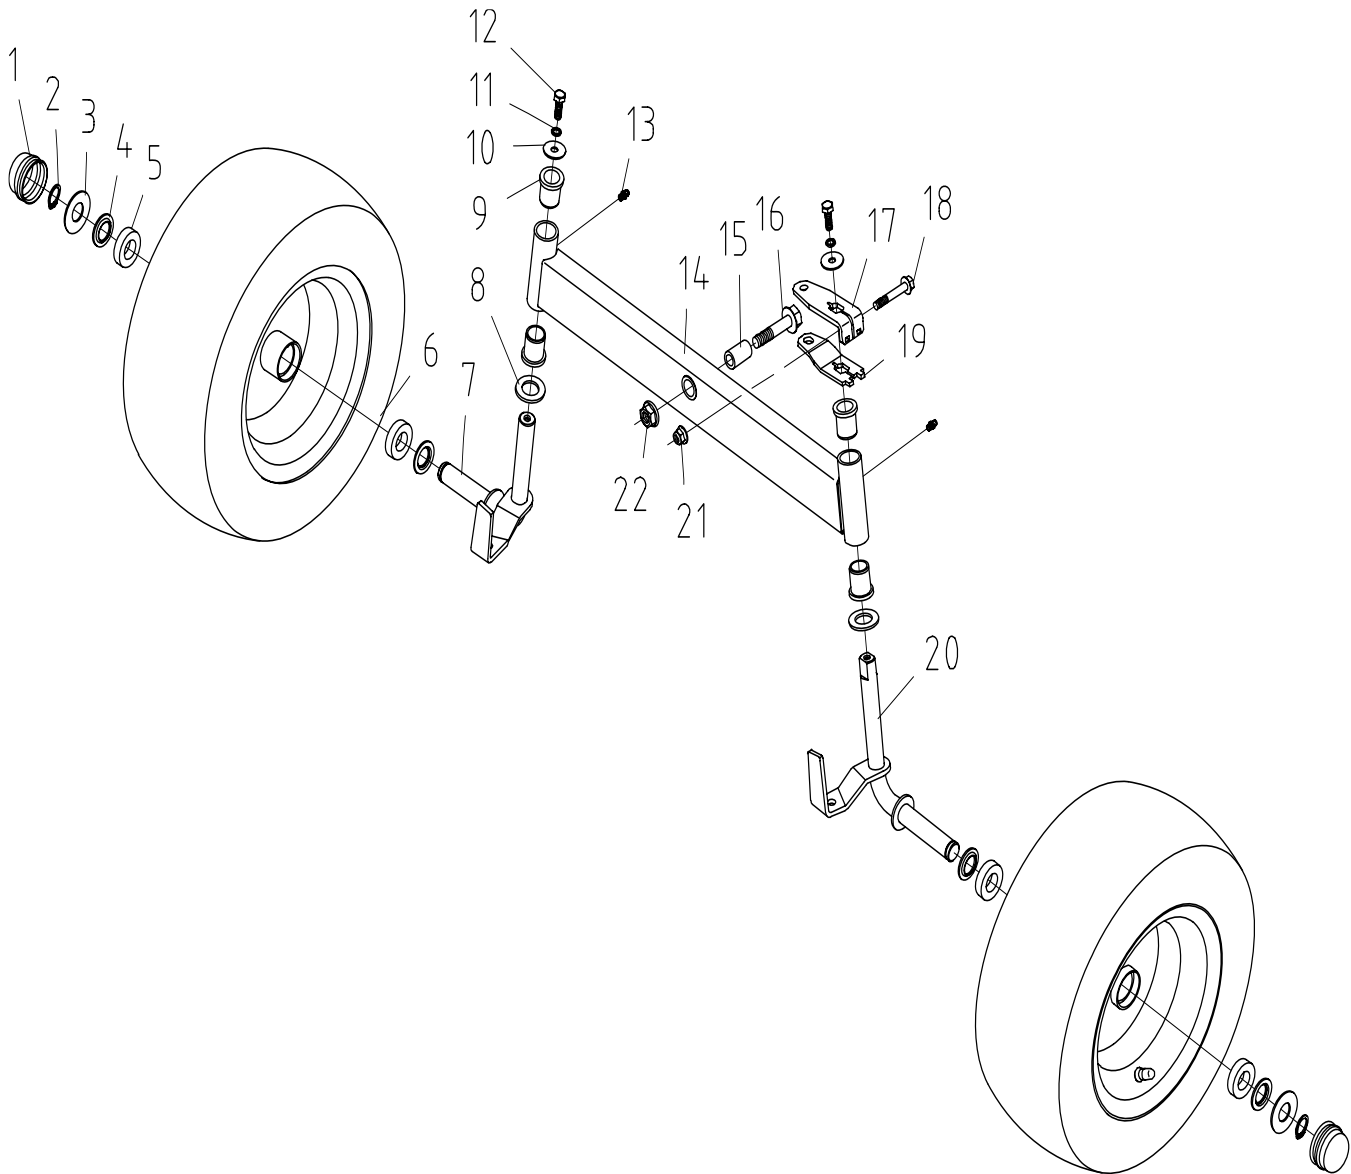

No	Code	Name	Qty	No	Code	Name	Qty
1	73423	HUB COVER	2	13	58722	OIL INJECTION NOZZLE	2
2		SNAP RING	2	14	58723	FRONG AXLE	1
3		WASHER	2	15	58724	LINER TUBE	1
4		WASHER	4	16		FLANGE BOLT	1
5		BEARING	4	17	58725	TURNNG ARM	1
6	58719	FRONT WHEEL ASSEMBLY	2	18		FLANGE BOLT	1
7	58720	LEFT STUB AXLE	1	19	58726	TURNING ARM	1
8		WASHER	2	20	58727	RIGHT STUB AXLE	1
9	58721	BUSHING	4	21		FLANGE LOCK NUT	1
10		WASHER	2	22		FLANGE LOCK NUT	1
11		SPRING WASHER	2				
12		BOLT	2				

Front Bridge

AGM LTM 108-22

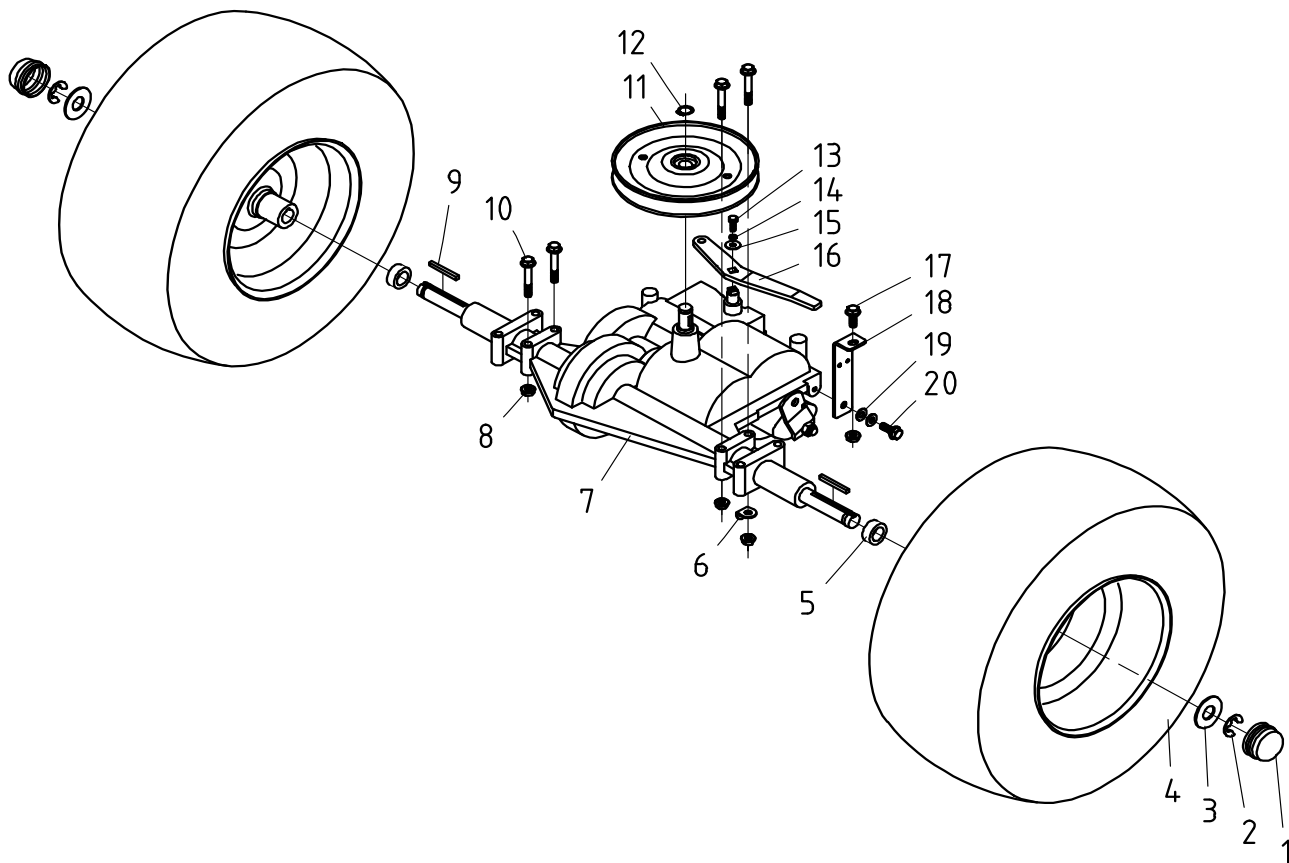

No	Code	Name	Qty	No	Code	Name	Qty
1	58714	HUB COVER	2	13		BOLT	1
2		RETAINER RING	2	14		SPRING WASHER	1
3		WASHER	4	15		BIG WASHER	1
4	58731	REAR WHEEL ASSEMBLY	2	16	72954	GEAR SHIFT ARM	1
5		BUSHING	2	17		FLANGE BOLT	1
6		PLATE	1	18		CONNECTING PLATE	1
7	67928	GEAR BOX	1	19		WASHER	2
8		FLANGE LOCK NUT	5	20		SCREW	2
9	58733	FLAT KEY	2				
10		FLANGE BOLT	4				
11	58734	DRIVING PASSIVE WHEEL	1				
12		SNAP RING	1				


Rear Bridge



EXPLODED PARTS LIST

Page(s): 9/19

AGM LTM 108-22

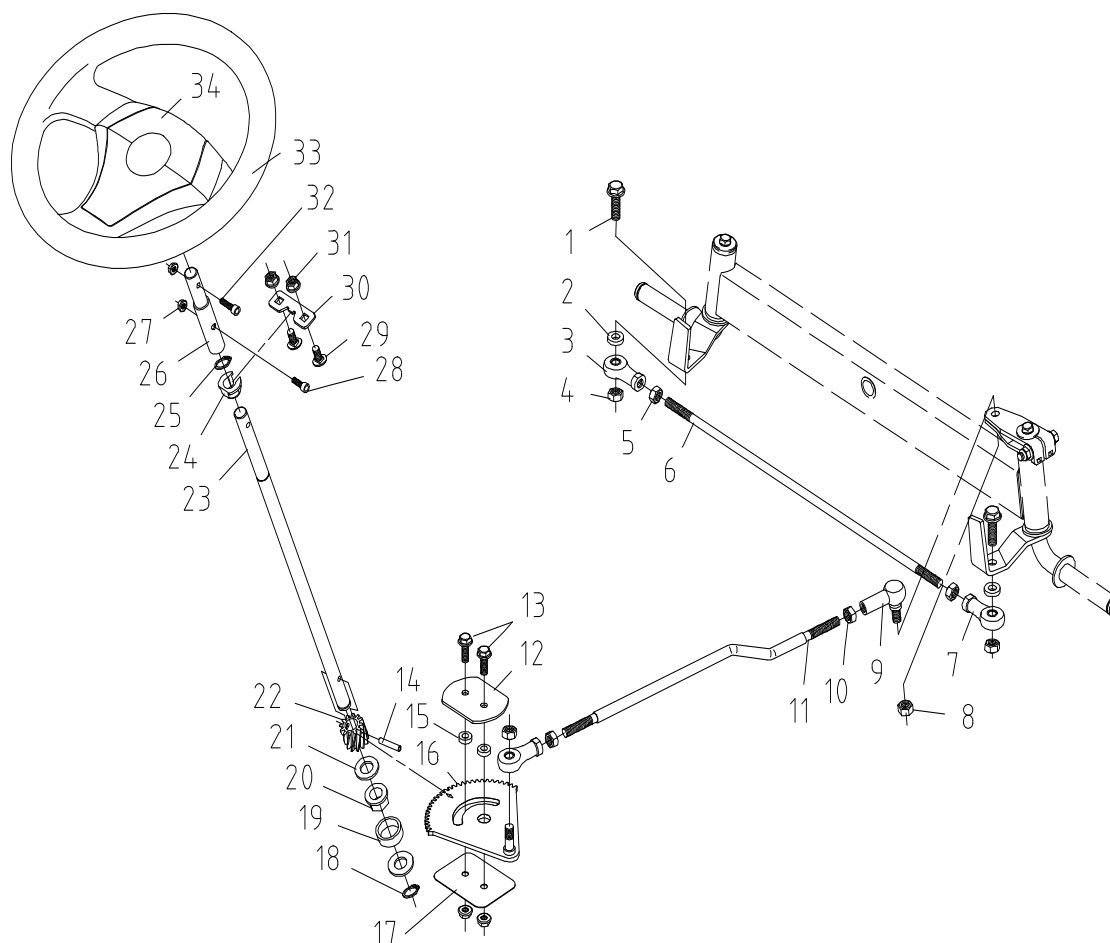

No	Code	Name	Qty	No	Code	Name	Qty
1		FLANGE BOLT	2	19	58747	BUSHING	1
2		WASHER	2	20	58782	HEXAGON BUSHING	1
3	58736	JOINT BEARING	1	21		WASHER	1
4		LUCK NUT	3	22	58749	GEAR	2
5		NUT	1	23	58750	STEERING SHAFT	1
6	58739	PULL ROD	1	24	58765	HATCH BUSHING	1
7	58740	JOINT BEARING	2	25		SNAP RING	1
8		LOCK NUT	1	26	58752	STEERING CONNECT SHAFT	1
9		JOINT BEARING	1	27		FLANGE LOCK NUT	1
10		NUT	3	28		SCREW	2
11	58743	LINK ROD	1	29		SCREW	1
12		DOUBLE HOLE BOARD	1	30		SQUARE HOLE BOARD	2
13		FLANGE BOLT	2	31		FLANGE LOCK NUT	1
14	58745	PIN	1	32		SCREW	4
16	67929	STEERING SECTOR GEAR	2	33	58753	STEERING WHEEL	1
17		TIE PLATE	1	34	58754	STEERING WHEEL CAP	1
18		SNAP RING	1				


Steering



EXPLODED PARTS LIST

Page(s): 10/19

AGM LTM 108-22

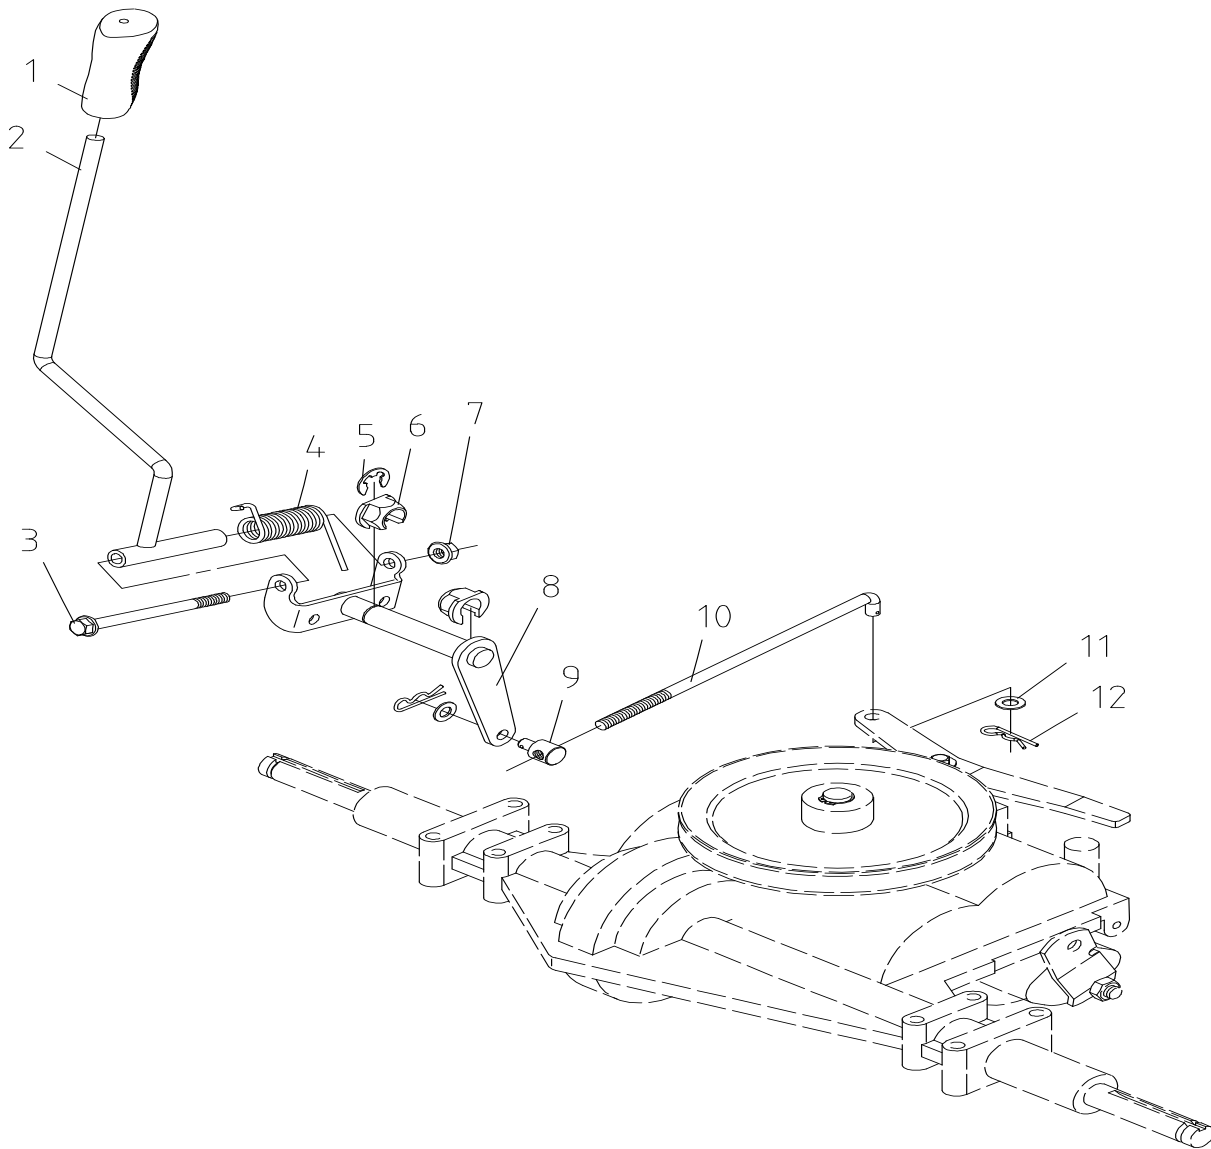

No	Code	Name	Qty	No	Code	Name	Qty
1	58707	HANDLE	1				
2	58756	SHIFT LEVER	1				
3		FLANGE BOLT	1				
4	58823	TORSION SPRING	1				
5		RETAINER RING	1				
6	58788	HATCH BUSHING	2				
7		FLANGE LOCK NUT	1				
8	58759	SHIFT AXLE	1				
9	58688	GEAR SHIFT PIN	1				
10		SHIFT ROD	1				
11		WASHER	2				
12	74316	SPRING PIN	2				


Shift



EXPLODED PARTS LIST

Page(s): 11/19


AGM LTM 108-22

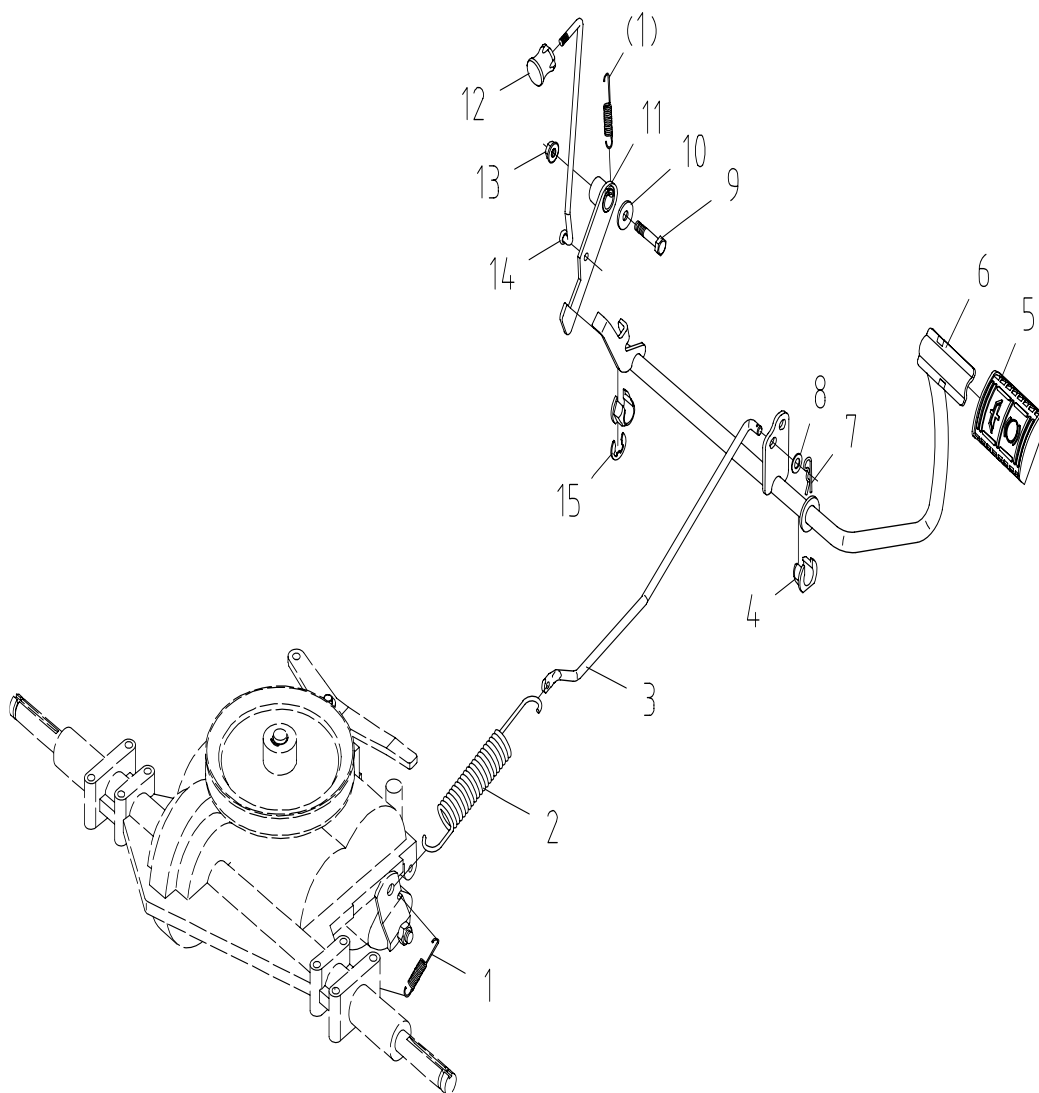

No	Code	Name	Qty	No	Code	Name	Qty
1	58762	BRAKE SHOE RETURN SPRING	2	13		FLANGE LOCK NUT	1
2	58763	BRAKE SPRING	1	14	58770	PARKING ROD	1
3	58764	BRAKE ROD	1	15		RETAINER RING	1
4	58765	HATCH BUSHING	2				
5	58766	PEDAL	1				
6	58767	BRAKE LEVER	1				
7	74316	SPRING PIN	1				
8		WASHER	1				
9		FLANGE BOLT	1				
10		BIG WASHER	1				
11	58768	PARKING HOOK	1				
12	58769	PARKING HANDLE	1				

Brake


AGM LTM 108-22

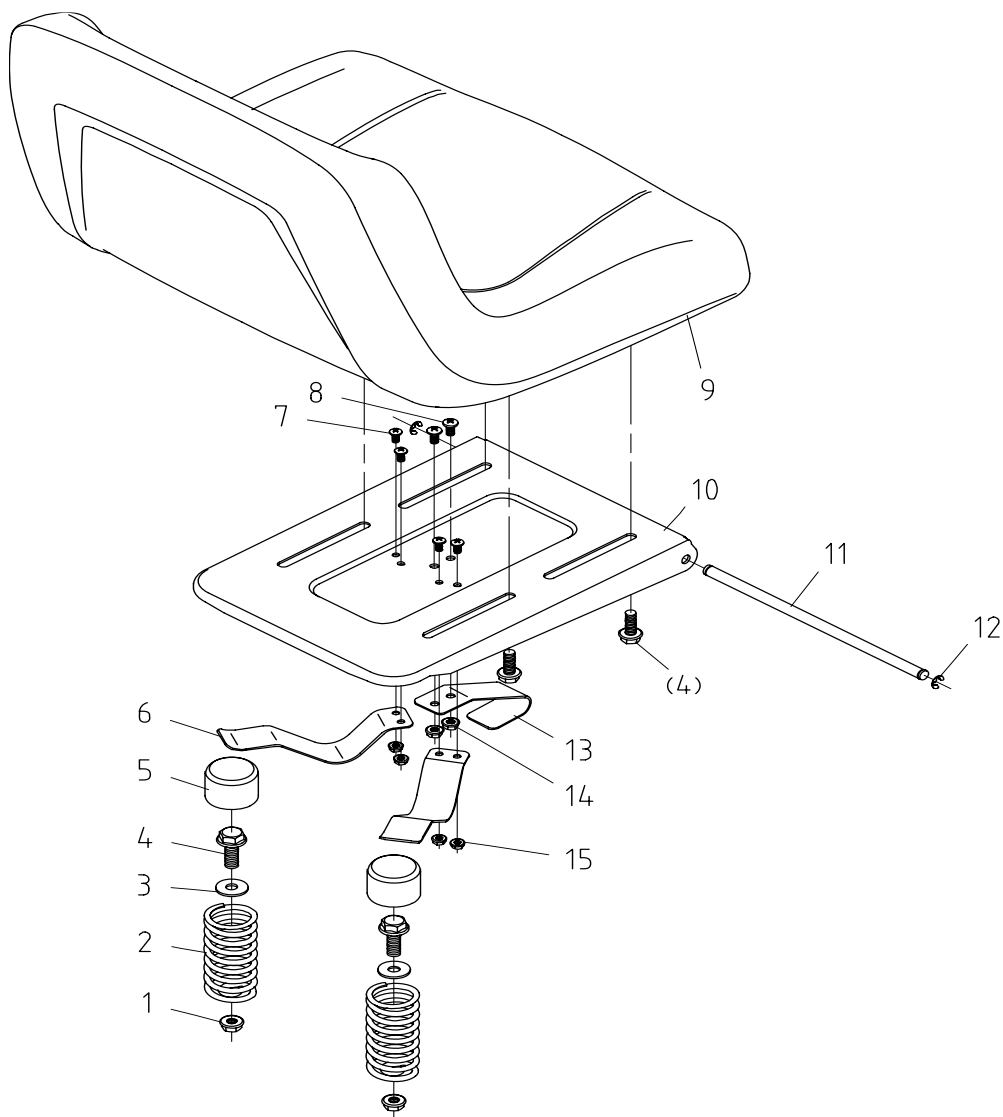

No	Code	Name	Qty	No	Code	Name	Qty
1		FLANGE LOCK NUT	2	13	58772	SEAT SWITCH CONTACT	1
2	67930	SEAT SPRING	2	14		FLANGE LOCK NUT	2
3		BIG WASHER	2	15		FLANGE LOCK NUT	4
4		FLANGE BOLT	6				
5	76652	SPRING CAP	2				
6		SPRING FLAKE	2				
7		SCREW	4				
8		SCREW	2				
9	58771	SEAT	1				
10		SEAT BRACKET	1				
11		PIN	1				
12		RETAINER RING	2				

Seat


AGM LTM 108-22

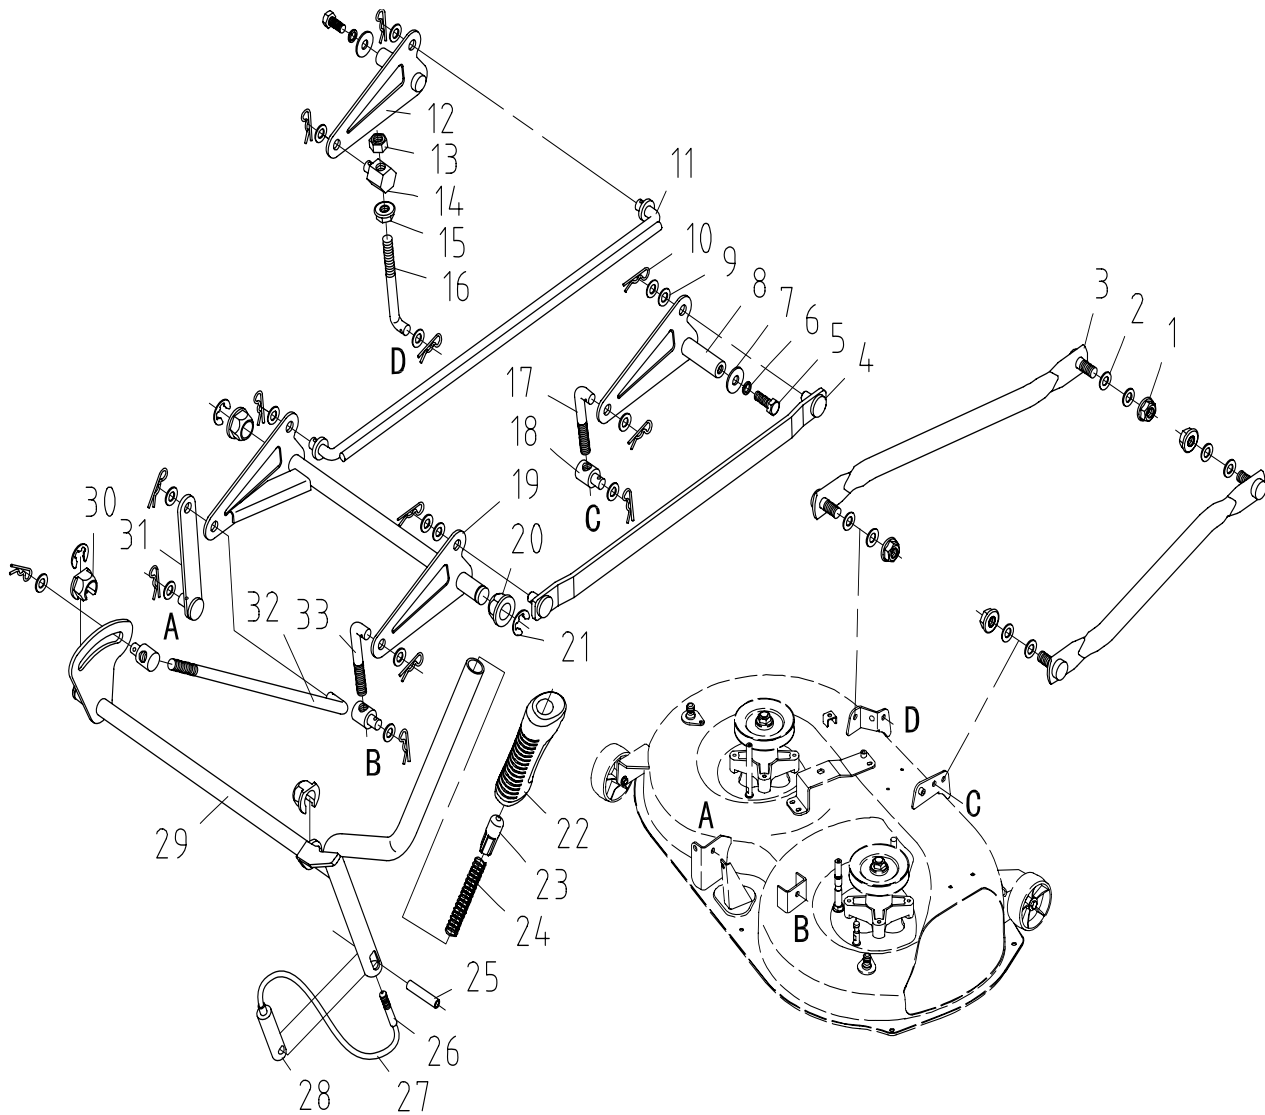

No	Code	Name	Qty	No	Code	Name	Qty
1		FLANGE LOCK NUT	4	18	58780	ADJUSTING PIN	1
2		WASHER	8	19	58781	REAR ARM	2
3	58773	FRONT ROD	2	20	58782	HEXAGON BUSHING	3
4	58774	PUSHING ROD R	1	21		RETAINER RING	1
5		BOLT	2	22	58783	LIFT HANDLE	1
6		SPRING WASHER	2	23	58784	BUTTON	1
7		BIG WASHER	2	24	58785	PUSHING SPRING	1
8	58775	FRONT ARM R	1	25	58745	SPRING PIN	1
9		WASHER	15	26		BOLT	1
10	74316	SPRING PIN	13	27	58786	SPRING ROD	1
11	58776	PUSHING ROD L	1	28	58787	PIN	1
12		FRONT ARM L	1	29		LEVER	2
13		LOCK NUT	1	30	58765	HATCH BUSHING	1
14	58777	ADJUSTING PIN	1	31	58789	ROD L	1
15		FLANGE NUT	1	32	58790	LIFT ROD	1
16	58778	ADJUSTING ROD FRONT L	1	33	58791	REAR ADJUSTING ROD	
17	58779	ADJUSTING ROD FRONT R	1				

Lift


AGM LTM 108-22

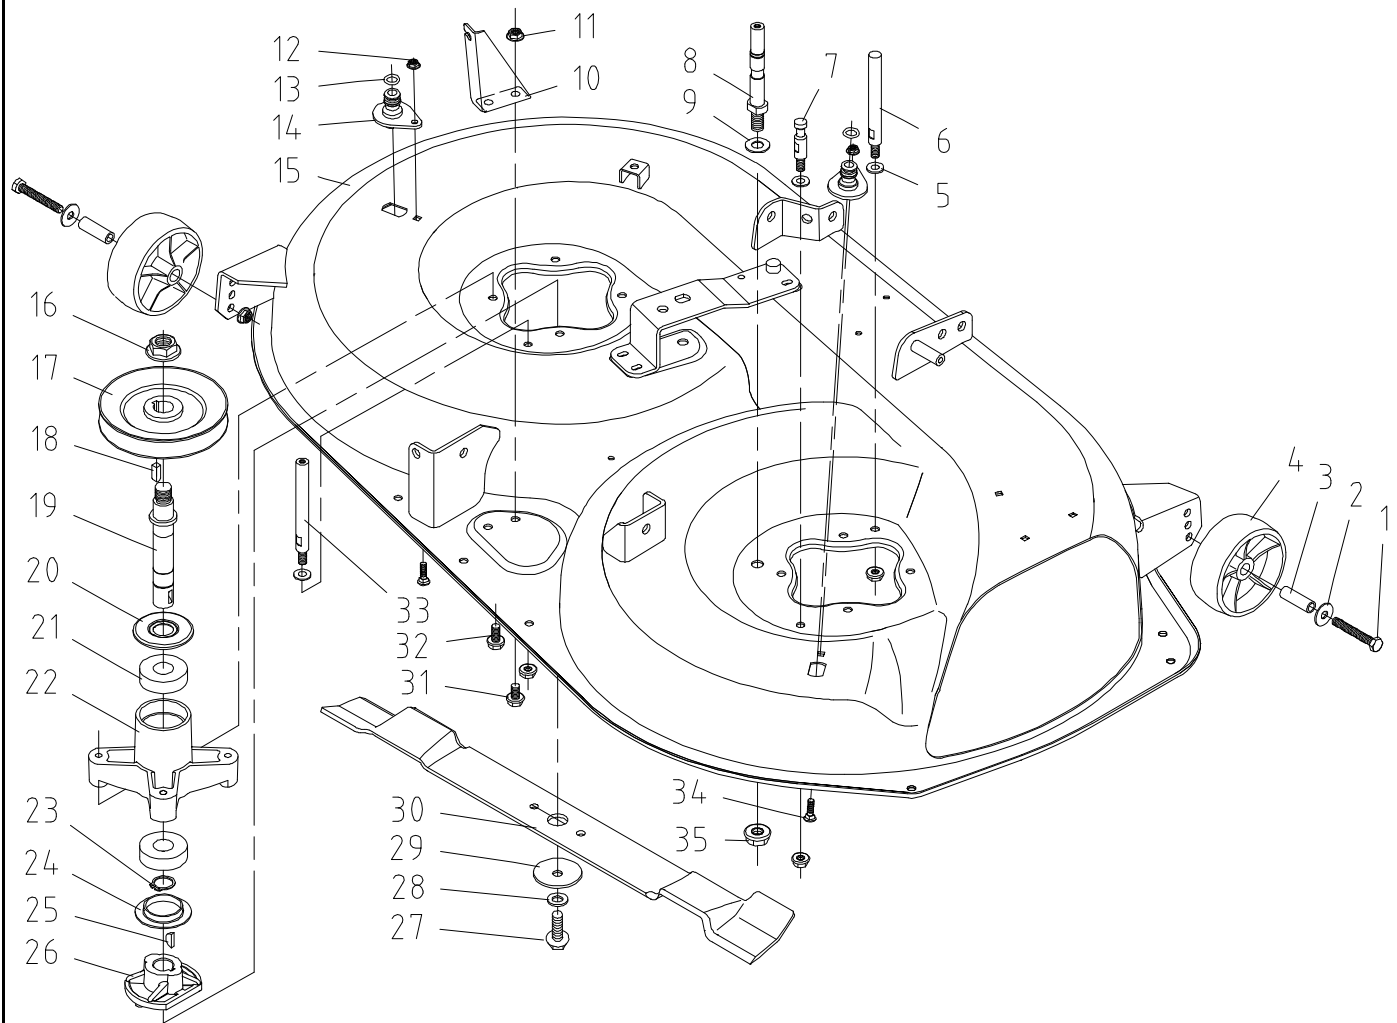

No	Code	Name	Qty	No	Code	Name	Qty
1	58792	FLANGE BOLT	2	20	58804	HOOD,BEARING	2
2		WASHER	2	21		BEARING	4
3	58793	PIVOT TUBE	2	22	58806	BLADE SEAT	2
4	58794	WHEEL	2	23		SNAP RING	2
5		WASHER	3	24	58808	HOOD,BEARING	2
6	58795	STUD	1	25	58809	HALFMOON KEY	2
7	58796	POST	1	26	58810	SLEEVE	2
8	58797	PIVOT FOR RIGHT BRAKE	1	27	58811	BOLT	2
9		WASHER	1	28		WASHER	2
10		CABLE BRACKET	1	29	58813	DISH WASHER	2
11		FLANGE LOCK NUT	7	30	66528	BLADE	2
12		FLANGE LOCK NUT	2	31		FLANGE BOLT	2
13		O RING	2	32		FLANGE BOLT	8
14	58798	WATER NOZZLE	2	33	58817	STUD SCREW	1
15	67931	DECK	1	34		SCREW	2
16	58800	NUT FOR BLADE AXLE	2	35		FLANGE LOCK NUT	1
17	58801	PULLEY	2				
18	58802	FLAT KEY	2				
19	58803	BLADE SPINDLE	2				

Deck


AGM LTM 108-22

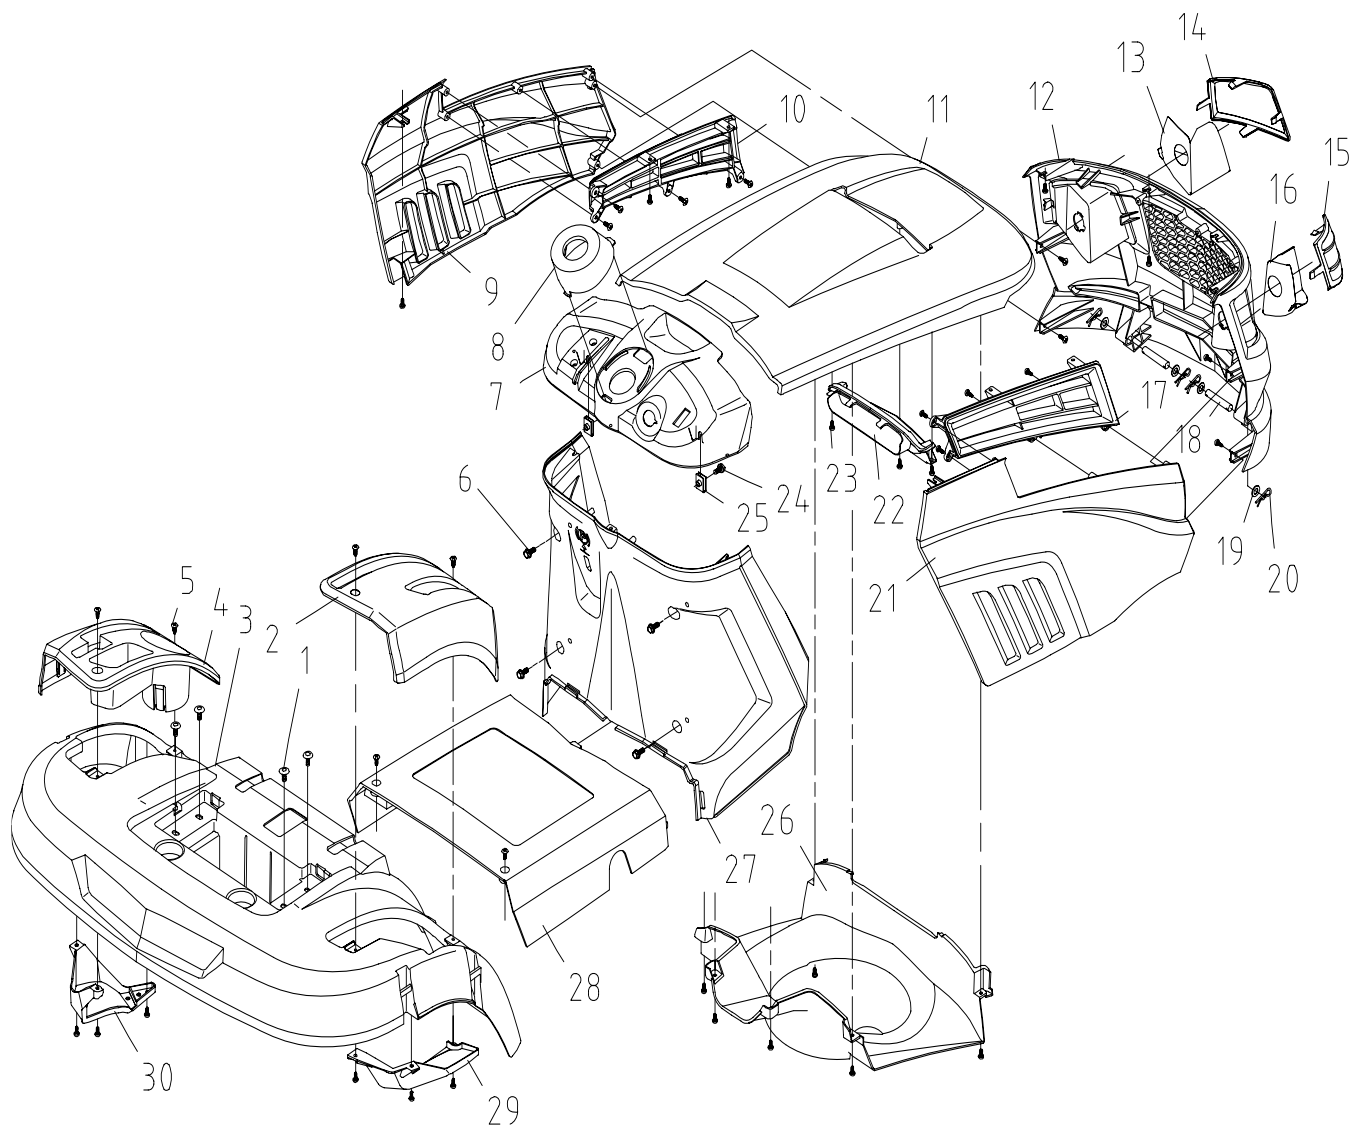

No	Code	Name	Qty	No	Code	Name	Qty
1		SCREW	4	17	67938	RIGHT WINDOW	1
2		LIFT COVER	1	18		PIN	2
3		REAR COVER	1	19		WASHER	4
4	67934	SHIFT COVER	1	20	74316	SPRING PIN	4
5		SCREW	45	21		RIGHT COVER	1
6		FLANGE	4	22		AIR INPUT OPENING	1
7		METER FACE	1	23	51902	SCREW	5
8	58820	STEERING SHAFT CAP	1	24		FLANGE	2
9	67935	LEFT COVER	1	25		BUCKLE NUT	2
10		LEFT WINDOW	1	26		AIR direction barrel	1
11		ENGINE COVER	1	27		COVER AFTER STEERING SHAFT	1
12		FRONT FACE	1	28		MIDST COVER	1
13		REFLECTOR L	1	29		RIGHT PLATE	1
14		LIGHT COVER L	1	30		LEFT PLATE	1
15		LIGHT COVER R	1				
16		REFLECTOR R	1				

Cover


AGM LTM 108-22

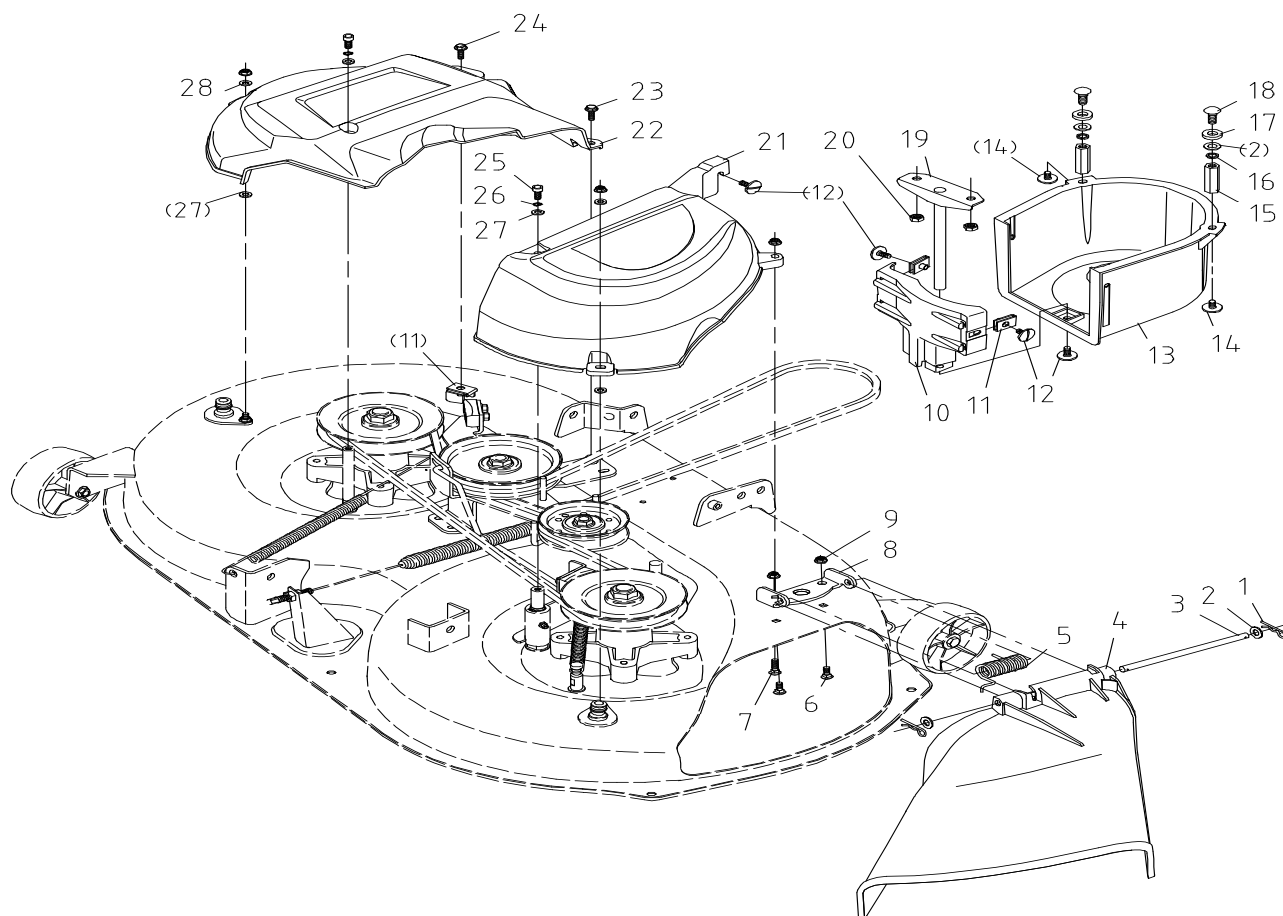

No	Code	Name	Qty	No	Code	Name	Qty
1	74316	SPRING PIN	2	16		SPRING WASHER	2
2		WASHER	4	17		WASHER	2
3	58821	PIN	1	18		BOLT	2
4	58822	DISCHARGE GUARD	1	19		BRACKET	1
5	58823	TORSION SPRING	1	20		LOCK NUT	2
6		BOLT	2	21	58824	RIGHT SHIELD	1
7		BOLT	1	22	58825	LEFT SHIELD	1
8		HINGE	1	23		FLANGE BOLT	1
9		FLANGE LOCK NUT	5	24		FLANGE BOLT	1
10	67939	REAR SHIELD	1	25		BOLT	2
11		BUCKLE NUT	3	26		SPRING WASHER	2
12		SCREW	4	27		BIG WASHER	4
13	67940	FRONT SHIELD	1	28		WASHER	2
14		SCREW	2				
15		HEXAGONAL ROD	2				

Guards

AGM LTM 108-22

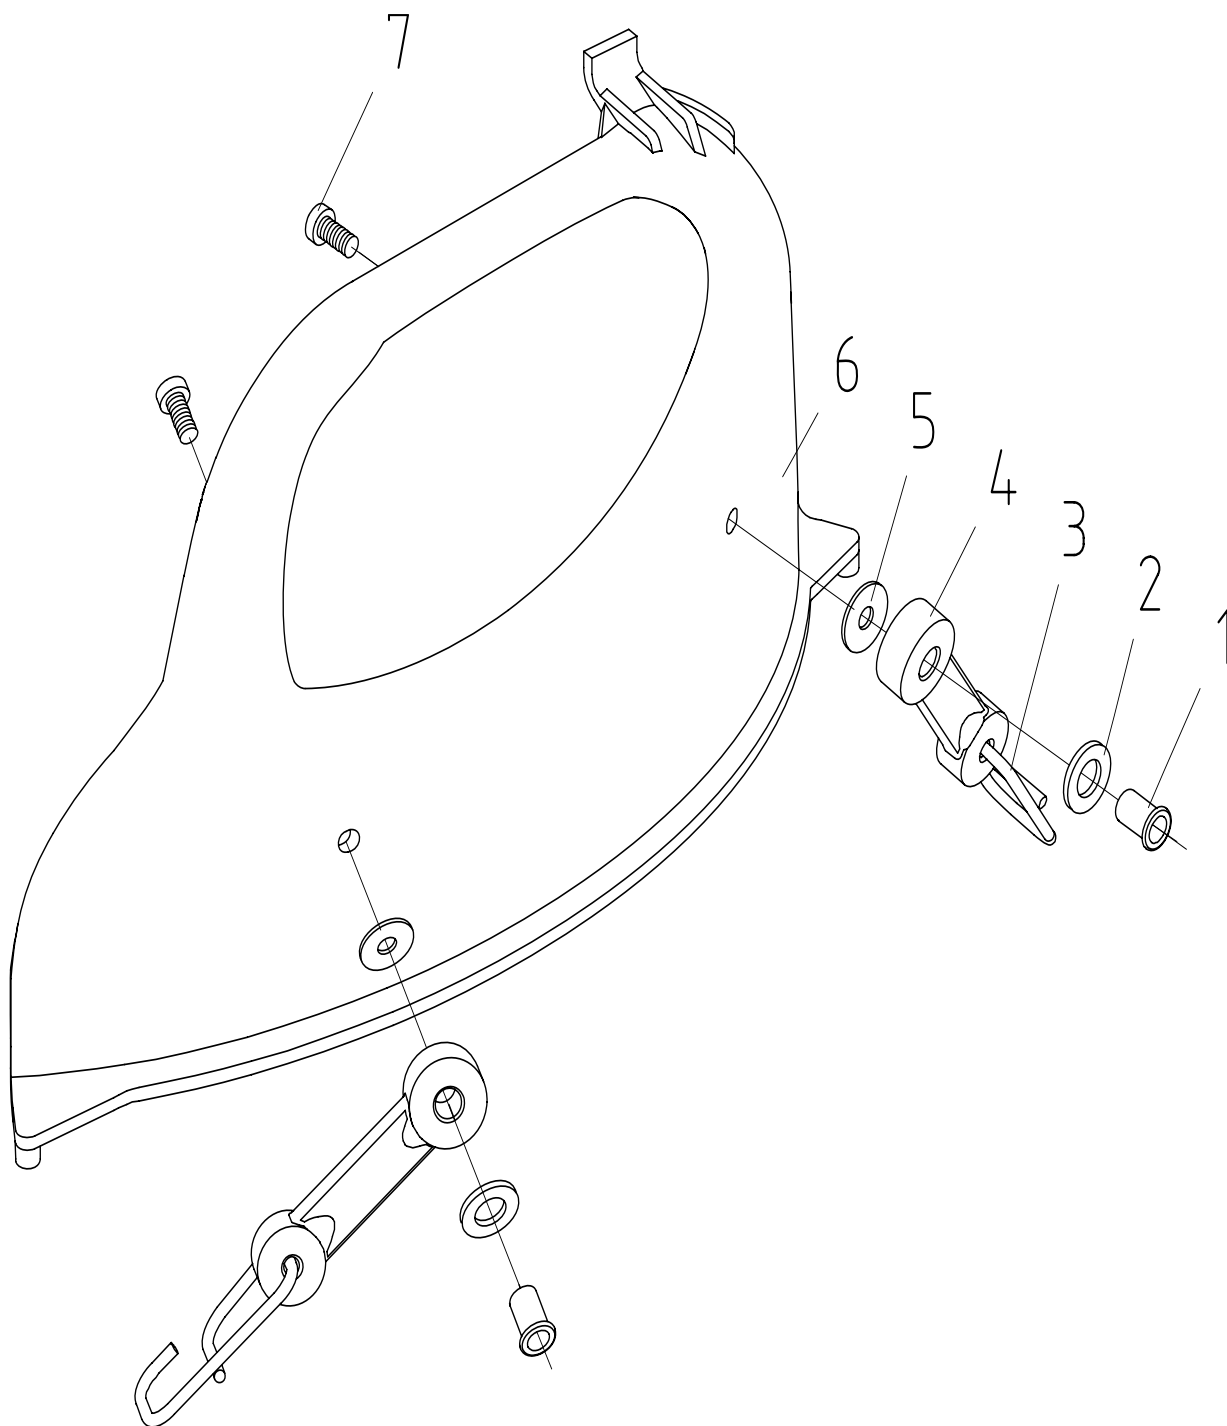

No	Code	Name	Qty	No	Code	Name	Qty
1		NUT	2	7		SCREW	2
2		WASHER	2				
3	58827	HOOK	2				
4	58828	BELT	2				
5		WASHER	2				
6	58829	MULCH COVER	1				


Mulch Cover



EXPLODED PARTS LIST

Page(s): 18/19


AGM LTM 108-22

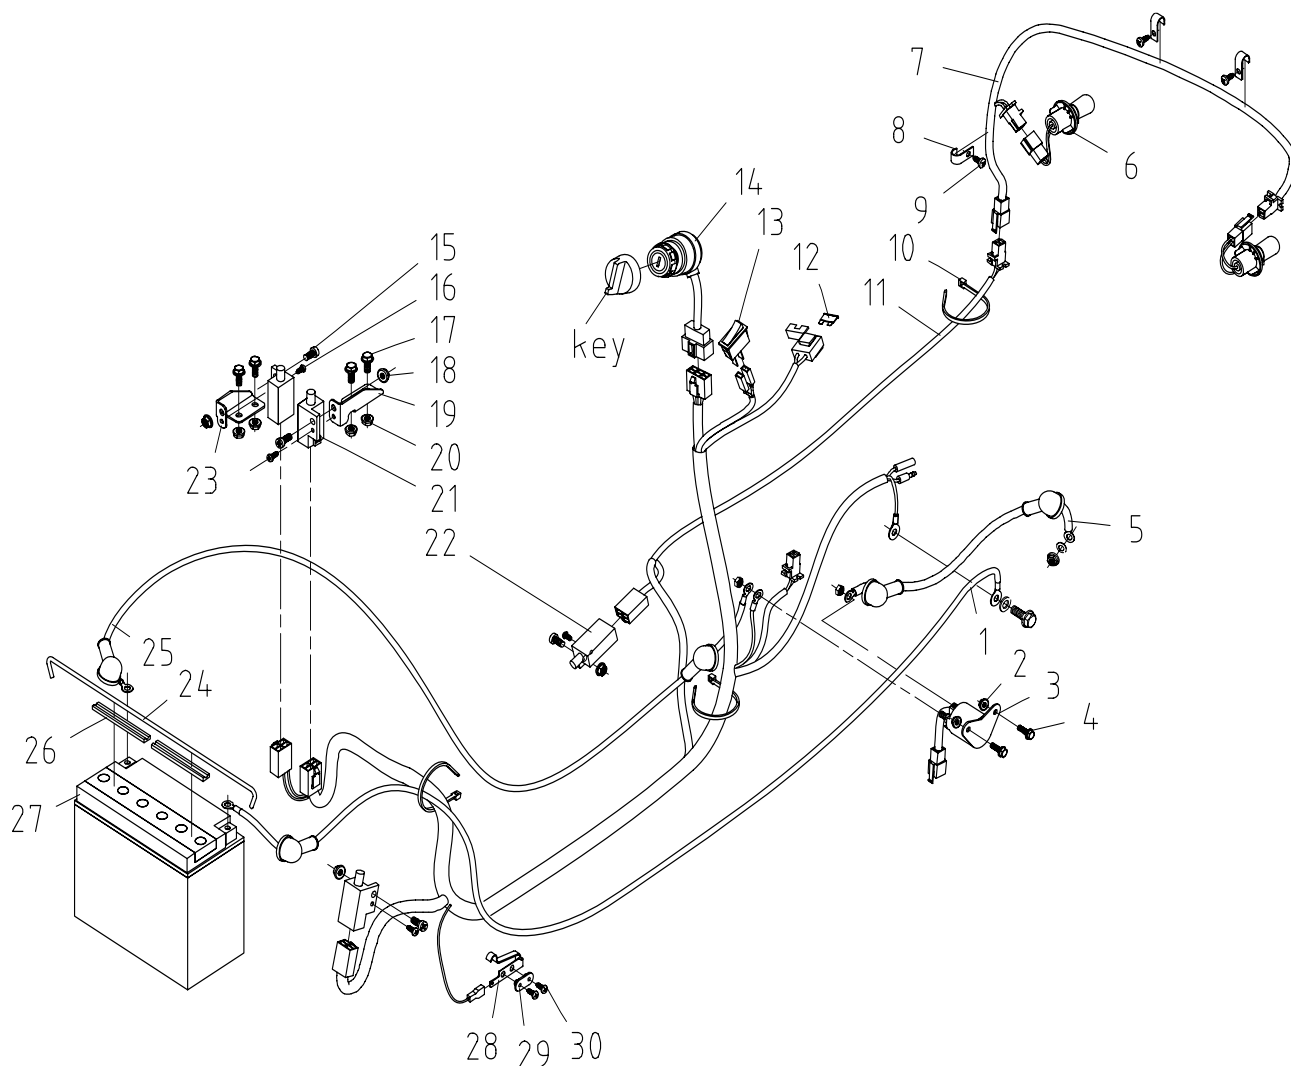

No	Code	Name	Qty	No	Code	Name	Qty
1		GROUND CABLE	1	18		FLANGE NUT	4
2		FLANGE LOCK NUT	2	19	58836	SWITCH BRACKET R	1
3	58831	STAR RELAY	1	20		FLANGE LOCK NUT	4
4		BOLT	2	21	58837	DOUBLE NORMALY CLOSED SWITCH	2
5		POWER CABLE	1	22	58838	OPEN CLOSE SWITCH	2
6	67941	FRONT LIGHT	2	23	58839	SWITCH BRACKET L	1
7		LIGHT WIRING	1	24		BATTERY BOLT	1
8		CLIP	5	25		BATTERY CABLE	1
9	51902	TAPPING SCREW	4	26		ROBBER PLATE	2
10		TIE BAND	20	27	58840	BATTERY	1
11		WIRING	1	28	58841	SWITCH CONTACT CHIP	1
12	67942	FUSE	1	29	76774	INDULSTING STRIP	1
13	58833	WIRING SWITCH	1	30	51902	TAPPING SCREW	2
14	58834	ROTARY SWITCH	1				
		KEY	1				
15	58830	SCREW	4				
16	51902	TAPPING SCREW	4				
17		FLANGE BOLT	4				

Electric

AGM LTM 108-22

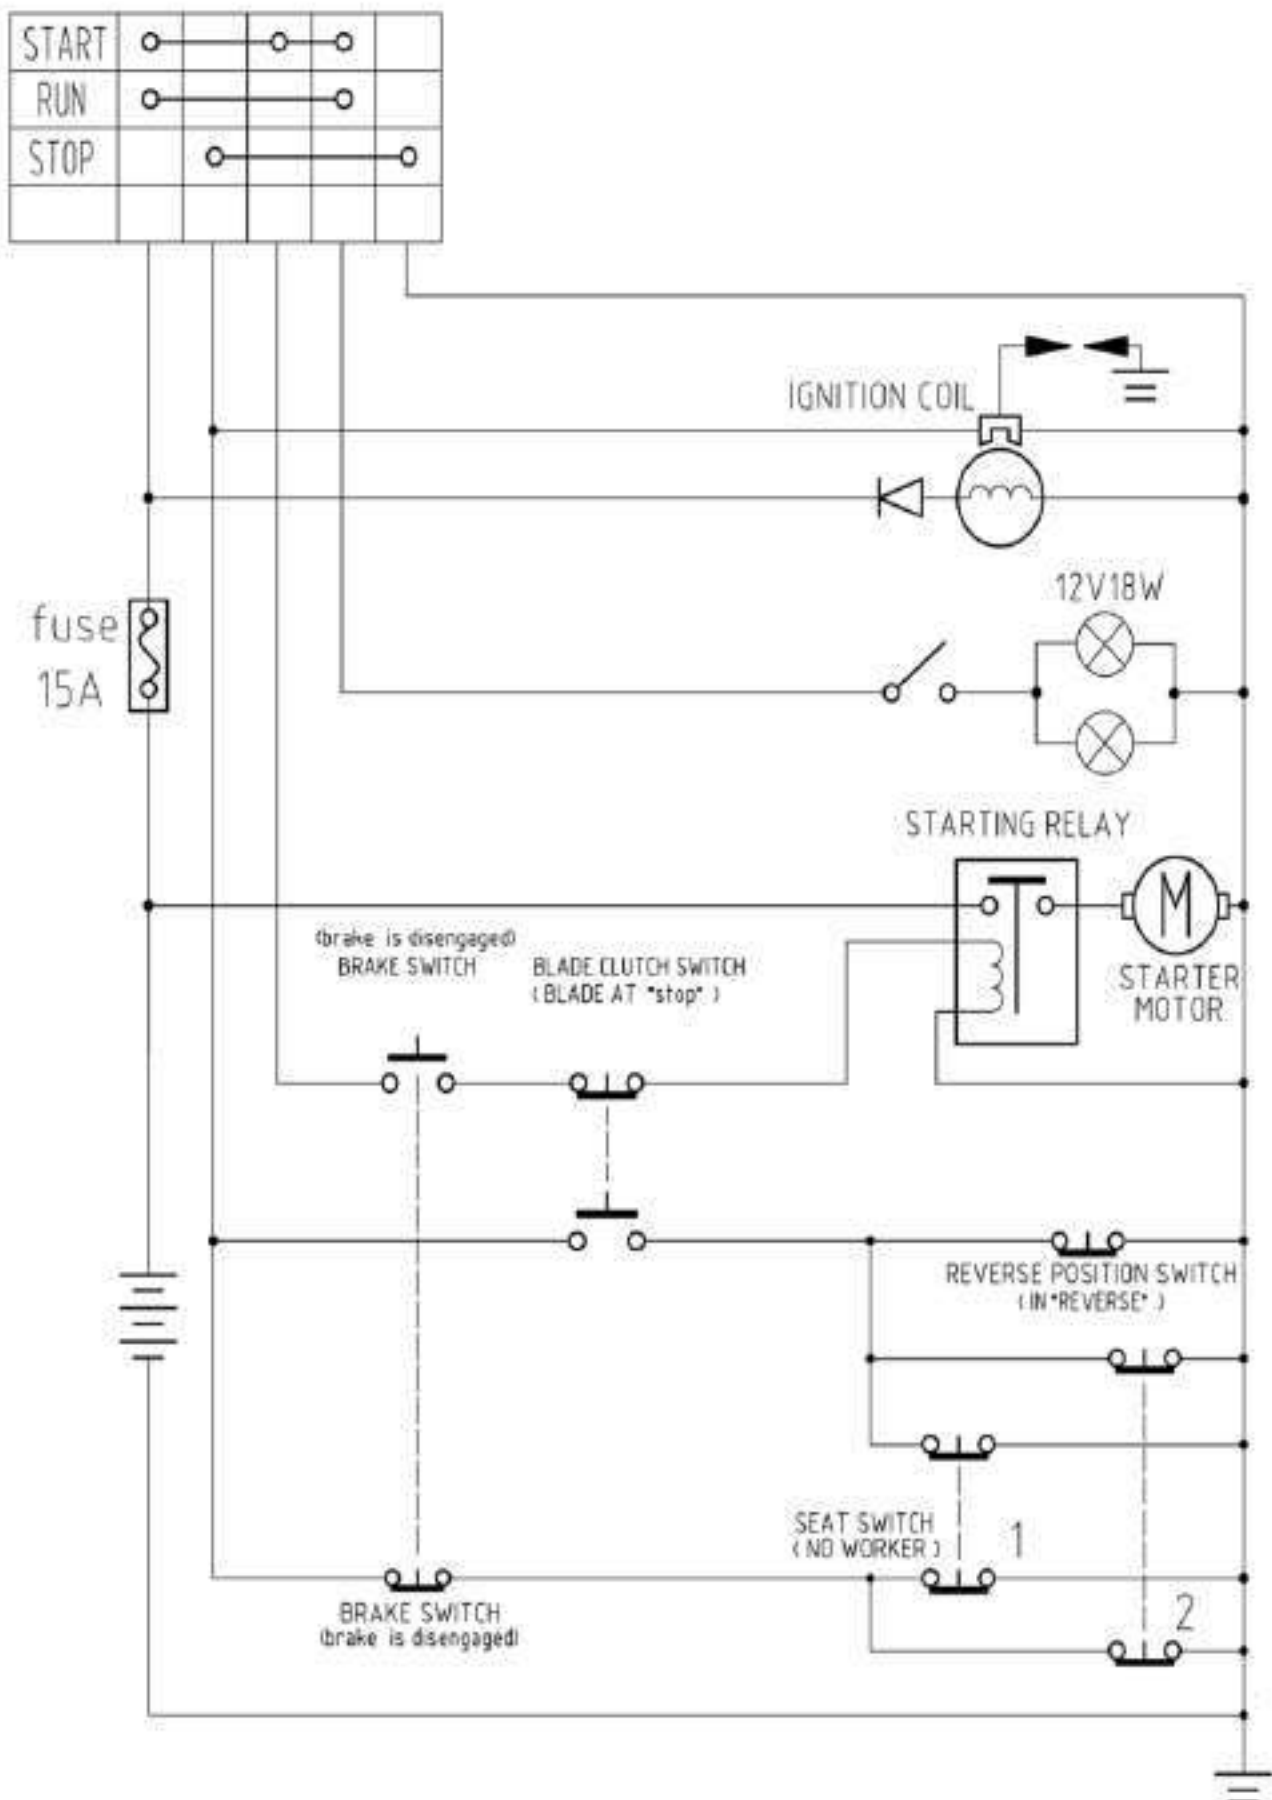

Electric Diagram