




DAEWOO

POWER PRODUCTS

DAFLS26T

LOG SPLITTER

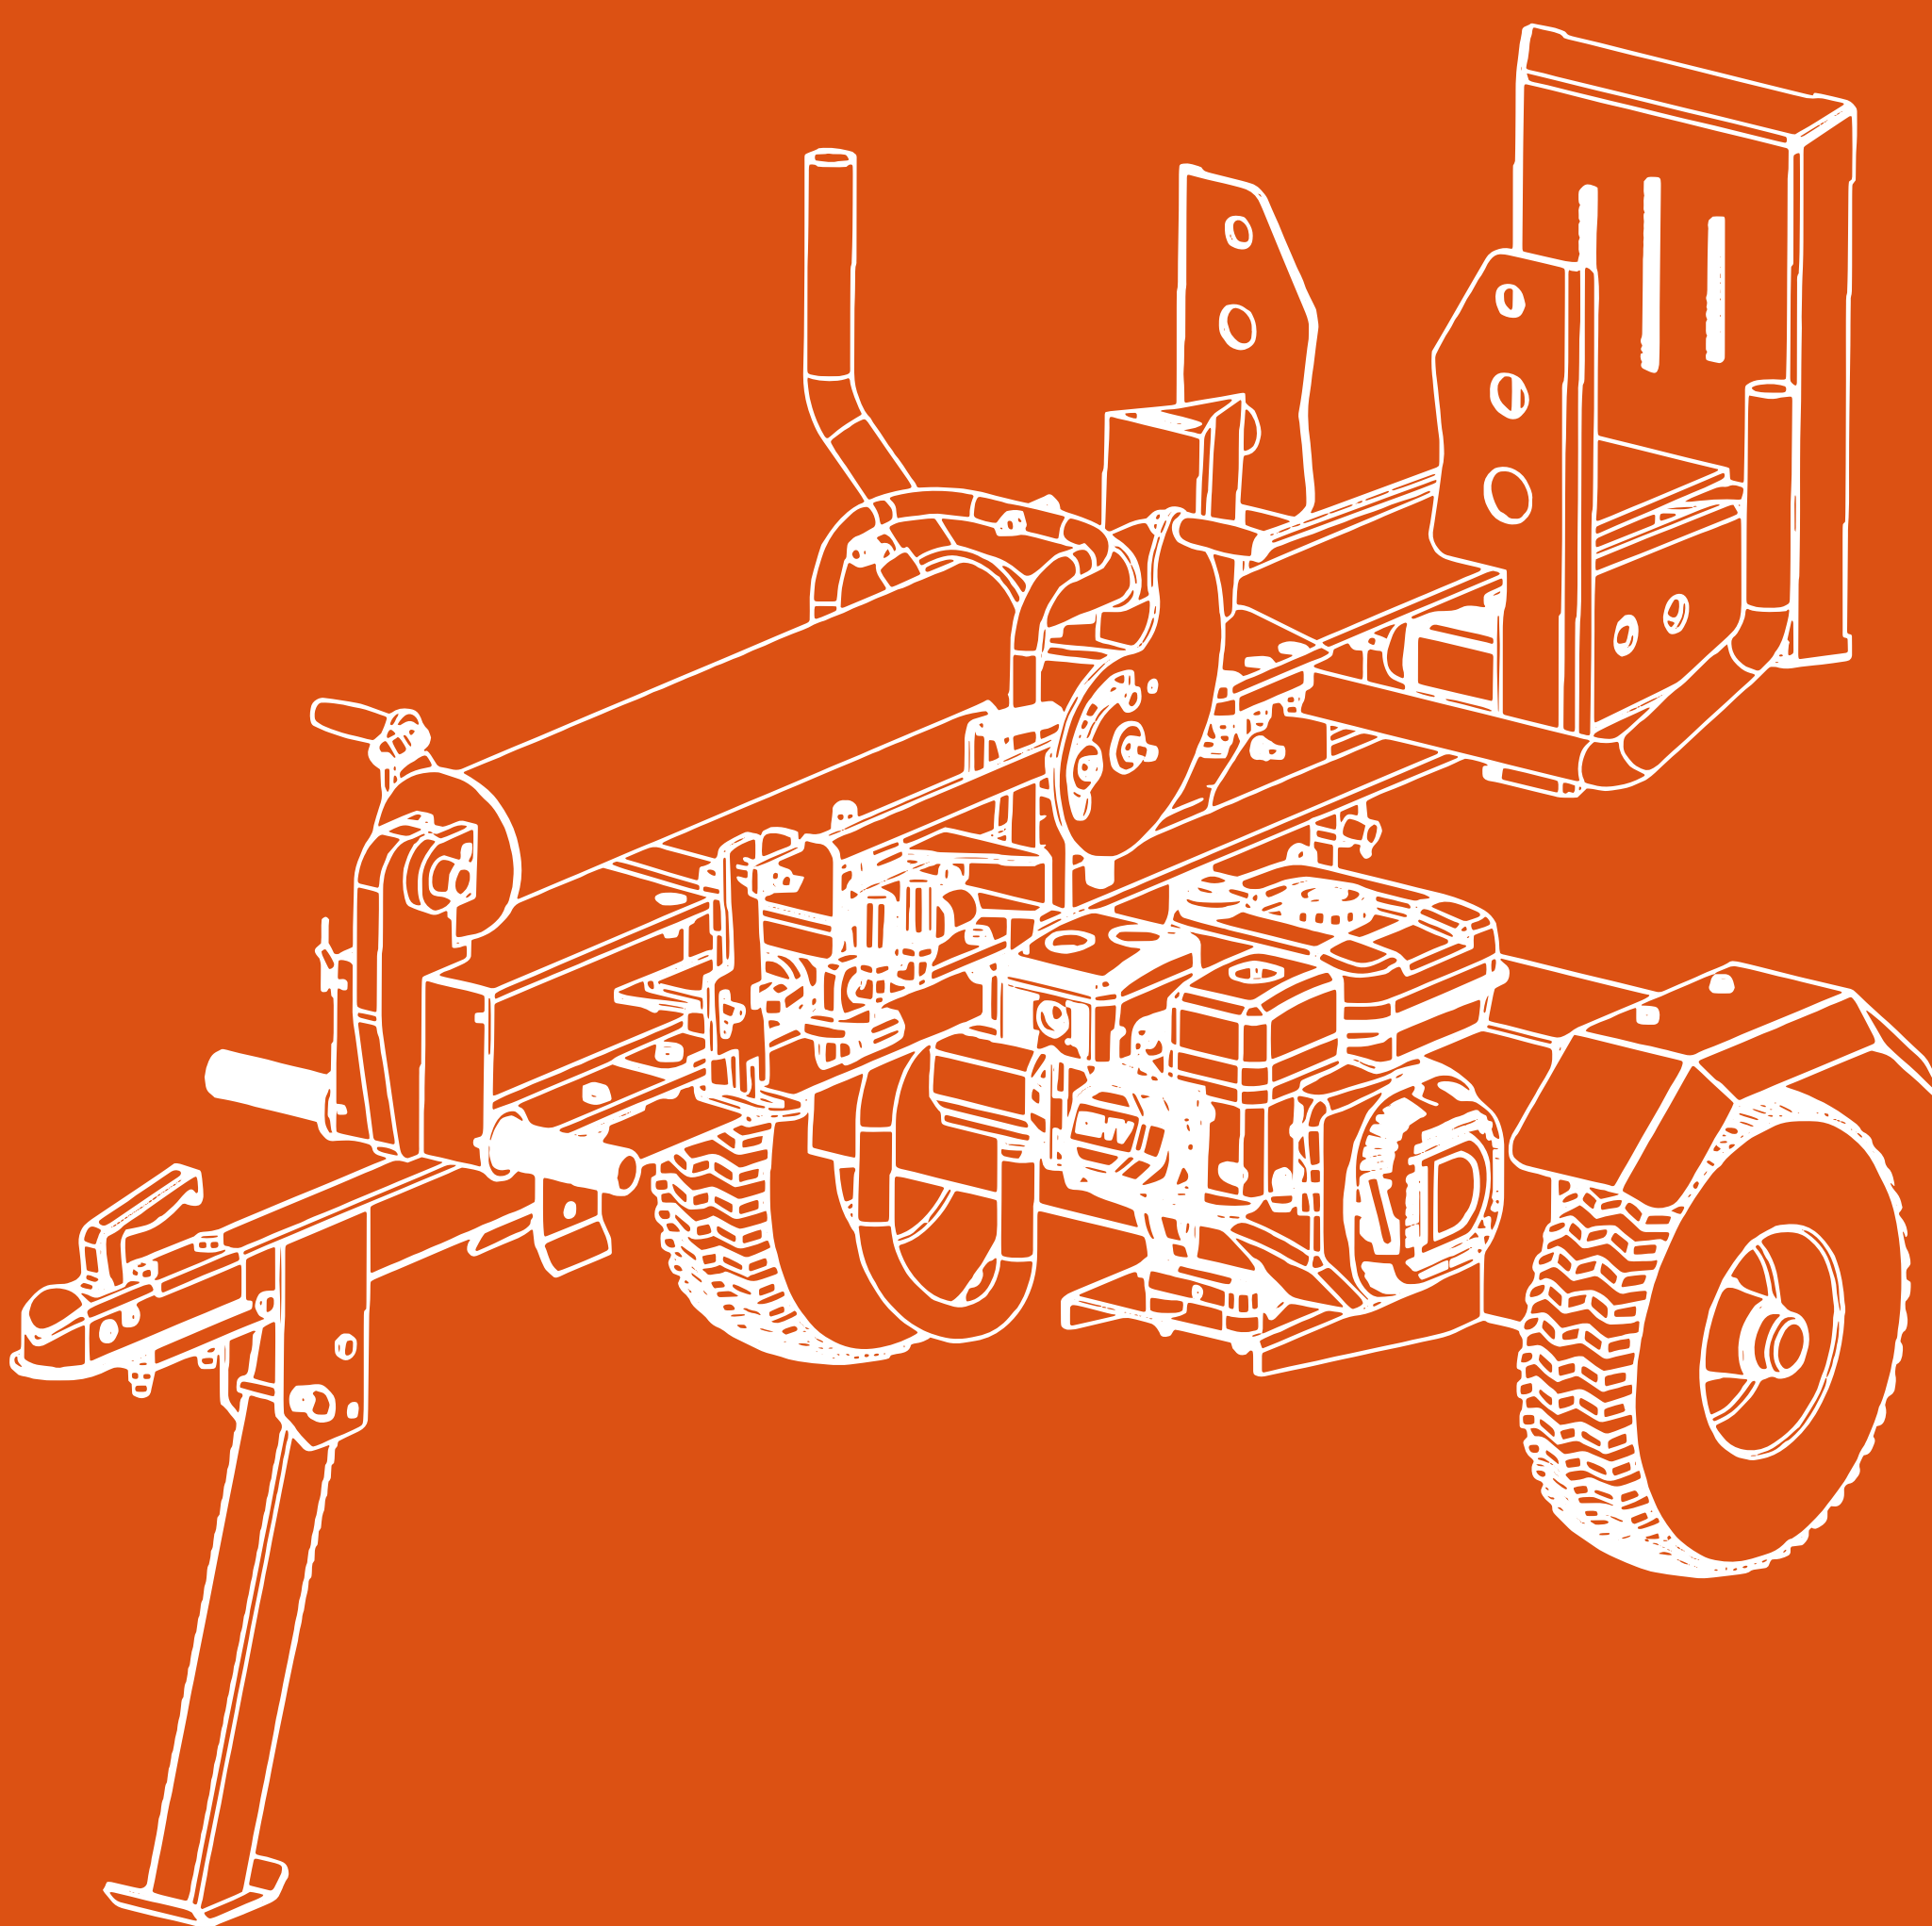


EXPLODED VIEW / DESPIECE / VUE ÉCLATÉE


www.daewoopowerproducts.com

Manufactured under license of Daewoo International Corporation, Korea
Fabricado bajo licencia de Daewoo International Corporation, Corea


EXPLODED VIEW | LOG SPLITTER | MODEL DAFLS26T
CRANKCASE / GEAR ASSY, GOVERNOR

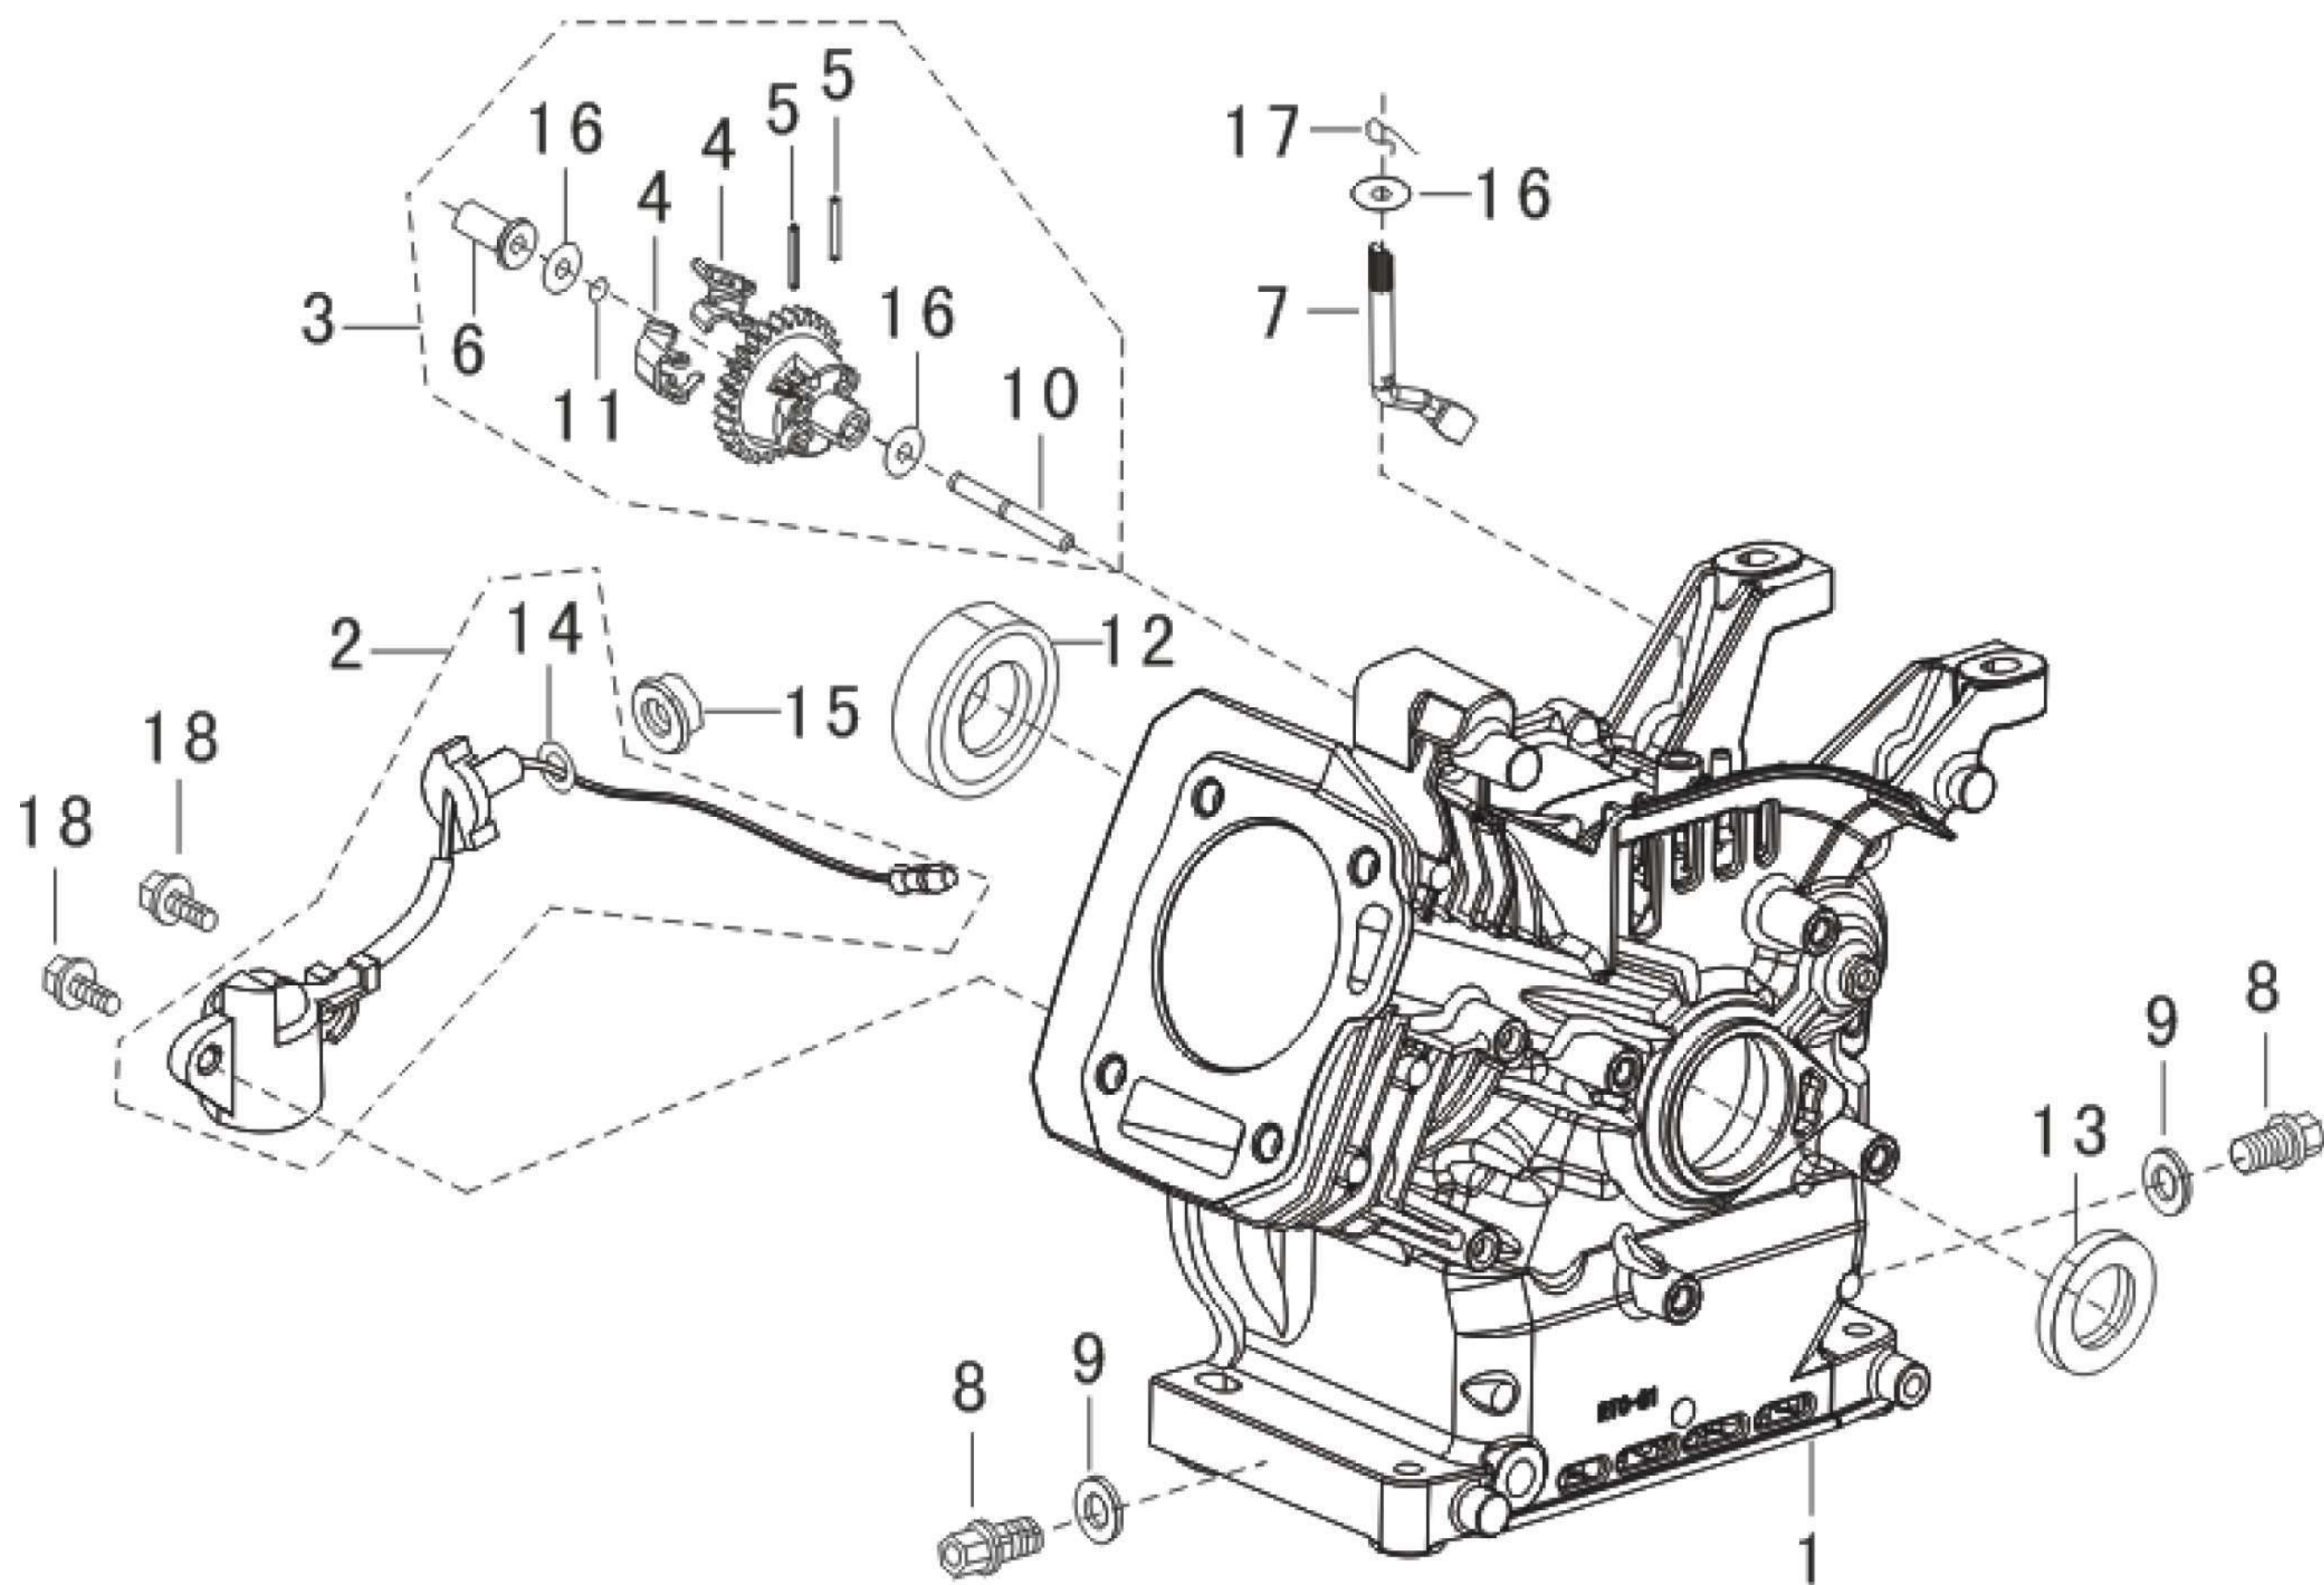


PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
E01-1	1	DA04-LS0312-000409-01-001	CRANKCASE SUBASSEMBLY.	1
E01-2	1	DA04-LS0312-000409-01-002	SENSOR, ENGINE OIL	1
E01-3	1	DA04-LS0312-000409-01-003	GEAR ASSY, GOVERNOR	1
E01-7	1	DA04-LS0312-000409-01-004	ARM, GOVERNOR	1
E01-8	1	DA04-LS0312-000409-01-005	BOLT, DRAIN PLUG	2
E01-9	1	DA04-LS0312-000409-01-006	FLAT WASHER	2
E01-12	1	DA04-LS0312-000409-01-007	DEEP GROOVE BALL BEARING	1
E02-13	1	DA04-LS0312-000409-01-008	SEAL, OIL	1
E02-15	1	DA04-LS0312-000409-01-009	HEXAGON NUT WITH FLANGE	1
E02-16	1	DA04-LS0312-000409-01-010	FLAT WASHER	1
E02-17	1	DA04-LS0312-000409-01-011	COTTER PIN	1
E02-18	1	DA04-LS0312-000409-01-012	BOLT	2

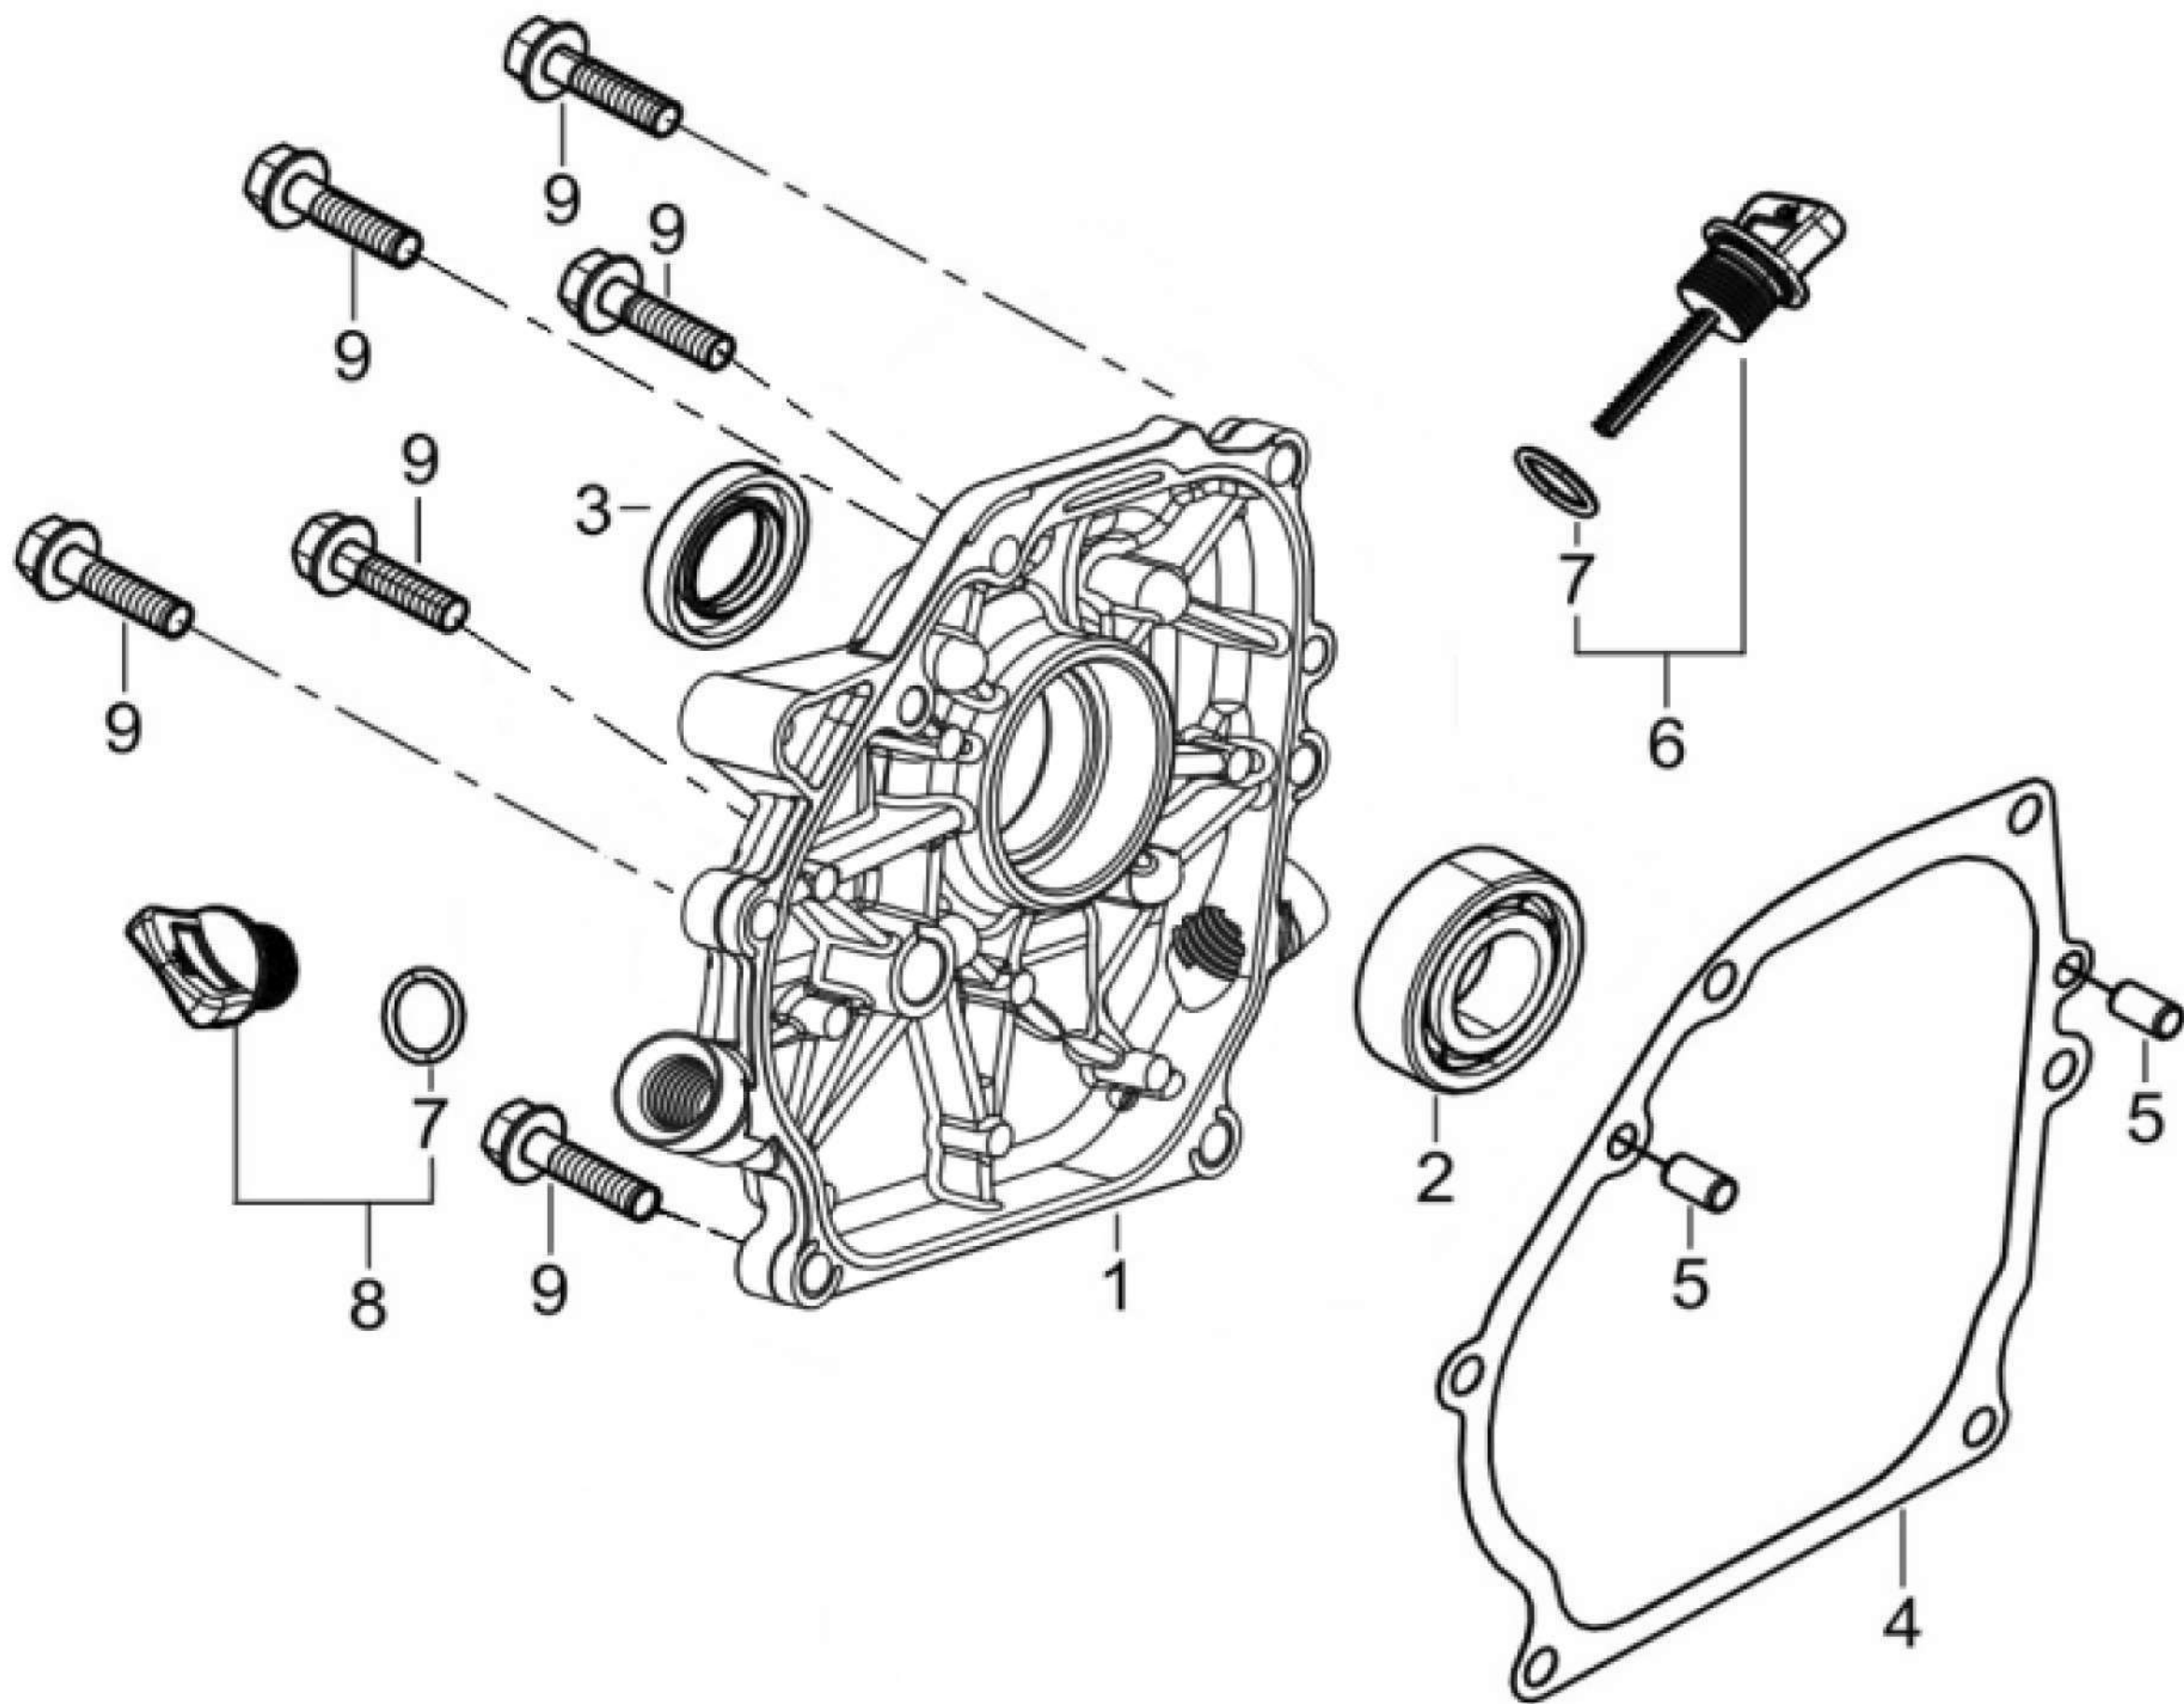


PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
E02-1	2	DA04-LS0312-000409-02-013	COVER, CRANKCASE	1
E02-2	2	DA04-LS0312-000409-02-014	DEEP GROOVE BALL BEARING	1
E02-3	2	DA04-LS0312-000409-02-015	SEAL, OIL	1
E02-4	2	DA04-LS0312-000409-02-016	GASKET, CRANKCASE	1
E02-5	2	DA04-LS0312-000409-02-017	POSITION PIN	2
E02-6	2	DA04-LS0312-000409-02-018	DIPSTICK SUBASSEMBLY, OIL	1
E02-8	2	DA04-LS0312-000409-02-019	PLUG SUBASSEMBLY, ENGINE OIL	1
E02-9	2	DA04-LS0312-000409-02-020	BOLT	6

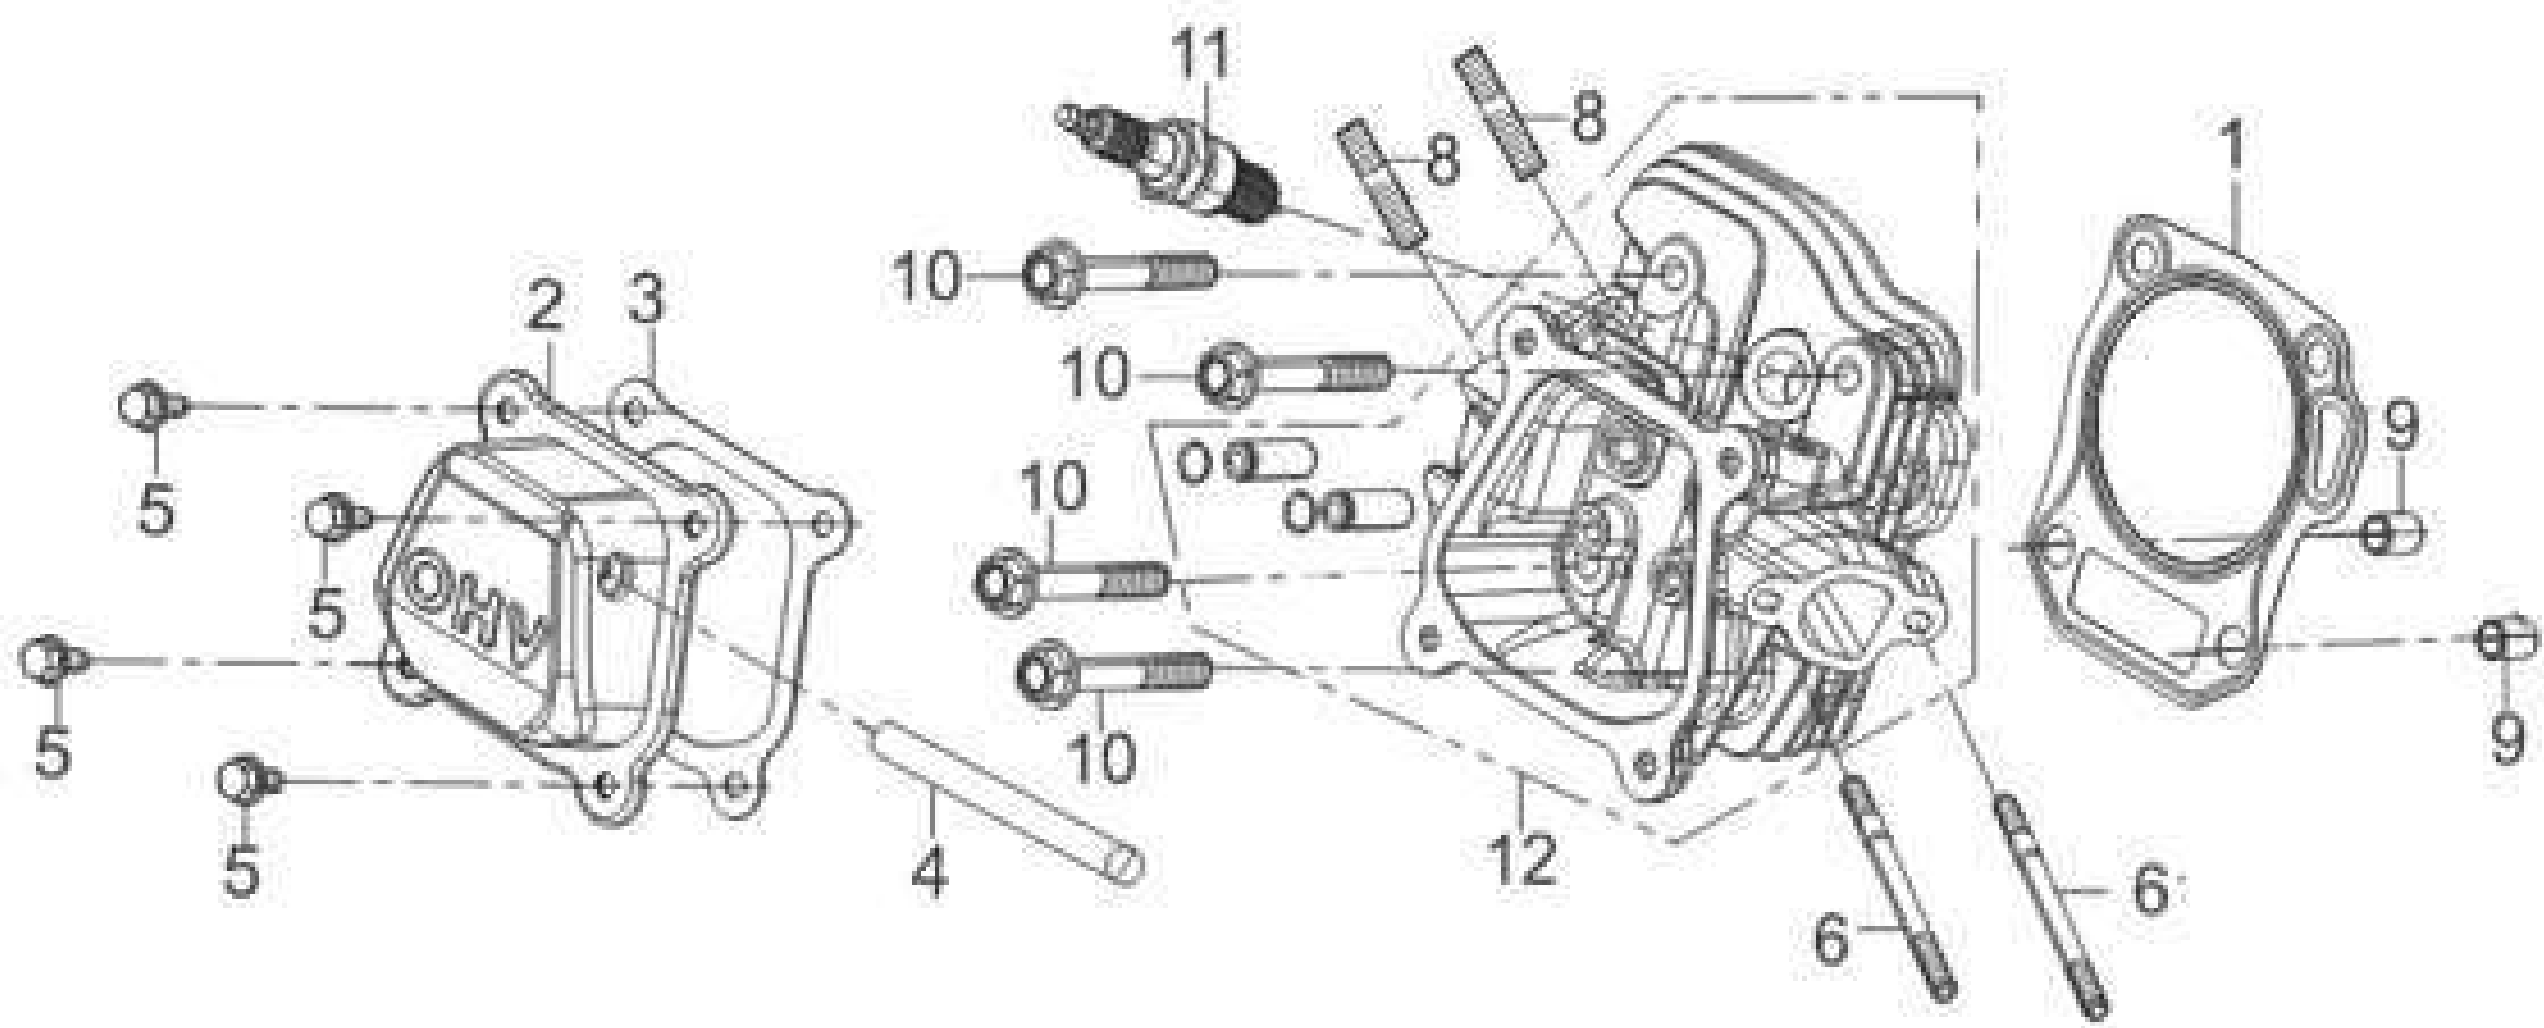


PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
E03-1	3	DA04-LS0312-000409-03-021	GASKET, CYLINDER HEAD	1
E03-2	3	DA04-LS0312-000409-03-022	COVER SUBASSEMBLY, CYLINDER HEAD	1
E03-3	3	DA04-LS0312-000409-03-023	CYLINDER HEAD COVER GASKET	1
E03-4	3	DA04-LS0312-000409-03-024	TUBE, BREATHER	1
E03-5	3	DA04-LS0312-000409-03-025	BOLT	4
E03-6	3	DA04-LS0312-000409-03-026	STUD BOLT	2
E03-8	3	DA04-LS0312-000409-03-027	STUD BOLT	2
E03-9	3	DA04-LS0312-000409-03-028	POSITION PIN	2
E03-10	3	DA04-LS0312-000409-03-029	CYLINDER HEAD BOLT	4
E03-11	3	DA04-LS0312-000409-03-030	PLUG, SPARK	1
E03-12	3	DA04-LS0312-000409-03-031	HEAD SUBASSEMBLY, CYLINDER	1

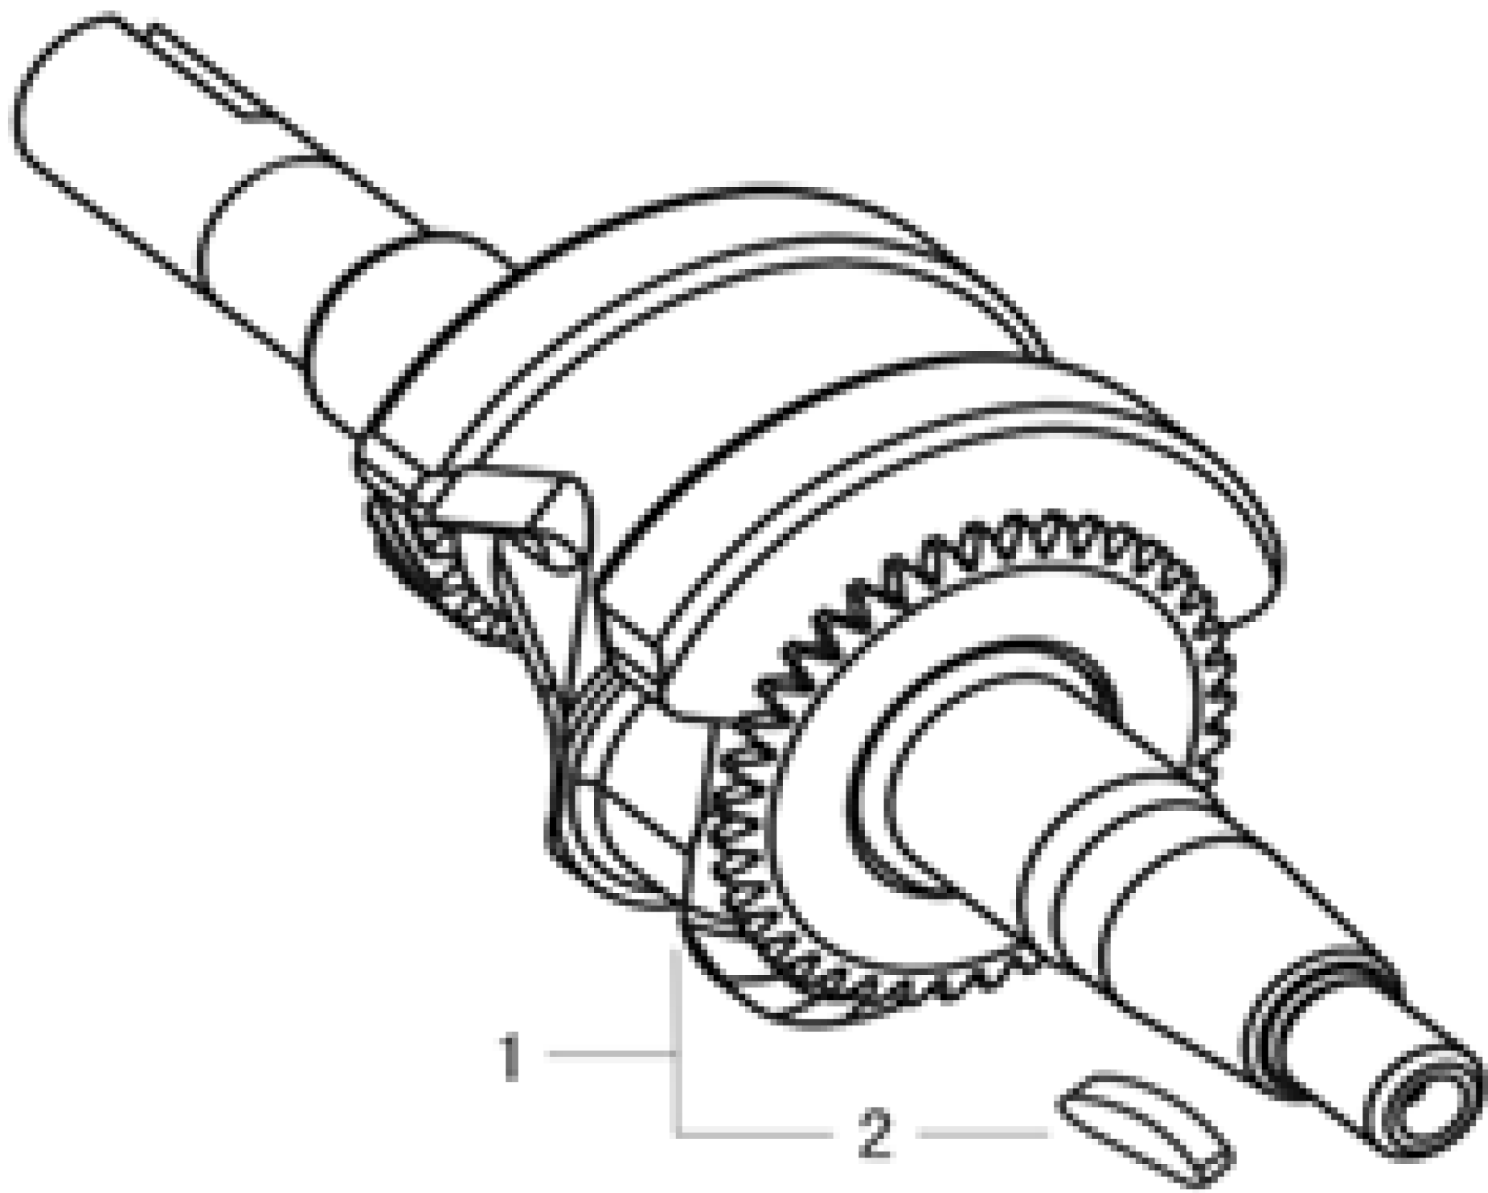


PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
E04-1	4	DA04-LS0312-000409-04-032	CRANKSHAFT ASSY.	1

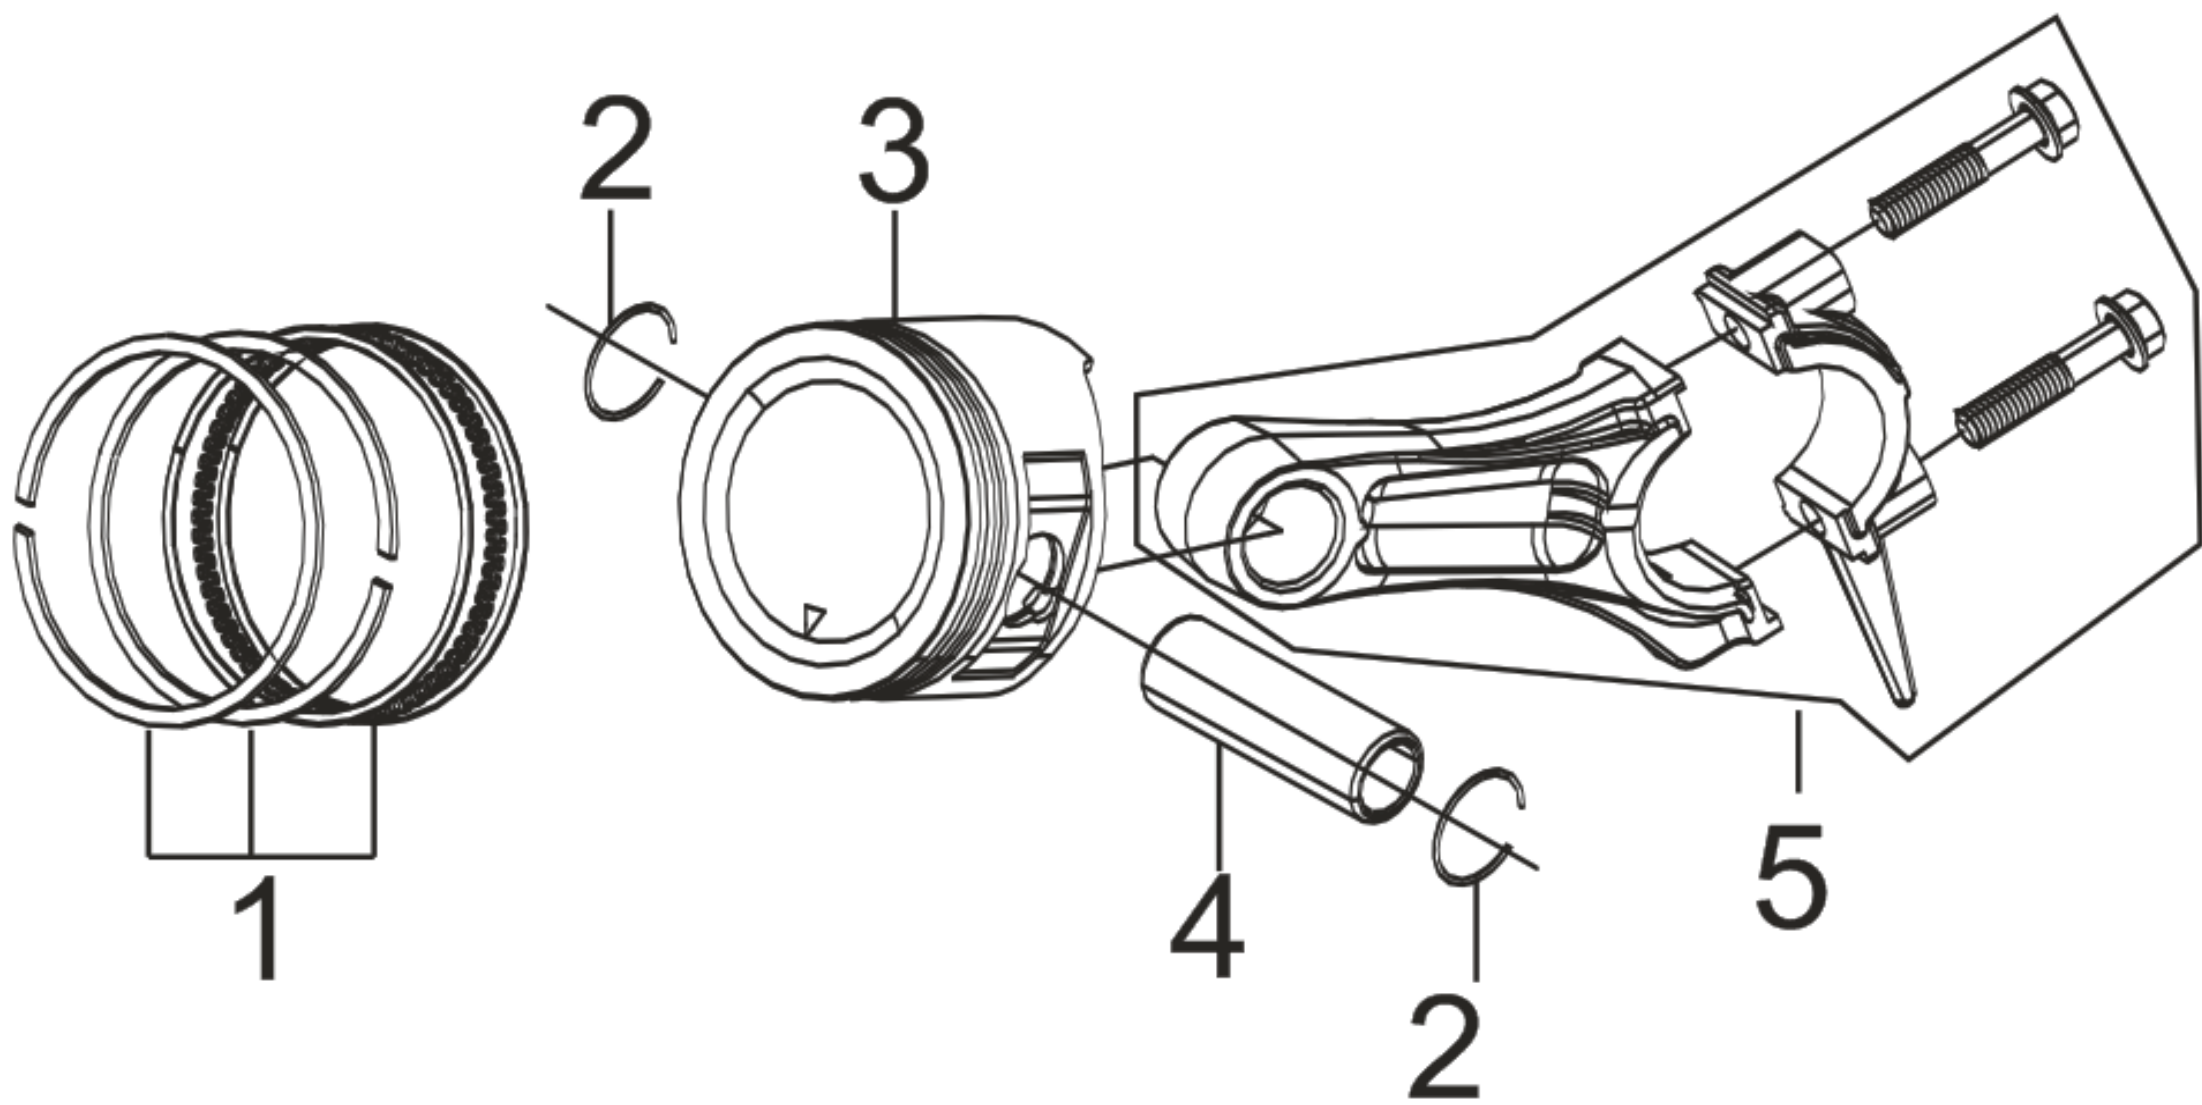


PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
E05-1	5	DA04-LS0312-000409-05-033	RING ASSY, PISTON	1
E05-2	5	DA04-LS0312-000409-05-034	CLIP, PISTON PIN	2
E05-3	5	DA04-LS0312-000409-05-035	PISTON	1
E05-4	5	DA04-LS0312-000409-05-036	PIN, PISTON	1
E05-5	5	DA04-LS0312-000409-05-037	ROD, CONNECTING	1

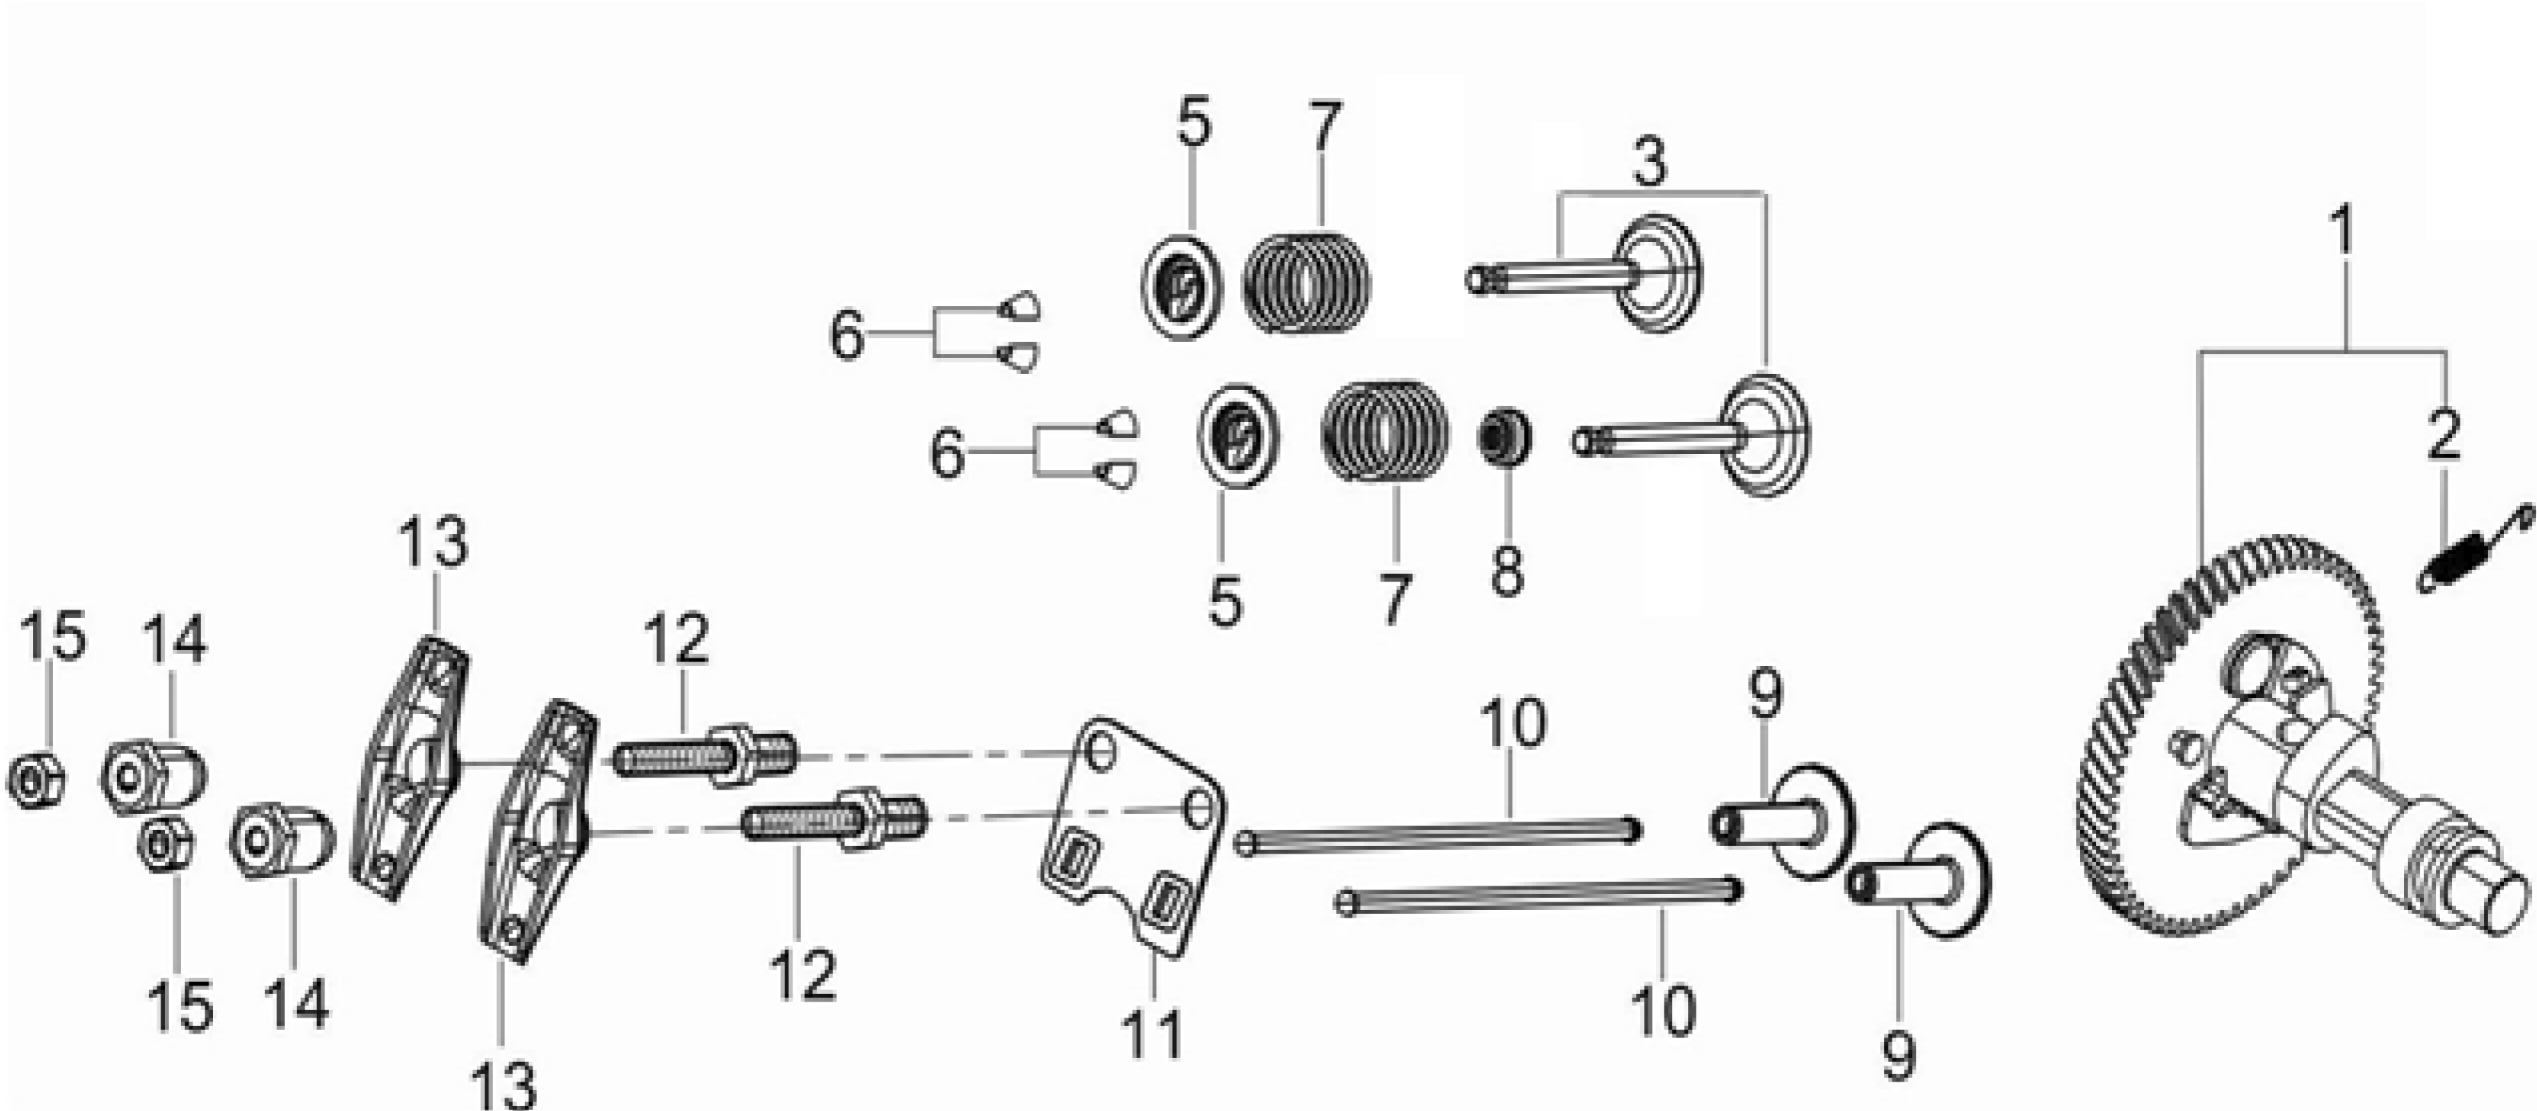


PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
E06-1	6	DA04-LS0312-000409-06-038	CAMSHAFT ASSY.	1
E06-3	6	DA04-LS0312-000409-06-039	VALVES SET	1
E06-5	6	DA04-LS0312-000409-06-040	SEAT, VALVE SPRING	2
E06-6	6	DA04-LS0312-000409-06-041	CLAMP, VALVE LOCK	4
E06-7	6	DA04-LS0312-000409-06-042	SPRING, VALVE	2
E06-8	6	DA04-LS0312-000409-06-043	GUIDE, SEAL	1
E06-9	6	DA04-LS0312-000409-06-044	TAPPET, VALVE	2
E06-10	6	DA04-LS0312-000409-06-045	LIFTER, VALVE	2
E06-11	6	DA04-LS0312-000409-06-046	PLATE SUBASSEMBLY, LIFTER STOPPER	1
E06-12	6	DA04-LS0312-000409-06-047	ROCKSHAFT BOLT	2
E06-13	6	DA04-LS0312-000409-06-048	ROCKER, VALVE	2
E06-14	6	DA04-LS0312-000409-06-049	NUT, VALVE ADJUSTING	2
E06-15	6	DA04-LS0312-000409-06-050	NUT, VALVE LOCK	2

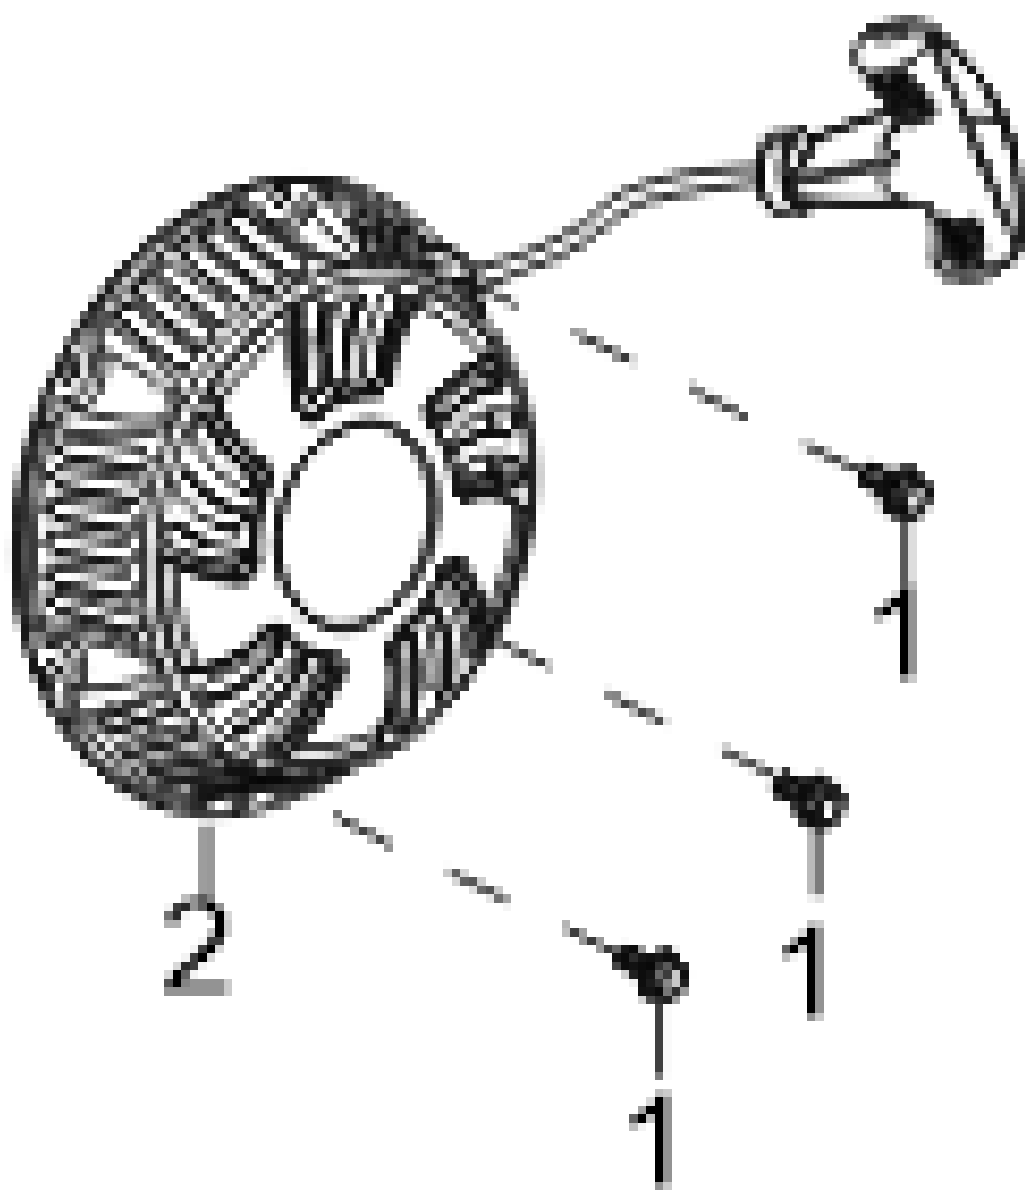


PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
E07-1	7	DA04-LS0312-000409-07-051	BOLT	3
E07-2	7	DA04-LS0312-000409-07-052	STARTER ASSY, RECOIL	1

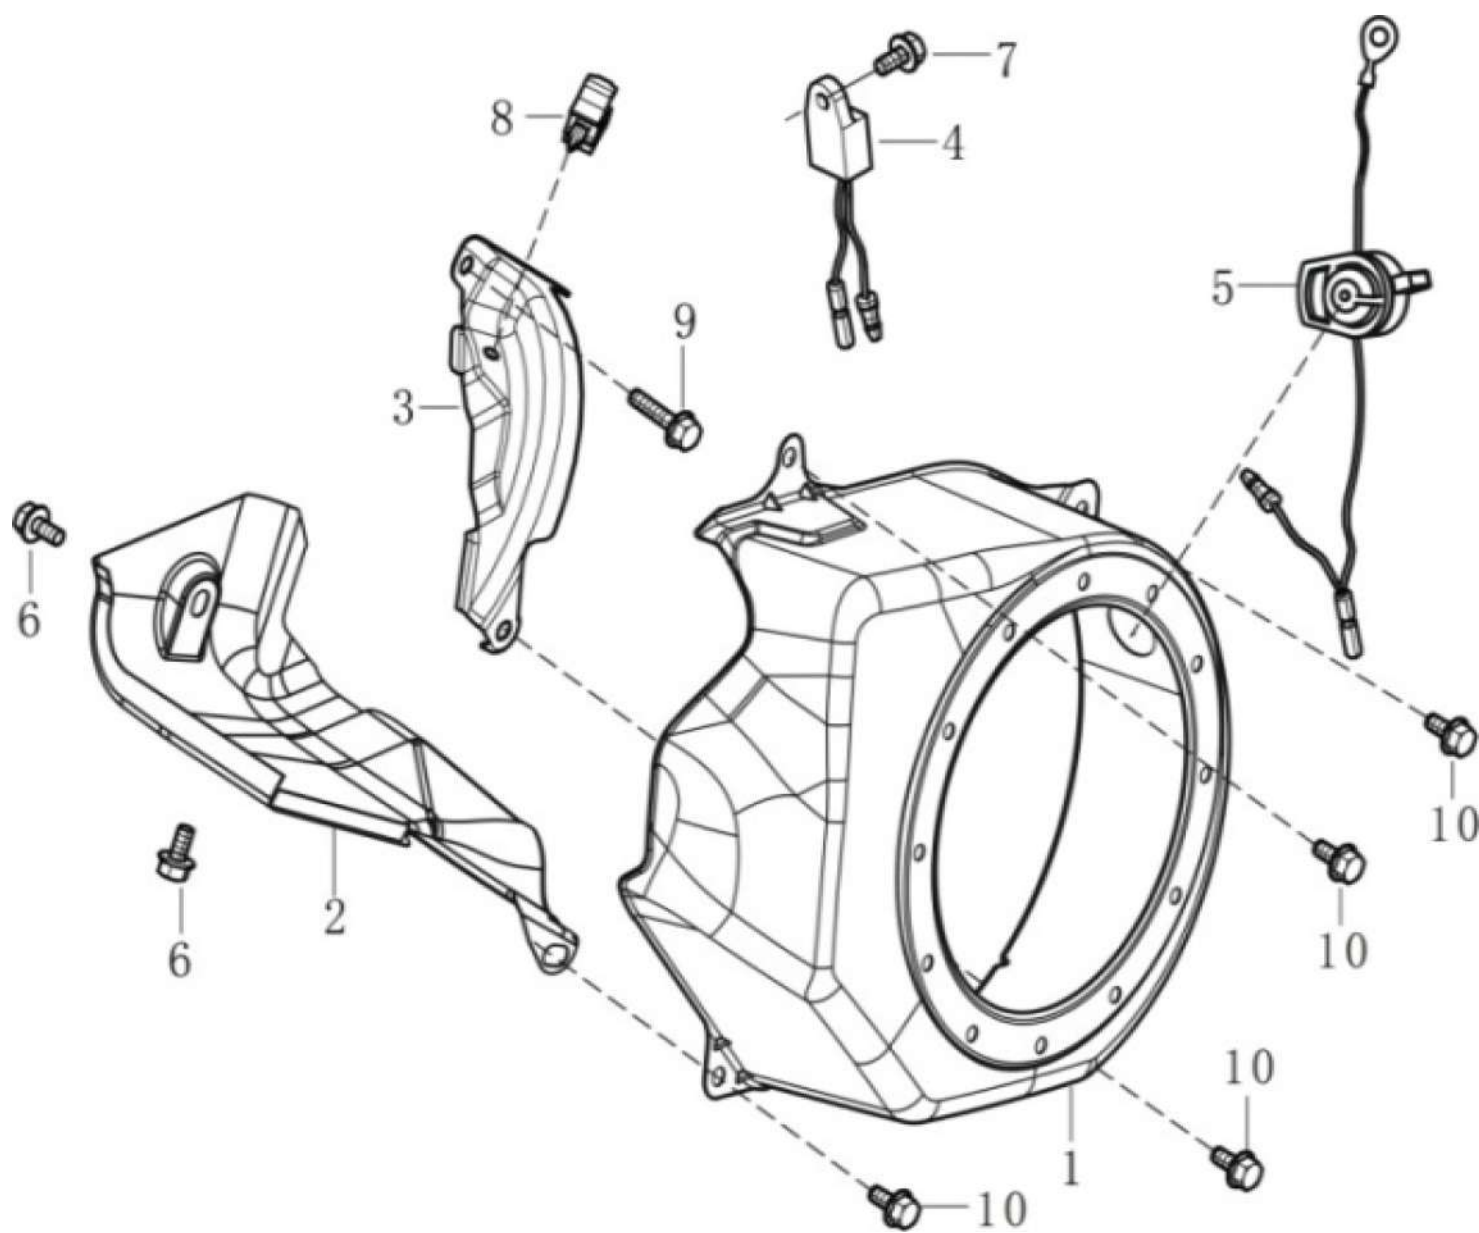


PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
E08-1	8	DA04-LS0312-000409-08-053	SHROUD	1
E08-2	8	DA04-LS0312-000409-08-054	SHROUD, CYLINDER BODY	1
E08-3	8	DA04-LS0312-000409-08-055	SHIELD, LOWER	1
E08-4	8	DA04-LS0312-000409-08-056	PROTECTOR, OIL	1
E08-5	8	DA04-LS0312-000409-08-057	SWITCH SUBASSEMBLY, STOP ENGINE	1
E08-6	8	DA04-LS0312-000409-08-058	BOLT	2
E08-7	8	DA04-LS0312-000409-08-059	BOLT	1
E08-8	8	DA04-LS0312-000409-08-060	COLLAR	1
E08-9	8	DA04-LS0312-000409-08-061	BOLT	1
E08-10	8	DA04-LS0312-000409-08-062	BOLT	4

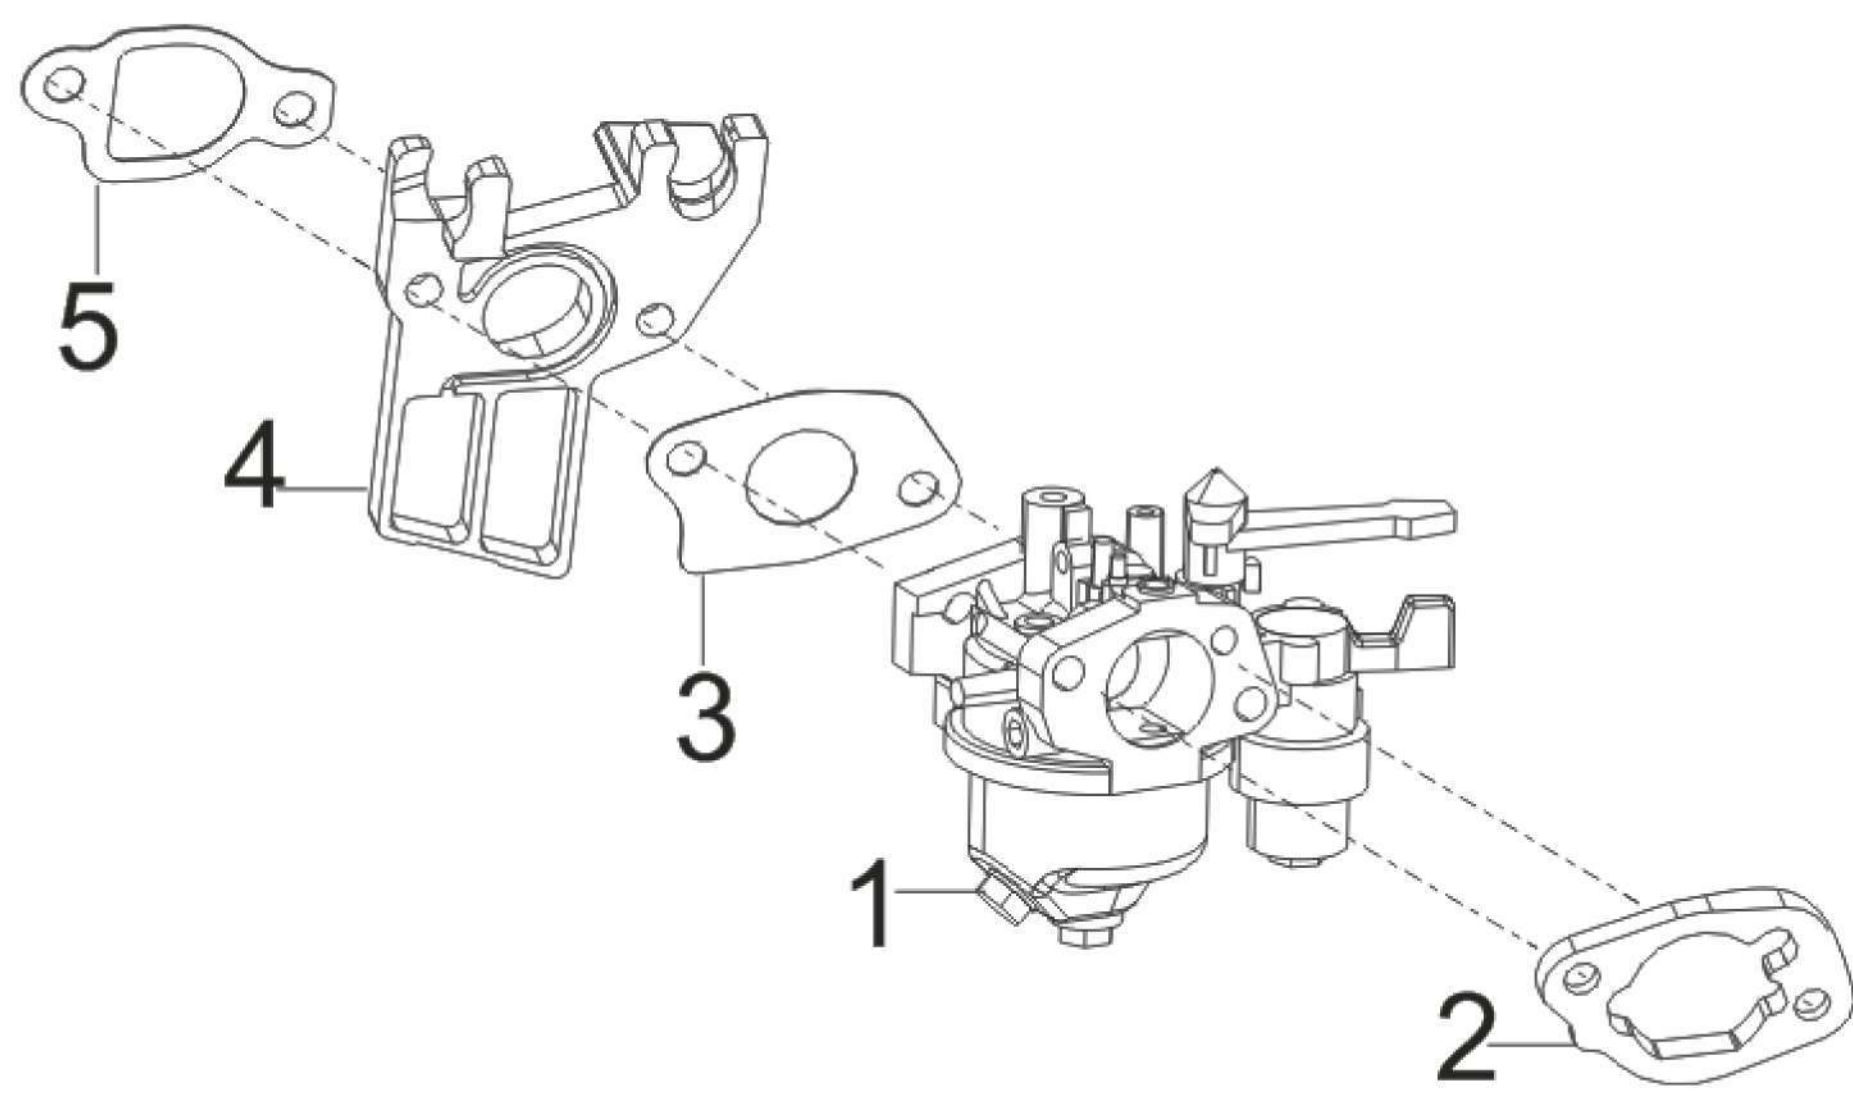


PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
E09-1	9	DA04-LS0312-000409-09-063	CARBURETOR ASSY.	1
E09-2	9	DA04-LS0312-000409-09-064	AIR CLEANER SEAL GASKET	1
E09-3	9	DA04-LS0312-000409-09-065	CARBURETOR SEAL GASKET	1
E09-4	9	DA04-LS0312-000409-09-066	PLATE, CARBURETOR INSULATOR	1
E09-5	9	DA04-LS0312-000409-09-067	GASKET, CARBURETOR INSULATOR	1

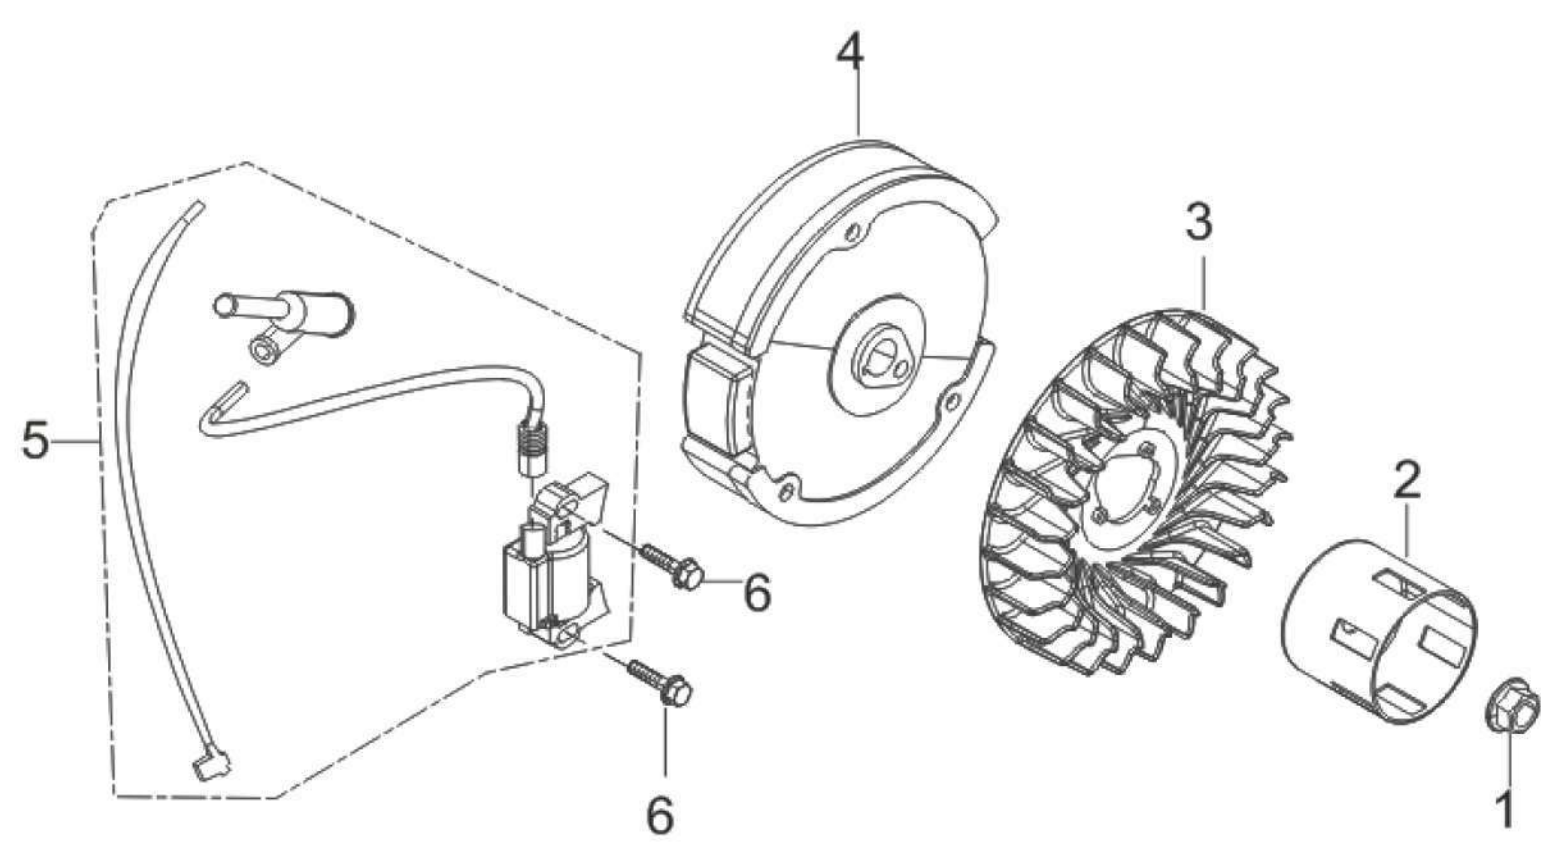


PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
E10-1	10	DA04-LS0312-000409-10-068	NUT, FLYWHEEL	1
E10-2	10	DA04-LS0312-000409-10-069	PULLEY, STARTER	1
E10-3	10	DA04-LS0312-000409-10-070	IMPELLER	1
E10-4	10	DA04-LS0312-000409-10-071	FLYWHEEL SUBASSEMBLY	1
E10-5	10	DA04-LS0312-000409-10-072	COIL, IGNITION	1
E10-6	10	DA04-LS0312-000409-10-073	BOLT	2

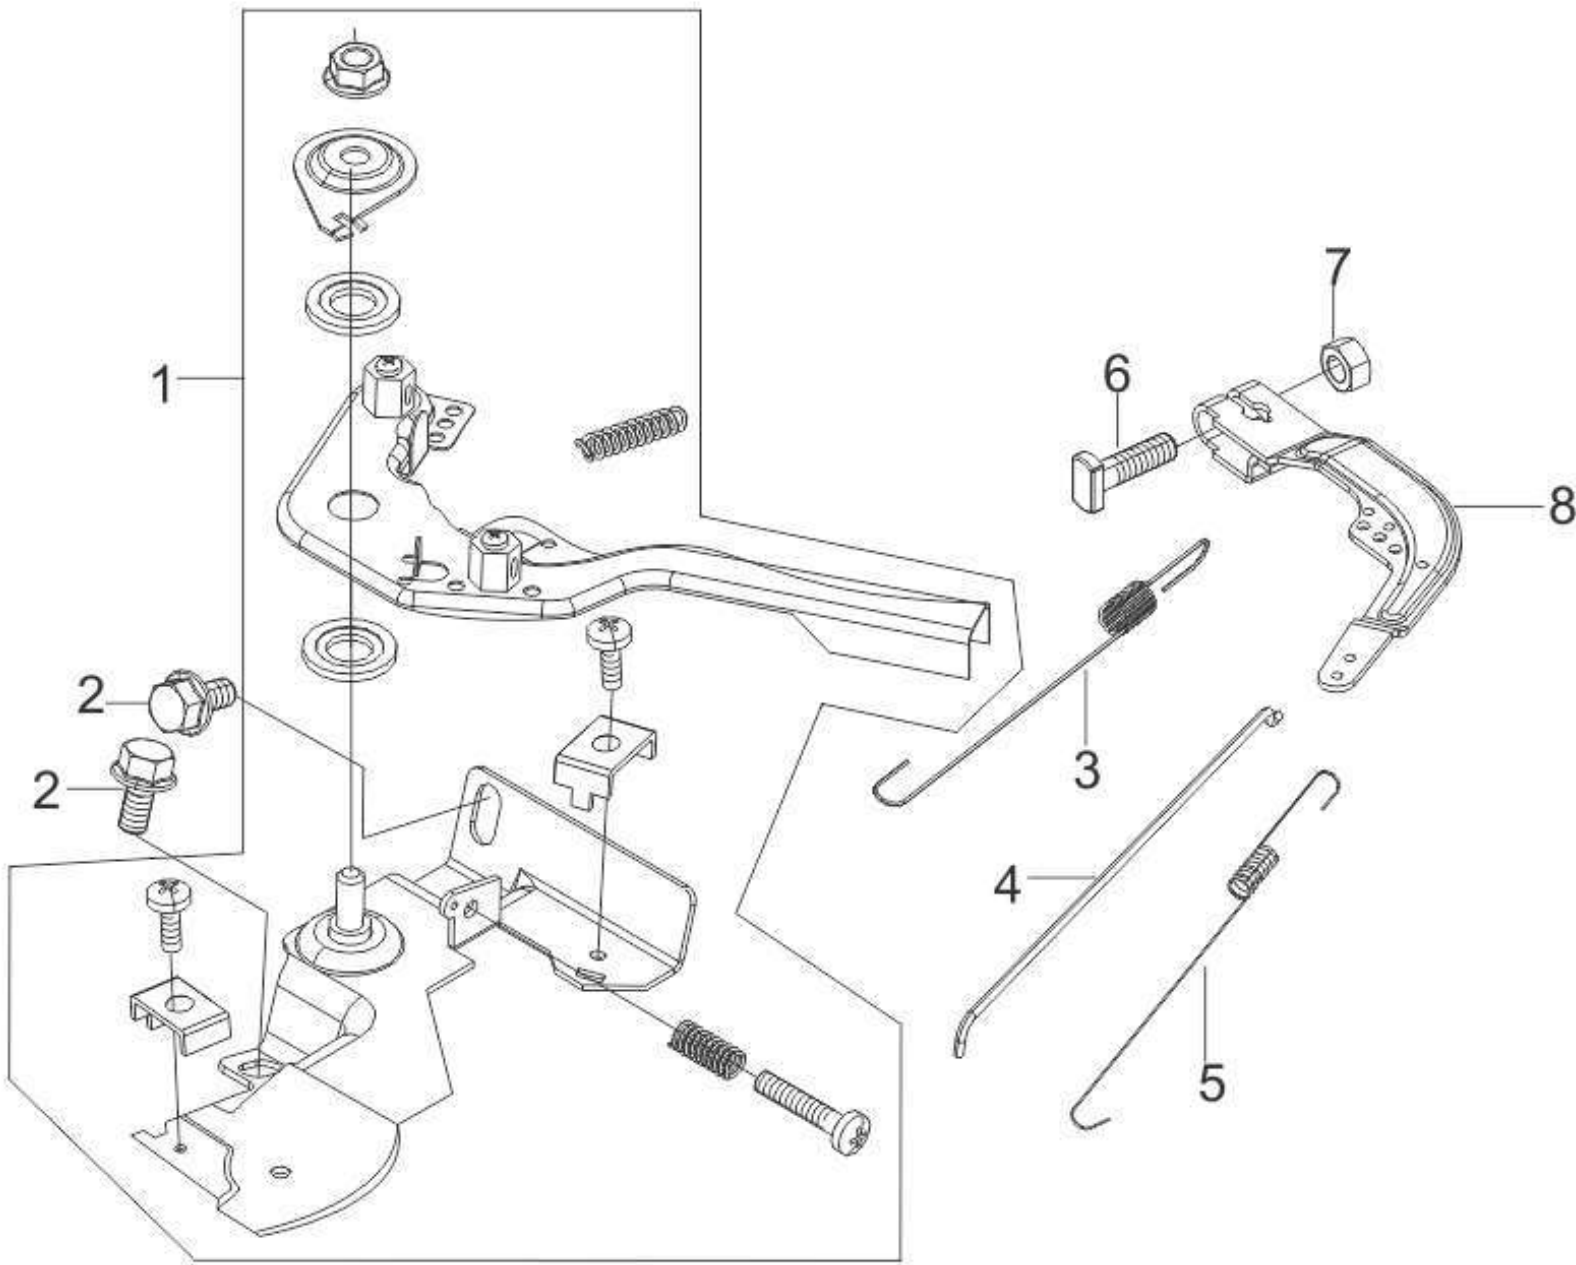


PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
E11-1	11	DA04-LS0312-000409-11-074	CONTROL ASSY, THROTTLE	1
E11-2	11	DA04-LS0312-000409-11-075	BOLT	2
E11-3	11	DA04-LS0312-000409-11-076	SPRING, GOVERNOR	1
E11-4	11	DA04-LS0312-000409-11-077	ROD, GOVERNEOR	1
E11-5	11	DA04-LS0312-000409-11-078	SPRING, THROTTLE VALVE RETURNING	1
E11-6	11	DA04-LS0312-000409-11-079	BOLT, GOVERNOR SUPPORT	1
E11-7	11	DA04-LS0312-000409-11-080	HEXAGON NUT WITH FLANGE	1
E11-8	11	DA04-LS0312-000409-11-081	GOVERNOR BRACKET SUBASSEMBLY	1

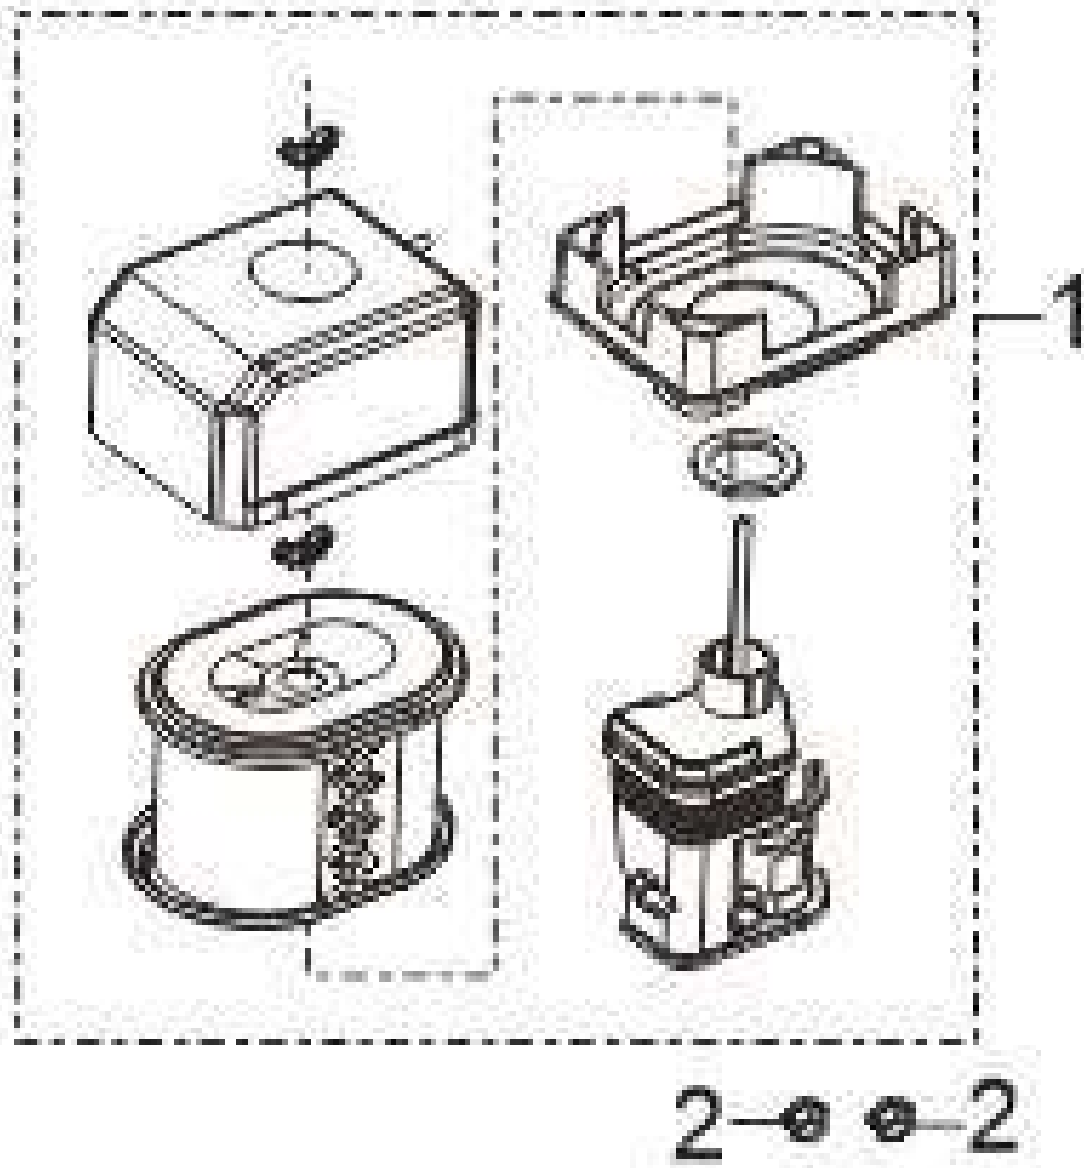


PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
F01-1	12	DA04-LS0312-000409-12-082	AIR CLEANER	1
F01-2	12	DA04-LS0312-000409-12-083	HEXAGON NUT WITH FLANGE	2

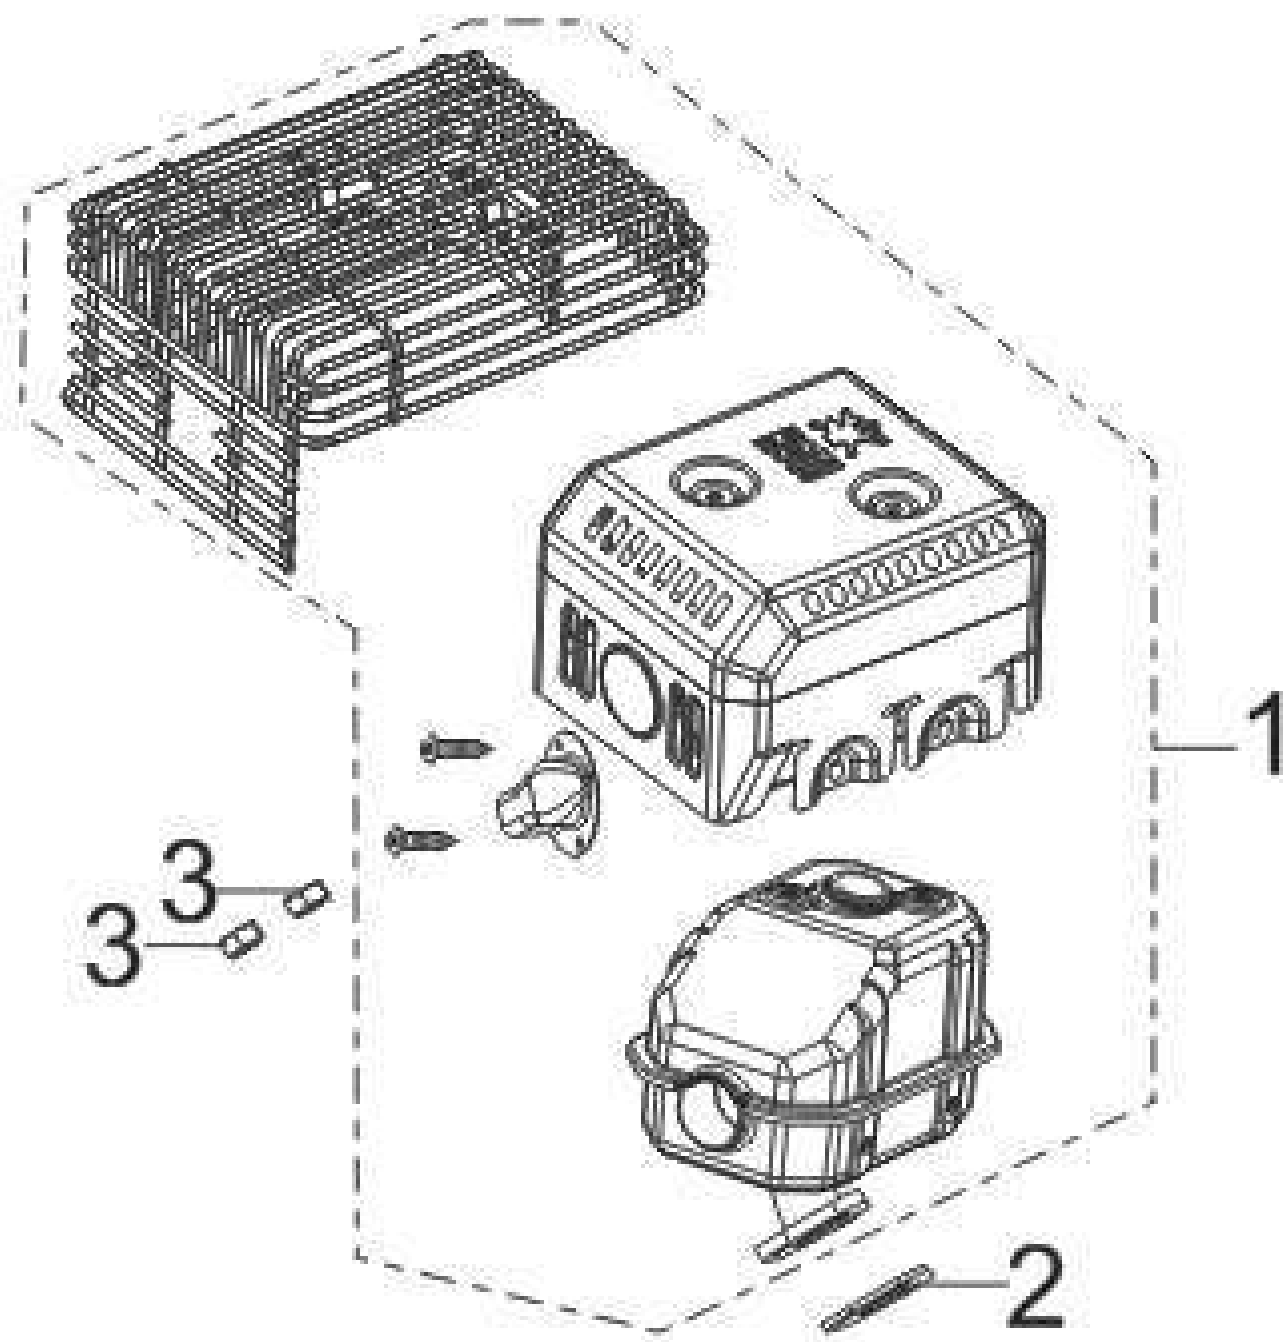

PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
F02-1	13	DA04-LS0312-000409-13-084	MUFFLER ASSY.	1
F02-2	13	DA04-LS0312-000409-13-085	GASKET, EXHAUST OUTLET	1
F02-3	13	DA04-LS0312-000409-13-086	TYPE 1 HEXAGON NUT	2

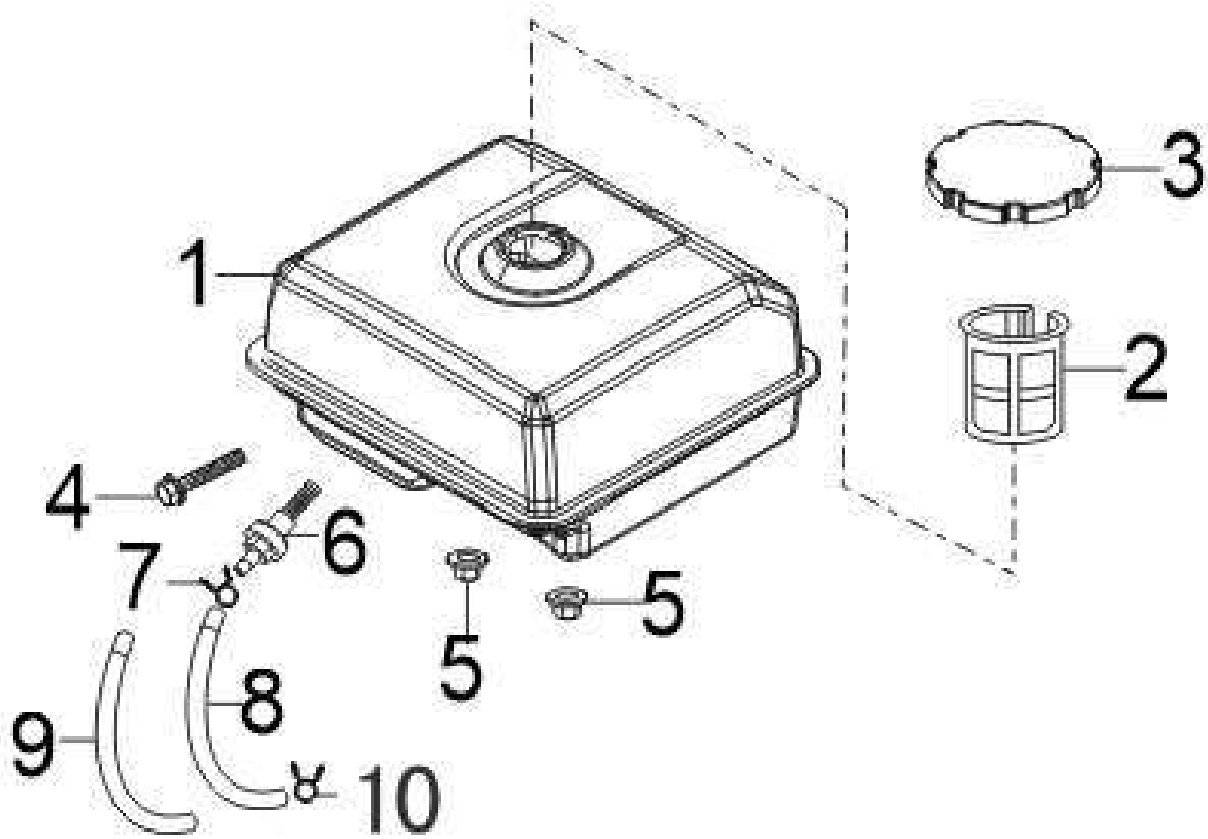

PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
F03-1	14	DA04-LS0312-000409-14-087	FUEL TANK	1
F03-2	14	DA04-LS0312-000409-14-088	STRAINER, FUEL	1
F03-3	14	DA04-LS0312-000409-14-089	COVER, FUEL TANK	1
F03-4	14	DA04-LS0312-000409-14-090	BOLT	1
F03-5	14	DA04-LS0312-000409-14-091	HEXAGON NUT WITH FLANGE	2
F03-6	14	DA04-LS0312-000409-14-092	OUTLET SUBASSEMBLY, FUEL TANK OIL	1
F03-7	14	DA04-LS0312-000409-14-093	COLLAR	1
F03-8	14	DA04-LS0312-000409-14-094	TUBE, FUEL	1
F03-9	14	DA04-LS0312-000409-14-095	JACKET, RUBBER	1
F03-10	14	DA04-LS0312-000409-14-096	COLLAR	1

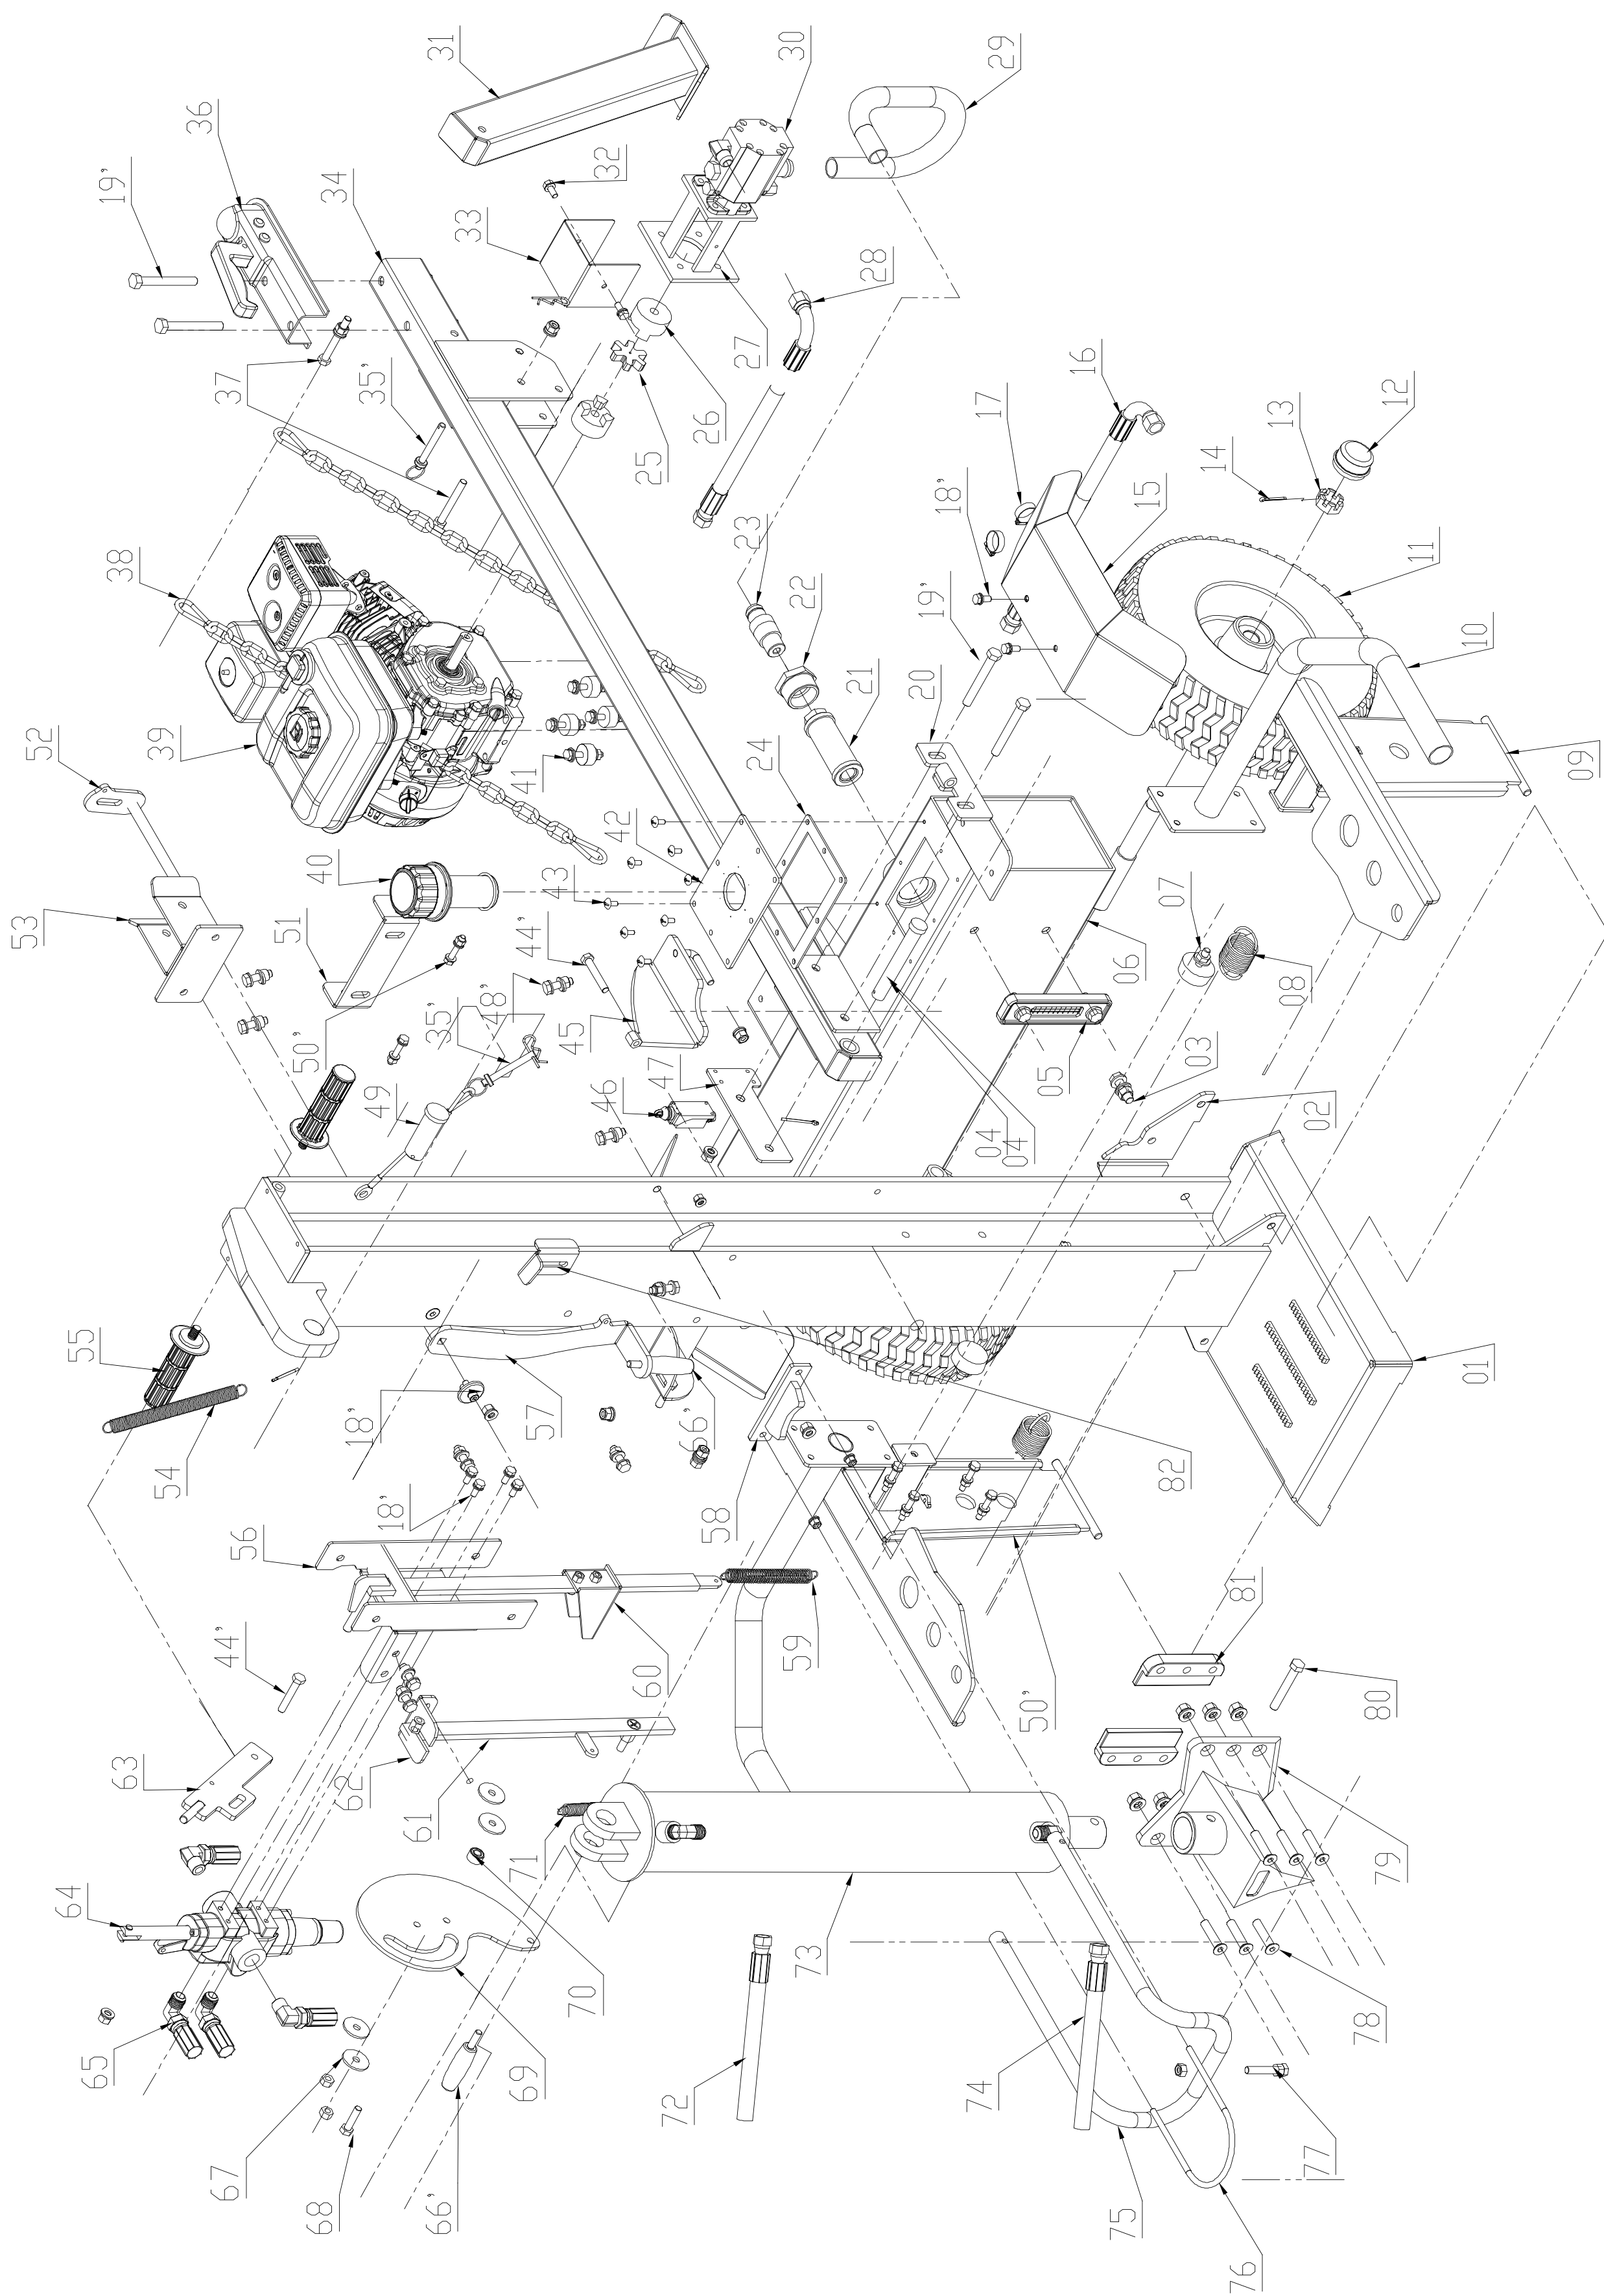

PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
1	15	DA04-LS0312-000409-15-097	beam	1
2	15	DA04-LS0312-000409-15-098	fitting plate	4
3	15	DA04-LS0312-000409-15-099	bolt M12*40	2
4	15	DA04-LS0312-000409-15-100	towbar pin	1
5	15	DA04-LS0312-000409-15-101	oil meter	1
6	15	DA04-LS0312-000409-15-102	tank	1
7	15	DA04-LS0312-000409-15-103	damping rubber	2
8	15	DA04-LS0312-000409-15-104	spring	2
9	15	DA04-LS0312-000409-15-105	hold board(left/right)	1
10	15	DA04-LS0312-000409-15-106	protect pipe	2
11	15	DA04-LS0312-000409-15-107	wheel	2
12	15	DA04-LS0312-000409-15-108	wheel cover	2
13	15	DA04-LS0312-000409-15-109	M24 slot nut	2
14	15	DA04-LS0312-000409-15-110	wheel pin	2
15	15	DA04-LS0312-000409-15-111	mudguard	2
16	15	DA04-LS0312-000409-15-112	oil return hose	1
17	15	DA04-LS0312-000409-15-113	hose buckle	2
18	15	DA04-LS0312-000409-15-114	bolt M8*20	9
19	15	DA04-LS0312-000409-15-115	bolt M12*95	4
20	15	DA04-LS0312-000409-15-116	vertical fitting plate	1
21	15	DA04-LS0312-000409-15-117	oil filter	1
22	15	DA04-LS0312-000409-15-118	filter interface	1
23	15	DA04-LS0312-000409-15-119	connector	1
24	15	DA04-LS0312-000409-15-120	tank seal	1
25	15	DA04-LS0312-000409-15-121	coupler rubber	1
26	15	DA04-LS0312-000409-15-122	coupler set	1
27	15	DA04-LS0312-000409-15-123	connect frame	1
28	15	DA04-LS0312-000409-15-124	pump out hose	1
29	15	DA04-LS0312-000409-15-125	plastic hose	1
30	15	DA04-LS0312-000409-15-126	pump	1
31	15	DA04-LS0312-000409-15-127	forefoot	1
32	15	DA04-LS0312-000409-15-128	bolt M6*20	2
33	15	DA04-LS0312-000409-15-129	frame cover	1
34	15	DA04-LS0312-000409-15-130	towbar	1
35	15	DA04-LS0312-000409-15-131	foot pin	2
36	15	DA04-LS0312-000409-15-132	tow hitch	1
37	15	DA04-LS0312-000409-15-133	bolt M10*80	2
38	15	DA04-LS0312-000409-15-134	chain	2
39	15	DA04-LS0312-000409-15-135	engine	1
40	15	DA04-LS0312-000409-15-136	tank cover filter	1
41	15	DA04-LS0312-000409-15-137	engine damping rubber	4
42	15	DA04-LS0312-000409-15-138	tank cover plate	1
43	15	DA04-LS0312-000409-15-139	screw M6*15	8
44	15	DA04-LS0312-000409-15-140	bolt M10*60	2
45	15	DA04-LS0312-000409-15-141	vertical holder	1
46	15	DA04-LS0312-000409-15-142	switch	1
47	15	DA04-LS0312-000409-15-143	switch fitting plate	1
48	15	DA04-LS0312-000409-15-144	bolt M10*35	4
49	15	DA04-LS0312-000409-15-145	beam pin	1
50	15	DA04-LS0312-000409-15-146	bolt M8*45	6
51	15	DA04-LS0312-000409-15-147	pipe fitting plate	1
52	15	DA04-LS0312-000409-15-148	valve adjust rod	1
53	15	DA04-LS0312-000409-15-149	towbar cramp	1
54	15	DA04-LS0312-000409-15-150	long spring	2
55	15	DA04-LS0312-000409-15-151	beam handle	1
56	15	DA04-LS0312-000409-15-152	valve fitting frame	1
57	15	DA04-LS0312-000409-15-153	right handle frame	1
58	15	DA04-LS0312-000409-15-154	ram holder	1
59	15	DA04-LS0312-000409-15-155	spring	1
60	15	DA04-LS0312-000409-15-156	rod fitting frame	1
61	15	DA04-LS0312-000409-15-157	rod	1
62	15	DA04-LS0312-000409-15-158	rod holding plate	1
63	15	DA04-LS0312-000409-15-159	hang plate	1
64	15	DA04-LS0312-000409-15-160	control valve	1
65	15	DA04-LS0312-000409-15-161	connector 90 degree	5
66	15	DA04-LS0312-000409-15-162	left handle	2
67	15	DA04-LS0312-000409-15-163	washer	4
68	15	DA04-LS0312-000409-15-164	bolt M10*40	1
69	15	DA04-LS0312-000409-15-165	handle plate	1
70	15	DA04-LS0312-000409-15-166	bearing	1
71	15	DA04-LS0312-000409-15-167	spring	1
72	15	DA04-LS0312-000409-15-168	ram top hose	1
73	15	DA04-LS0312-000409-15-169	ram	1
74	15	DA04-LS0312-000409-15-170	ram bottom hose	1
75	15	DA04-LS0312-000409-15-171	safety pipe	1
76	15	DA04-LS0312-000409-15-172	ram hoop	1
77	15	DA04-LS0312-000409-15-173	bolt M8*40	1
78	15	DA04-LS0312-000409-15-174	bolt M12*55	6
79	15	DA04-LS0312-000409-15-175	blade	1
80	15	DA04-LS0312-000409-15-176	bolt M12*80	1
81	15	DA04-LS0312-000409-15-177	blade fitting plate	2
82	15	DA04-LS0312-000409-15-178	spacing plate	1