




DAEWOO
POWER PRODUCTS


DABL7600
GASOLINE BLOWER

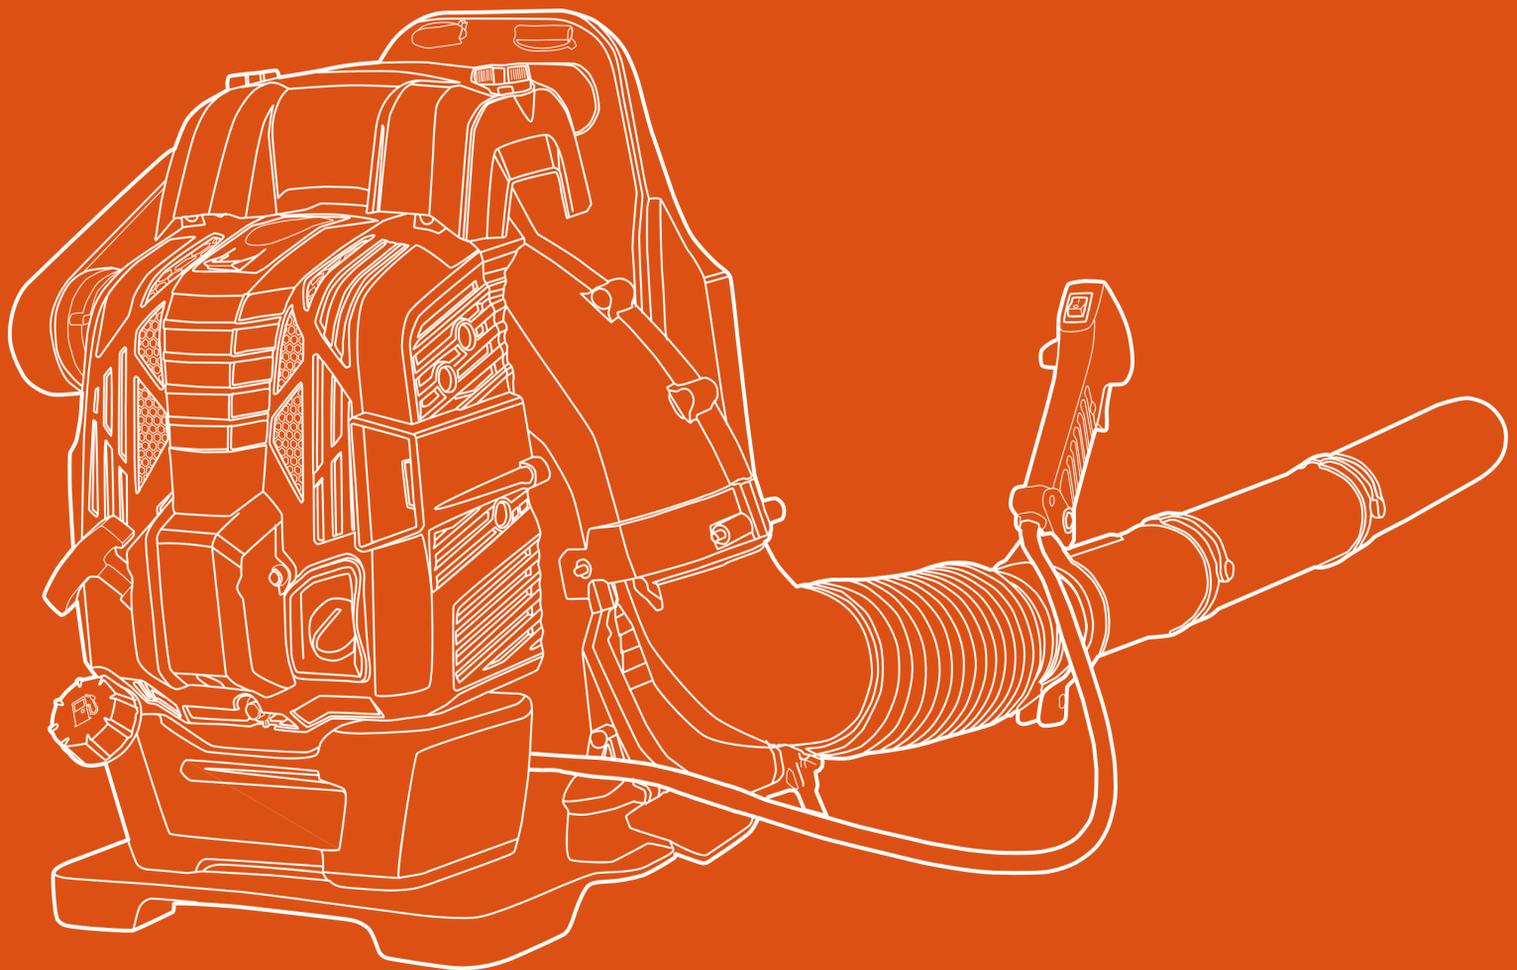

EXPLODED VIEW


www.daewoopowerproducts.com

Manufactured under license of Daewoo International Corporation, Korea
Fabricado bajo licencia de Daewoo International Corporation, Corea

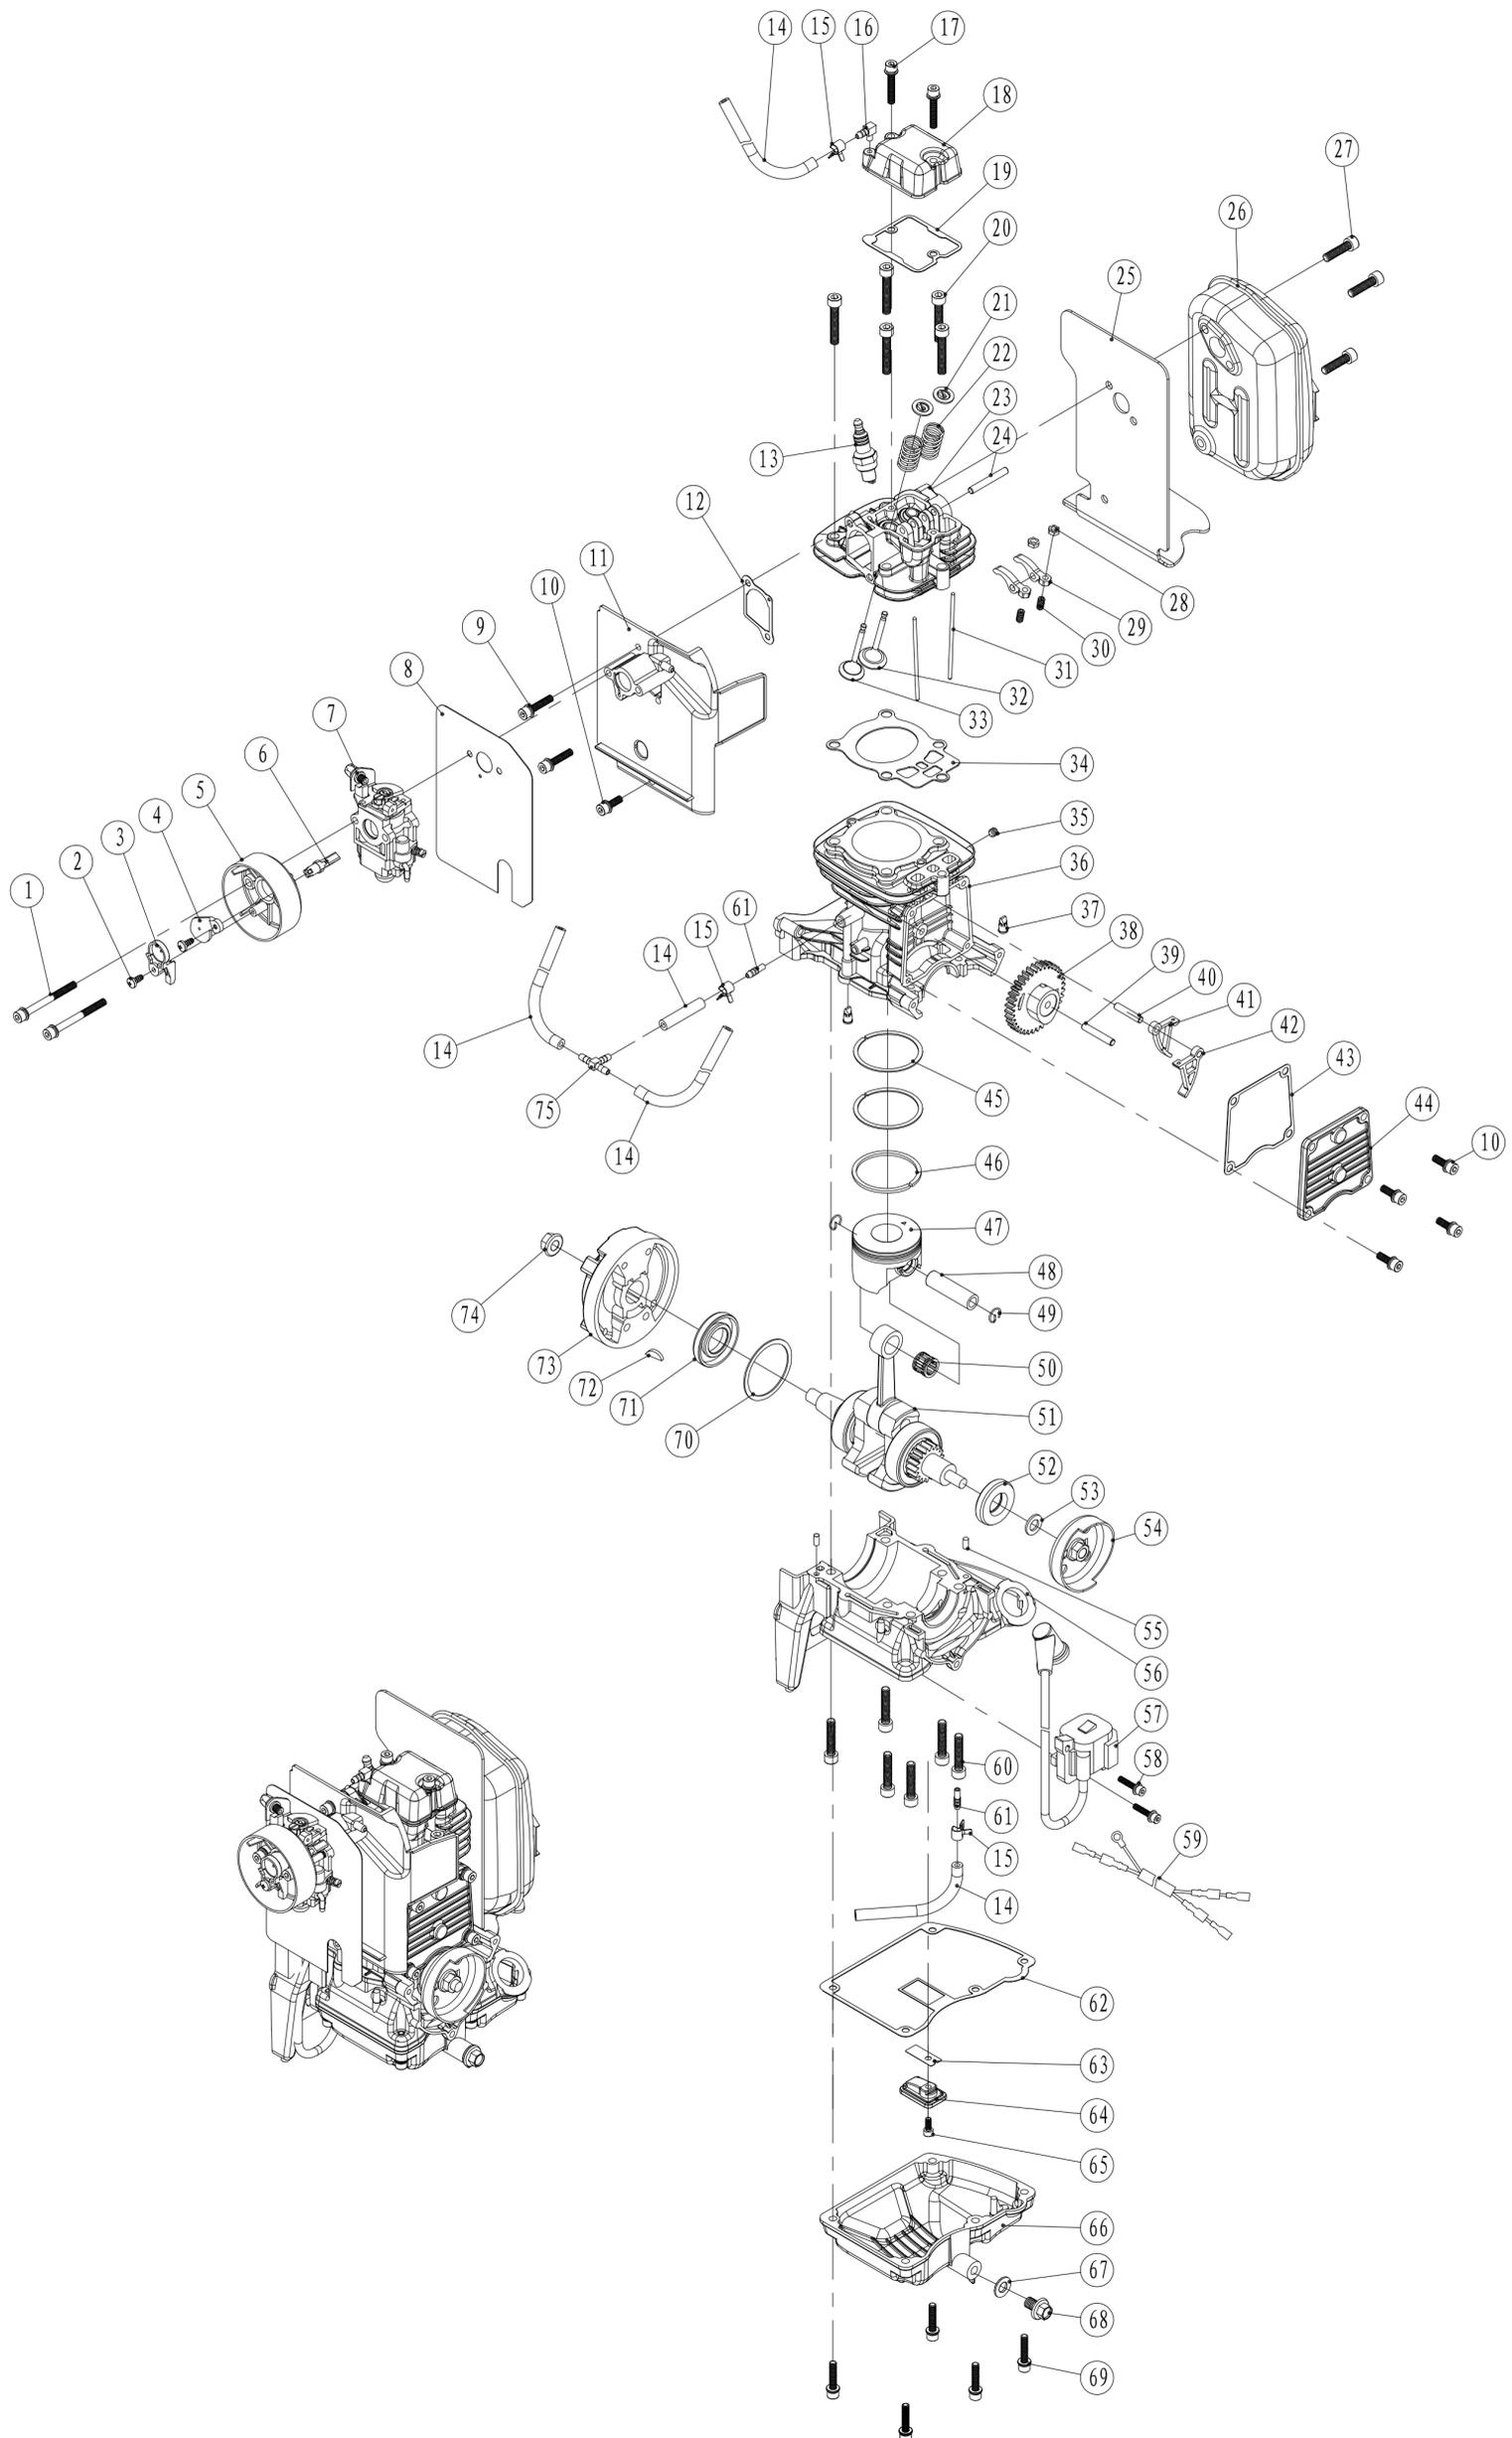

PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
1	1	DA04-LB0611-000189-01-001	Screw M5×55	2
2	1	DA04-LB0611-000189-01-002	Screw 4*8	2
3	1	DA04-LB0611-000189-01-003	Air inlet plate	1
4	1	DA04-LB0611-000189-01-004	Choke cover plate	1
5	1	DA04-LB0611-000189-01-005	Air cleaner holder	1
6	1	DA04-LB0611-000189-01-006	Choke lever	1
7	1	DA04-LB0611-000189-01-007	Carburetor	1
8	1	DA04-LB0611-000189-01-008	Carburetor paper pad	1
9	1	DA04-LB0611-000189-01-009	Bolt M5×25 (hex)	2
10	1	DA04-LB0611-000189-01-010	Bolt M5×16 (hex)	5
11	1	DA04-LB0611-000189-01-011	Inlet pipe	1
12	1	DA04-LB0611-000189-01-012	paper pad (of Inlet pipe)	1
13	1	DA04-LB0611-000189-01-013	Spark plug	1
14	1	DA04-LB0611-000189-01-014	Oil pipe	5
15	1	DA04-LB0611-000189-01-015	Clip of Oil pipe	3
16	1	DA04-LB0611-000189-01-016	Suction mouth	1
17	1	DA04-LB0611-000189-01-017	Bolt M5×30 (hex)	2
18	1	DA04-LB0611-000189-01-018	Head cover	1
19	1	DA04-LB0611-000189-01-019	Paper pad (of Head cover)	1
20	1	DA04-LB0611-000189-01-020	Bolt M6×30 (hex)	5
21	1	DA04-LB0611-000189-01-021	valve spring cover	2
22	1	DA04-LB0611-000189-01-022	valve spring	2
23	1	DA04-LB0611-000189-01-023	Cylinder cover	1
24	1	DA04-LB0611-000189-01-024	Valve arm pin	1
25	1	DA04-LB0611-000189-01-025	Paper pad of muffler	1
26	1	DA04-LB0611-000189-01-026	Muffler	1
27	1	DA04-LB0611-000189-01-027	Screw M6×16 (hex)	3
28	1	DA04-LB0611-000189-01-028	Nut M5	2
29	1	DA04-LB0611-000189-01-029	Valve arm	2
30	1	DA04-LB0611-000189-01-030	Screw M5×10 (hex)	2
31	1	DA04-LB0611-000189-01-031	Push rod (of cam)	2
32	1	DA04-LB0611-000189-01-032	exhaust valve	1
33	1	DA04-LB0611-000189-01-033	exhaust valve	1
34	1	DA04-LB0611-000189-01-034	Paper pad (of cylinder cover)	1
35	1	DA04-LB0611-000189-01-035	Screw M6×5 (hex)	1
36	1	DA04-LB0611-000189-01-036	Cylinder	1
37	1	DA04-LB0611-000189-01-037	Inlet valve	2
38	1	DA04-LB0611-000189-01-038	Gear	1
39	1	DA04-LB0611-000189-01-039	Gear pin	1
40	1	DA04-LB0611-000189-01-040	Swing arm pin	1
41	1	DA04-LB0611-000189-01-041	Right Swing arm	1
42	1	DA04-LB0611-000189-01-042	Right Swing arm	1
43	1	DA04-LB0611-000189-01-043	Paper pad (of cylinder side cover)	1
44	1	DA04-LB0611-000189-01-044	cylinder side cover	1
45	1	DA04-LB0611-000189-01-045	Piston ring	2
46	1	DA04-LB0611-000189-01-046	Oil ring	1
47	1	DA04-LB0611-000189-01-047	Piston	1
48	1	DA04-LB0611-000189-01-048	Piston pin	1
49	1	DA04-LB0611-000189-01-049	Piston pin spring	2
50	1	DA04-LB0611-000189-01-050	Needle bearing	1

PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
51	1	DA04-LB0611-000189-01-051	Crankshaft	1
52	1	DA04-LB0611-000189-01-052	Oil seal 17*35*8	1
53	1	DA04-LB0611-000189-01-053	Flat washer 8	1
54	1	DA04-LB0611-000189-01-054	driving plate	1
55	1	DA04-LB0611-000189-01-055	Round pin 4*8	2
56	1	DA04-LB0611-000189-01-056	Aluminum case	1
57	1	DA04-LB0611-000189-01-057	Ignition	1
58	1	DA04-LB0611-000189-01-058	Bolt M4×20 (HEX)	2
59	1	DA04-LB0611-000189-01-059	Off line	1
60	1	DA04-LB0611-000189-01-060	Bolt M6×30 (HEX)	6
61	1	DA04-LB0611-000189-01-061	Suction mouth	2
62	1	DA04-LB0611-000189-01-062	Paper pad (of oil tank)	1
63	1	DA04-LB0611-000189-01-063	Valve plate	1
64	1	DA04-LB0611-000189-01-064	Valve plate cover	1
65	1	DA04-LB0611-000189-01-065	screw M4×10(hex)	1
66	1	DA04-LB0611-000189-01-066	Engine tank base	1
67	1	DA04-LB0611-000189-01-067	Flat washer 8	1
68	1	DA04-LB0611-000189-01-068	Screw M8×12	1
69	1	DA04-LB0611-000189-01-069	Bolt M5×35 (HEX)	5
70	1	DA04-LB0611-000189-01-070	Washer 40*49*1	1
71	1	DA04-LB0611-000189-01-071	Oil seal 20*47*8	1
72	1	DA04-LB0611-000189-01-072	half round key 4*13	1
73	1	DA04-LB0611-000189-01-073	Flywheel	1
74	1	DA04-LB0611-000189-01-074	Screw M10	1
75	1	DA04-LB0611-000189-01-075	T Junction	1

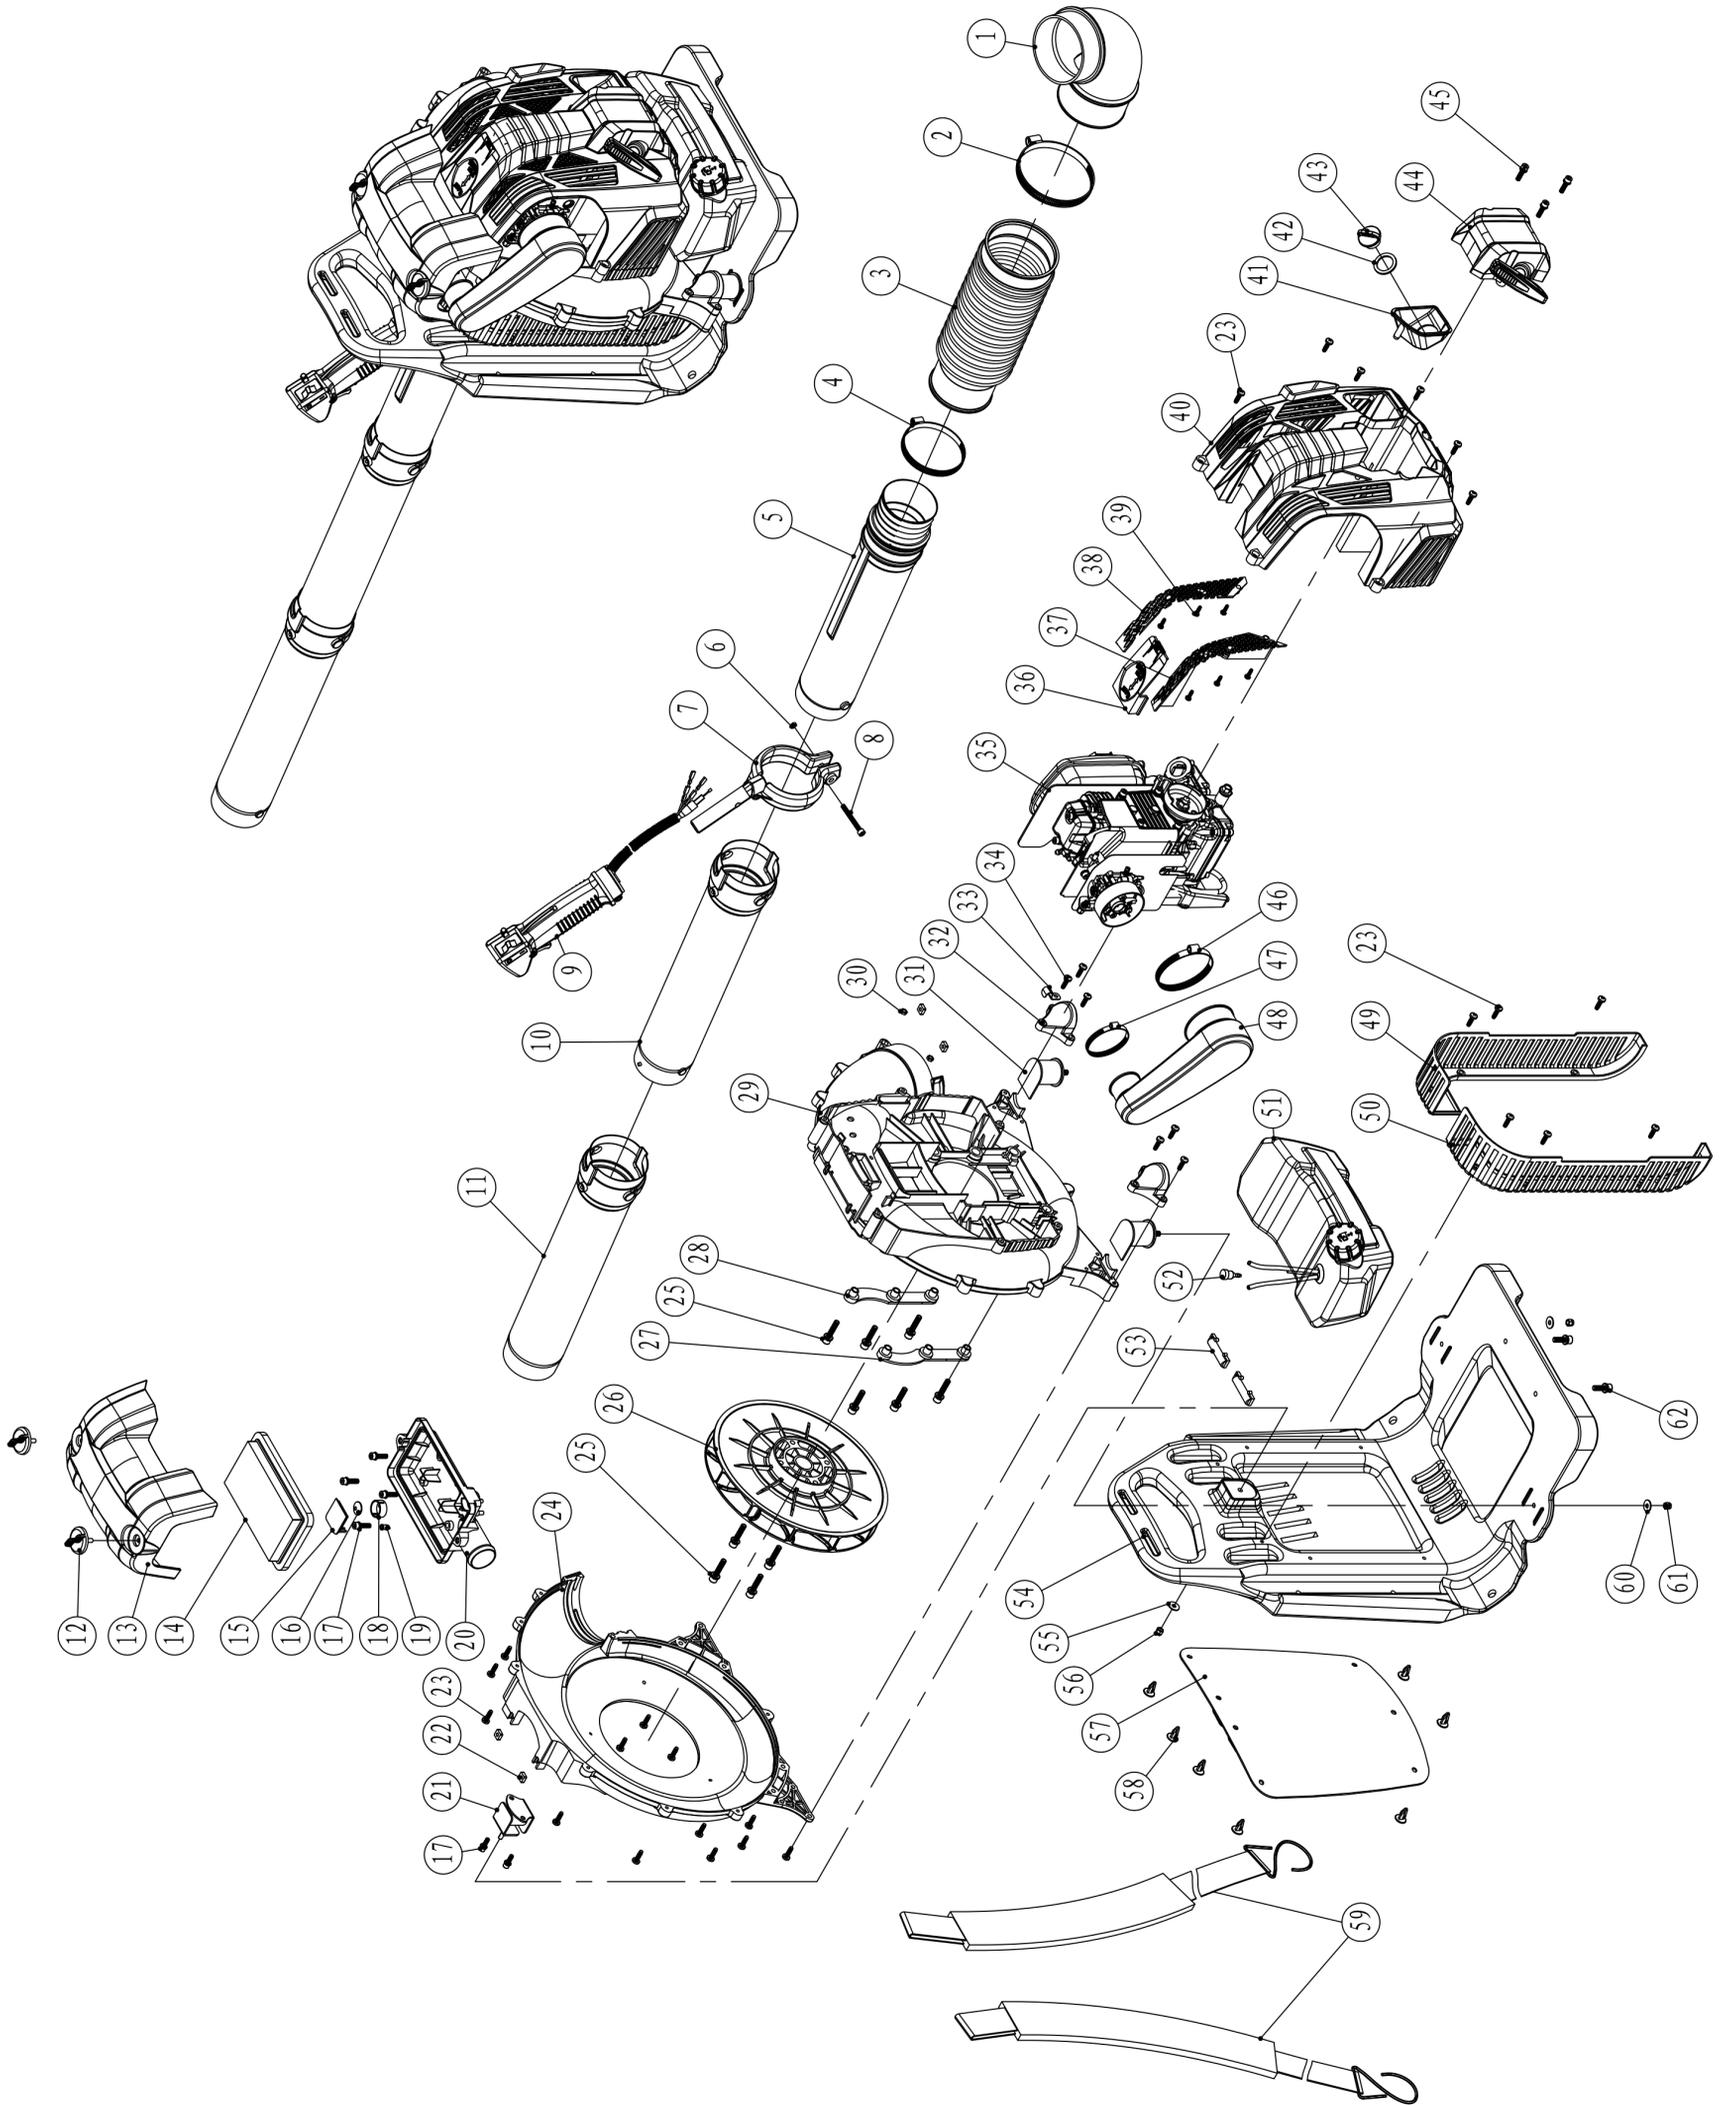

PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
1	2	DA04-LB0611-000189-02-076	Elbow	1
2	2	DA04-LB0611-000189-02-077	Hose band	1
3	2	DA04-LB0611-000189-02-078	Flexible pipe	1
4	2	DA04-LB0611-000189-02-079	Hose band	1
5	2	DA04-LB0611-000189-02-080	Swivel pipe	1
6	2	DA04-LB0611-000189-02-081	butterfly nut M6	1
7	2	DA04-LB0611-000189-02-082	Handle holder	1
8	2	DA04-LB0611-000189-02-083	Screw M6*45	1
9	2	DA04-LB0611-000189-02-084	Switch handle	1
10	2	DA04-LB0611-000189-02-085	Long tube	1
11	2	DA04-LB0611-000189-02-086	Long tube	1
12	2	DA04-LB0611-000189-02-087	Plastic nut	2
13	2	DA04-LB0611-000189-02-088	Air cleaner cover	1
14	2	DA04-LB0611-000189-02-089	Air cleaner	1
15	2	DA04-LB0611-000189-02-090	Air cleaner press plate	1
16	2	DA04-LB0611-000189-02-091	Inlet valve	1
17	2	DA04-LB0611-000189-02-092	Screw M5*20	6
18	2	DA04-LB0611-000189-02-093	Inlet valve cap	1
19	2	DA04-LB0611-000189-02-094	Small ventilation mouth	1
20	2	DA04-LB0611-000189-02-095	Air cleaner base	1
21	2	DA04-LB0611-000189-02-096	Knapsack Damping	1
22	2	DA04-LB0611-000189-02-097	Square nut M5	4
23	2	DA04-LB0611-000189-02-098	Screw 5*16	25
24	2	DA04-LB0611-000189-02-099	Front wind cover	1
25	2	DA04-LB0611-000189-02-100	Screw M6*30	10
26	2	DA04-LB0611-000189-02-101	Wind wheel	1
27	2	DA04-LB0611-000189-02-102	Right depression bar	1
28	2	DA04-LB0611-000189-02-103	Left depression bar	1
29	2	DA04-LB0611-000189-02-104	Back wind cover	1
30	2	DA04-LB0611-000189-02-105	Nut M5	2
31	2	DA04-LB0611-000189-02-106	Base Damping	2
32	2	DA04-LB0611-000189-02-107	Press plate of Base Damping	2
33	2	DA04-LB0611-000189-02-108	Wire clip	1
34	2	DA04-LB0611-000189-02-109	Screw 5*18	6
35	2	DA04-LB0611-000189-02-110	Engine	1

PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
36	2	DA04-LB0611-000189-02-111	Spark plug cover	1
37	2	DA04-LB0611-000189-02-112	Right mesh	1
38	2	DA04-LB0611-000189-02-113	Left mesh	1
39	2	DA04-LB0611-000189-02-114	Screw 4*8	6
40	2	DA04-LB0611-000189-02-115	Housing	1
41	2	DA04-LB0611-000189-02-116	Oil port jacket	1
42	2	DA04-LB0611-000189-02-117	Oil cap gasket	1
43	2	DA04-LB0611-000189-02-118	Oil cap	1
44	2	DA04-LB0611-000189-02-119	Starter	1
45	2	DA04-LB0611-000189-02-120	Screw M5*20	3
46	2	DA04-LB0611-000189-02-121	Clamp	1
47	2	DA04-LB0611-000189-02-122	Clamp	1
48	2	DA04-LB0611-000189-02-123	Soft tube (of air cleaner)	1
49	2	DA04-LB0611-000189-02-124	Right protect net	1
50	2	DA04-LB0611-000189-02-125	Left protect net	1
51	2	DA04-LB0611-000189-02-126	Fuel tank	1
52	2	DA04-LB0611-000189-02-127	Balancer	1
53	2	DA04-LB0611-000189-02-128	Straps buckle	2
54	2	DA04-LB0611-000189-02-129	Knapsack	1
55	2	DA04-LB0611-000189-02-130	Flat washer	1
56	2	DA04-LB0611-000189-02-131	Nut M5	1
57	2	DA04-LB0611-000189-02-132	Knapsack cushion	1
58	2	DA04-LB0611-000189-02-133	Plastic clip	7
59	2	DA04-LB0611-000189-02-134	Straps	1
60	2	DA04-LB0611-000189-02-135	Flat washer	2
61	2	DA04-LB0611-000189-02-136	Nut M6	2
62	2	DA04-LB0611-000189-02-137	Screw M6*20	2