




**DAEWOO**  
POWER PRODUCTS


**DABL4300**  
GASOLINE LEAF BLOWER

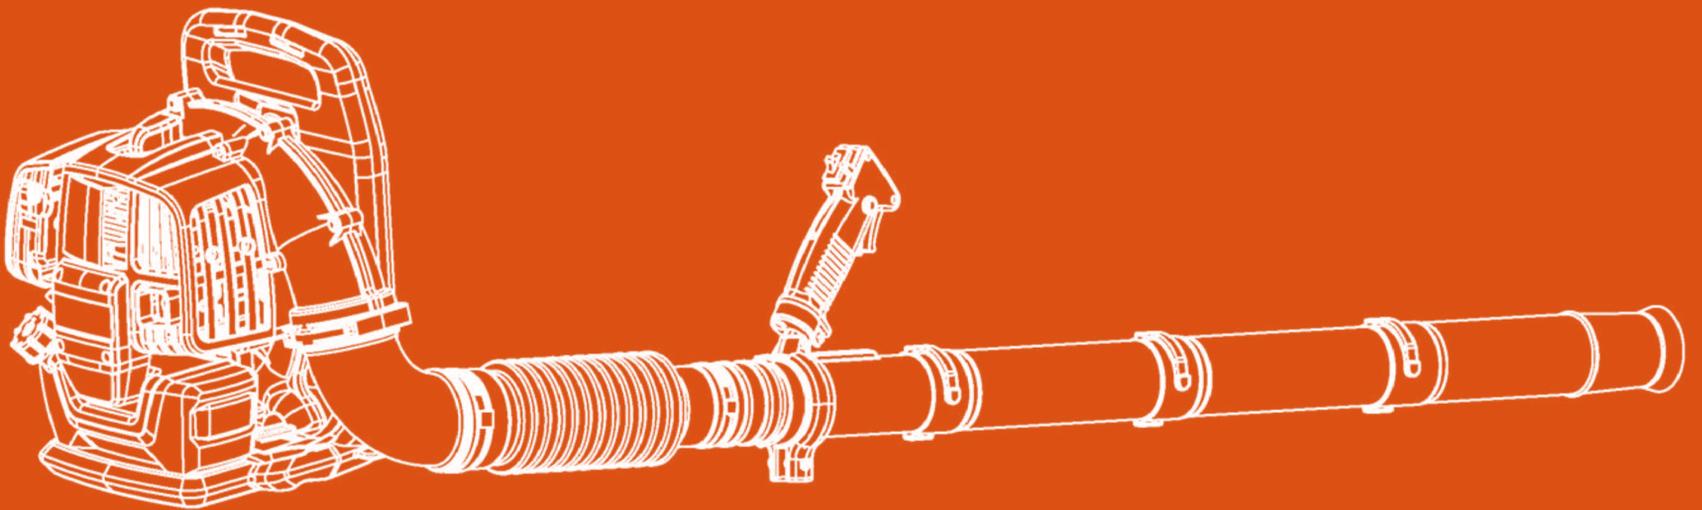

**EXPLODED VIEW / DESPIECE / VUE ÉCLATÉE**

[www.daewoopowerproducts.com](http://www.daewoopowerproducts.com)

Manufactured under license of Daewoo International Corporation, Korea  
Fabricado bajo licencia de Daewoo International Corporation, Corea

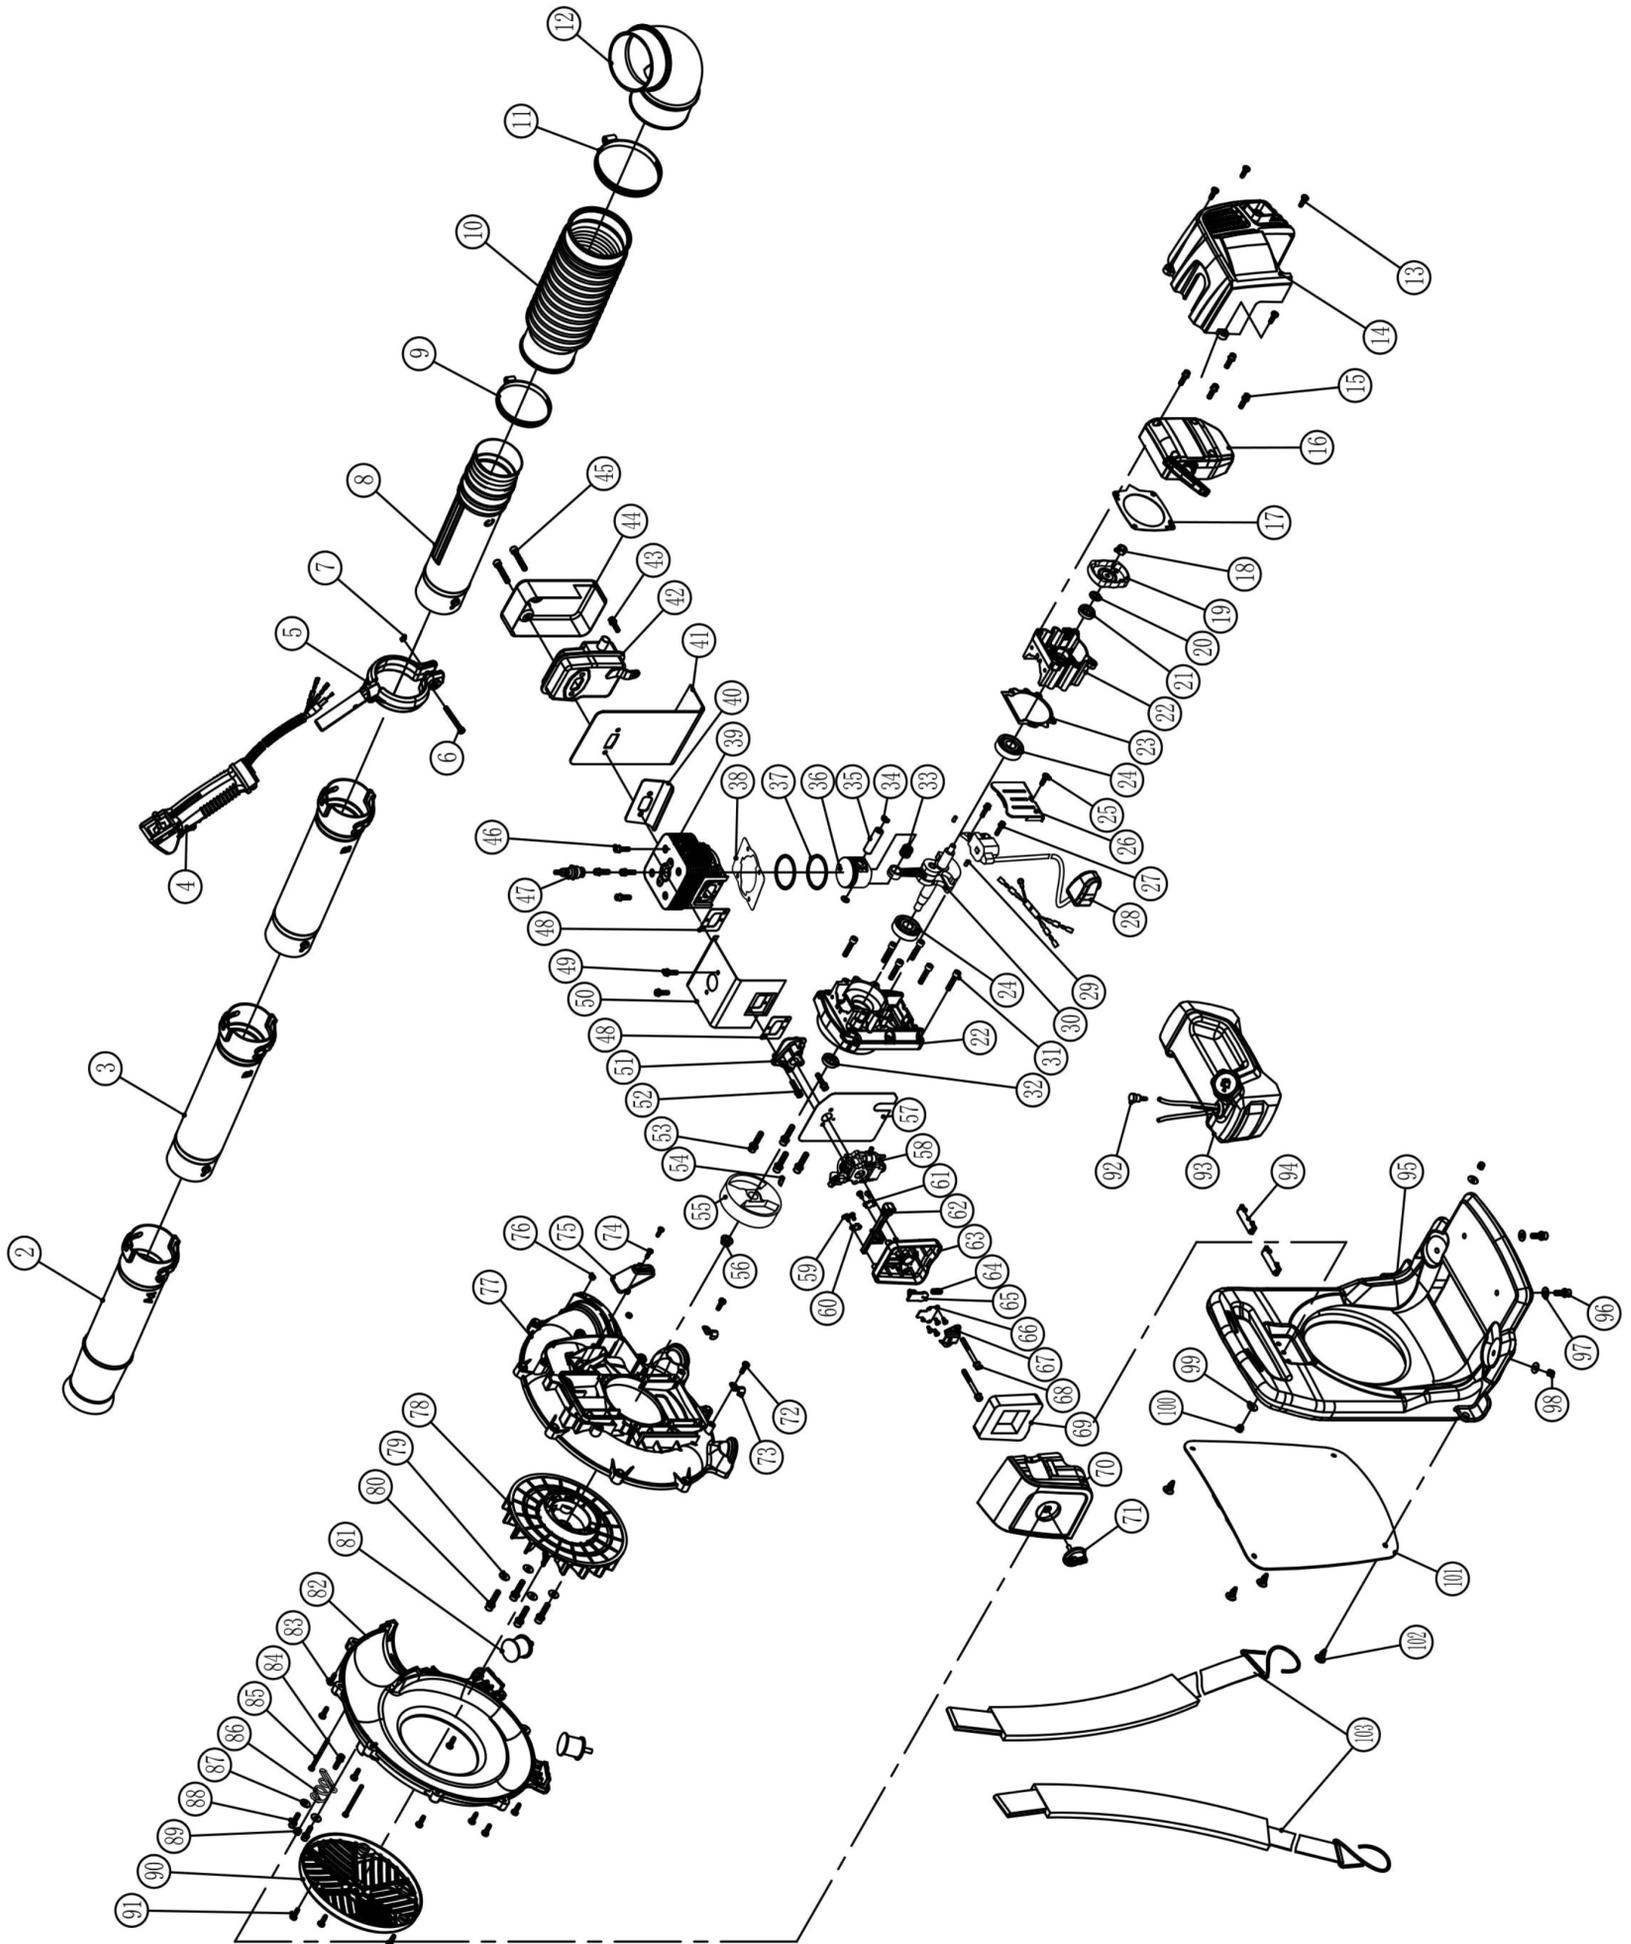

PART NO.	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
2	DA04-LB2211-000189-00-001	Round mouth pipe	1
3	DA04-LB2211-000189-00-002	Extension Blower Pipe	2
4	DA04-LB2211-000189-00-003	Switch	1
5	DA04-LB2211-000189-00-004	Switch Seat	1
6	DA04-LB2211-000189-00-005	Hex Screw M6*45	1
7	DA04-LB2211-000189-00-006	Butter Nut	1
8	DA04-LB2211-000189-00-007	Main Blower Pipe	1
9	DA04-LB2211-000189-00-008	Clamp Small 60-80	1
10	DA04-LB2211-000189-00-009	Bellow	1
11	DA04-LB2211-000189-00-010	Clamp Big 80-100	1
12	DA04-LB2211-000189-00-011	Corner Joint	1
13	DA04-LB2211-000189-00-012	Cross head tapping screw	4
14	DA04-LB2211-000189-00-013	Housing	1
15	DA04-LB2211-000189-00-014	Socket head set screw	4
16	DA04-LB2211-000189-00-015	Starter	1
17	DA04-LB2211-000189-00-016	Starter Aluminum gasket	1
18	DA04-LB2211-000189-00-017	Flage Nut	1
19	DA04-LB2211-000189-00-018	Aluminum Plate	1
20	DA04-LB2211-000189-00-019	Flat washer	1
21	DA04-LB2211-000189-00-020	Oil Seal	1
22	DA04-LB2211-000189-00-021	Crankcase	1
23	DA04-LB2211-000189-00-022	Case Paper Gasket	1
24	DA04-LB2211-000189-00-023	Bearing	2
25	DA04-LB2211-000189-00-024	Socket head set screw	1
26	DA04-LB2211-000189-00-025	Ignition Cover	1
27	DA04-LB2211-000189-00-026	Socket head set screw	2
28	DA04-LB2211-000189-00-027	Ignition Coil	1
29	DA04-LB2211-000189-00-028	Round Pin	2
30	DA04-LB2211-000189-00-029	Crankshaft	1
31	DA04-LB2211-000189-00-030	Socket head set screw	6
32	DA04-LB2211-000189-00-031	Oil Seal	1
33	DA04-LB2211-000189-00-032	Needle bearing	1
34	DA04-LB2211-000189-00-033	Piston Pin Circlip 10	2
35	DA04-LB2211-000189-00-034	Piston Pin	1
36	DA04-LB2211-000189-00-035	Piston	1
37	DA04-LB2211-000189-00-036	Piston Ring	2
38	DA04-LB2211-000189-00-037	Cylinder Gasket	1
39	DA04-LB2211-000189-00-038	Cylinder	1
40	DA04-LB2211-000189-00-039	Muffler Gasket Small	1
41	DA04-LB2211-000189-00-040	Muffler Gasket Big	1
42	DA04-LB2211-000189-00-041	Muffler	1
43	DA04-LB2211-000189-00-042	Socket head set screw	1
44	DA04-LB2211-000189-00-043	Muffler Cover	1
45	DA04-LB2211-000189-00-044	Socket head set screw	2
46	DA04-LB2211-000189-00-045	Socket head set screw	4
47	DA04-LB2211-000189-00-046	Spark Plug	1
48	DA04-LB2211-000189-00-047	Intake Tube Paper Gasket	2
49	DA04-LB2211-000189-00-048	Socket head set screw	2
50	DA04-LB2211-000189-00-049	Air Deflector	1
51	DA04-LB2211-000189-00-050	Intake Tube	1
52	DA04-LB2211-000189-00-051	Socket head set screw	3
53	DA04-LB2211-000189-00-052	Socket head set screw	4

PART NO.	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
54	DA04-LB2211-000189-00-053	Woodruff Key	1
55	DA04-LB2211-000189-00-054	Flywheel	1
56	DA04-LB2211-000189-00-055	Flange Nut	1
57	DA04-LB2211-000189-00-056	Carburetor Gasket	1
58	DA04-LB2211-000189-00-057	Carburetor	1
59	DA04-LB2211-000189-00-058	Cross tapping screws	8
60	DA04-LB2211-000189-00-059	Air Filter press plate small	1
61	DA04-LB2211-000189-00-060	Air Filter press plate medium	1
62	DA04-LB2211-000189-00-061	Air Filter pull rod	1
63	DA04-LB2211-000189-00-062	Air Filter holder	1
64	DA04-LB2211-000189-00-063	conical spring	1
65	DA04-LB2211-000189-00-064	Ventilation Switch	1
66	DA04-LB2211-000189-00-065	Air Filter press plate big	1
67	DA04-LB2211-000189-00-066	Air Filter iron plate	1
68	DA04-LB2211-000189-00-067	Socket head set screw	2
69	DA04-LB2211-000189-00-068	Sponge of Air filter	1
70	DA04-LB2211-000189-00-069	Air Filter Cover	1
71	DA04-LB2211-000189-00-070	Rotary knob	1
72	DA04-LB2211-000189-00-071	Cross tapping screws	2
73	DA04-LB2211-000189-00-072	Cable iron clip	2
74	DA04-LB2211-000189-00-073	Cross tapping screws	2
75	DA04-LB2211-000189-00-074	Air deflector	1
76	DA04-LB2211-000189-00-075	Hex flange Nut	2
77	DA04-LB2211-000189-00-076	Back Wind Cover	1
78	DA04-LB2211-000189-00-077	Wind wheel	1
79	DA04-LB2211-000189-00-078	Flat washer	4
80	DA04-LB2211-000189-00-079	Socket head set screw	4
81	DA04-LB2211-000189-00-080	Rubber damper	2
82	DA04-LB2211-000189-00-081	Front Wind Cover	1
83	DA04-LB2211-000189-00-082	Cross head tapping screw	8
84	DA04-LB2211-000189-00-083	Socket head set screw	1
85	DA04-LB2211-000189-00-084	Socket head set screw	2
86	DA04-LB2211-000189-00-085	Spring Anti-Vibration	1
87	DA04-LB2211-000189-00-086	Flat washer	2
88	DA04-LB2211-000189-00-087	Socket head set screw	2
89	DA04-LB2211-000189-00-088	Flange Nut	1
90	DA04-LB2211-000189-00-089	Protect cover	1
91	DA04-LB2211-000189-00-090	Cross head tapping screw	3
92	DA04-LB2211-000189-00-091	Blancer	1
93	DA04-LB2211-000189-00-092	Fuel Tank	1
94	DA04-LB2211-000189-00-093	Shoulder Belt Buckle	2
95	DA04-LB2211-000189-00-094	Shoulder Brace	1
96	DA04-LB2211-000189-00-095	Socket head set screw	2
97	DA04-LB2211-000189-00-096	Flat washer	4
98	DA04-LB2211-000189-00-097	Locknut M6	2
99	DA04-LB2211-000189-00-098	Flat washer	1
100	DA04-LB2211-000189-00-099	Locknut M5	1
101	DA04-LB2211-000189-00-100	Cushion	1
102	DA04-LB2211-000189-00-101	Buckle	4
103	DA04-LB2211-000189-00-102	Shoulder Belt	1