


AGM BMT 3421



Engine

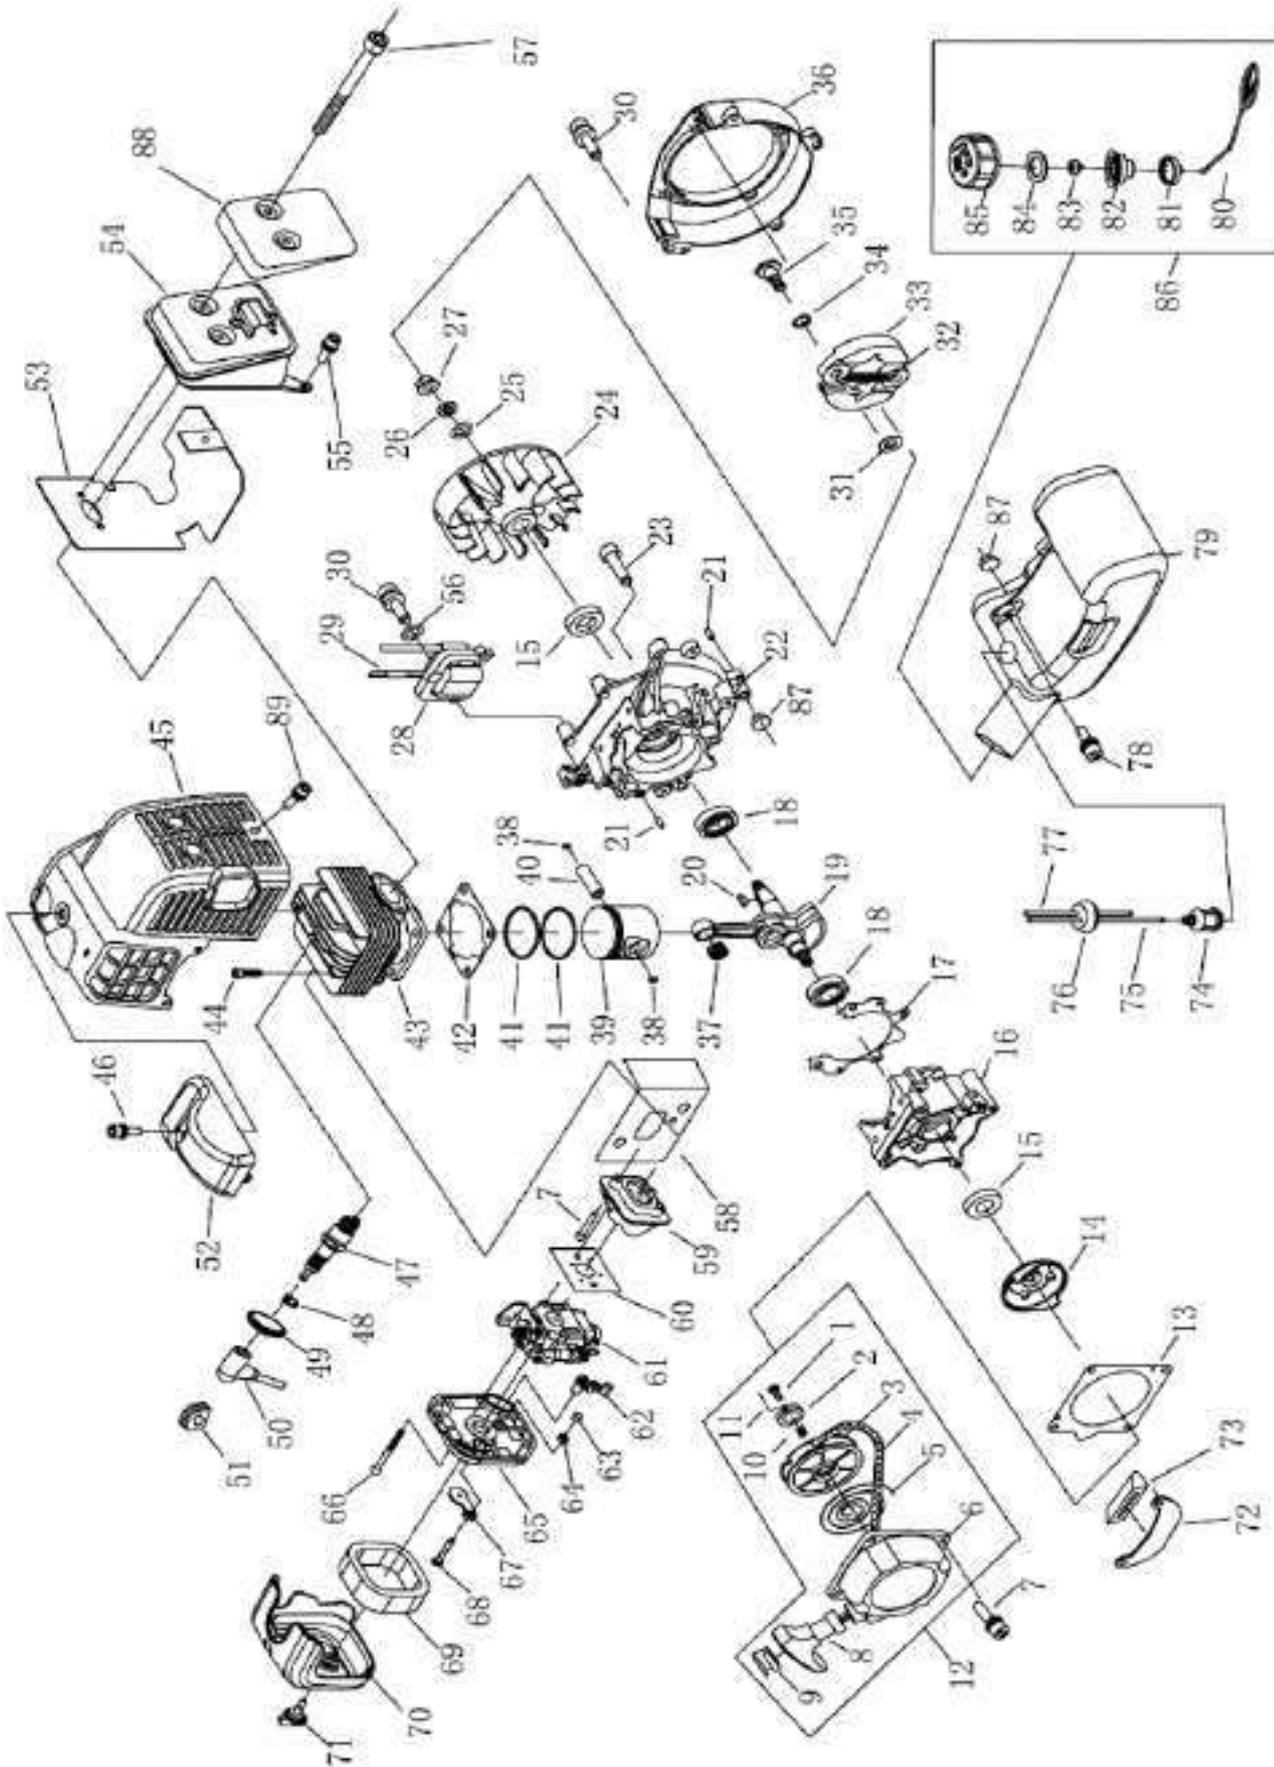


EXPLODED PARTS LIST

AGM BMT 3421

No	Code	Name	Qty	No	Code	Name	Qty
1		SCREW	1	48	065677	SPRING	1
2		RATCHET	1	49		PLUG CAP	1
3		START ROPE REEL	1	50	065678	CAP	1
4		ROPE	1	51	077553	PLUG	1
5		RECOIL SPRING	1	52	077465	COVER	1
6		START COVER ASS'Y	1	53	077466	GASKET	1
7		SCREW	6	54		MUFFLER	1
8	019829	START HANDLE	1	55		SCREW	1
9		RING	1	56		GASKET	2
10		SPRING	1	57		SCREW	2
11		START POLE	2	58		GASKET	1
12	015417	STARTER	1	59	077469	ADMITTING PIPE	1
13	013531	GASKET	1	60	013454	GASKET	1
14	009827	START REEL	1	61	043618	CARBURETOR	1
15	077447	OIL-SEAL	2	62		CHOKER HANDLE	1
16	077448	CRANK CASE	1	63		STOP RING	1
17	077449	GASKET	1	64		NUT M4	1
18		BEARING	2	65	077472	CLEANER INSIDE COVER	1
19	077450	CRANK SHAFT	1	66		SCREW	2
20	077411	KEY	1	67		CHOKER	1
21		PIN	4	68		SCREW	1
22	077451	CRANK CASE	1	69	077473	FILTER NET	1
23		SCREW	4	70	077474	CLEANER OUTSIDE COVER	1
24		MAGNETO ROTOR COMP.	1	71		SCREW	1
25		WASHER	1	72	077541	STAND	1
26		WASHER	1	73		RUBBER COVER	1
27		NUT	1	74		CLEANER COVER	1
28		IGNITION COIL COMP.	1	75	028392	FUEL PIPE	1
29		CORD COMP.	1	76	020857	PLUG	1
30		SCREW	6	77		FUEL PIPE	1
31		WASHER	2	78		SCREW	2
32		SPRING	1	79	077443	FUEL TANK	1
33		EXPANDER	2	80		CHAIN	1
34		WASHER	2	81		END COVER	1
35	024167	SCREW PIN	2	82		INSIDE COVER	1
36	077456	FAN COVER	1	83		INLET	1
37	077457	BEARING	1	84		GASKET	1
38	077458	RING	2	85	016269	FUEL TANK LID	1
39		PISTON	1	86	010886	LID ASS'Y	1
40	010880	PISTON PIN	1	87	077545	RUBBER WASHER	2
41	077461	PISTON RING	2	88		COVER	1
42	077462	GASKET	1	89		SCREW	1
43	077463	CYLINDER	1				
44		SCREW	4				
45	077464	GUIDE COVER ASS'Y	1				
46		SCREW	1				
47		SPARK PLUG	1				

Engine

AGM BMT 3421

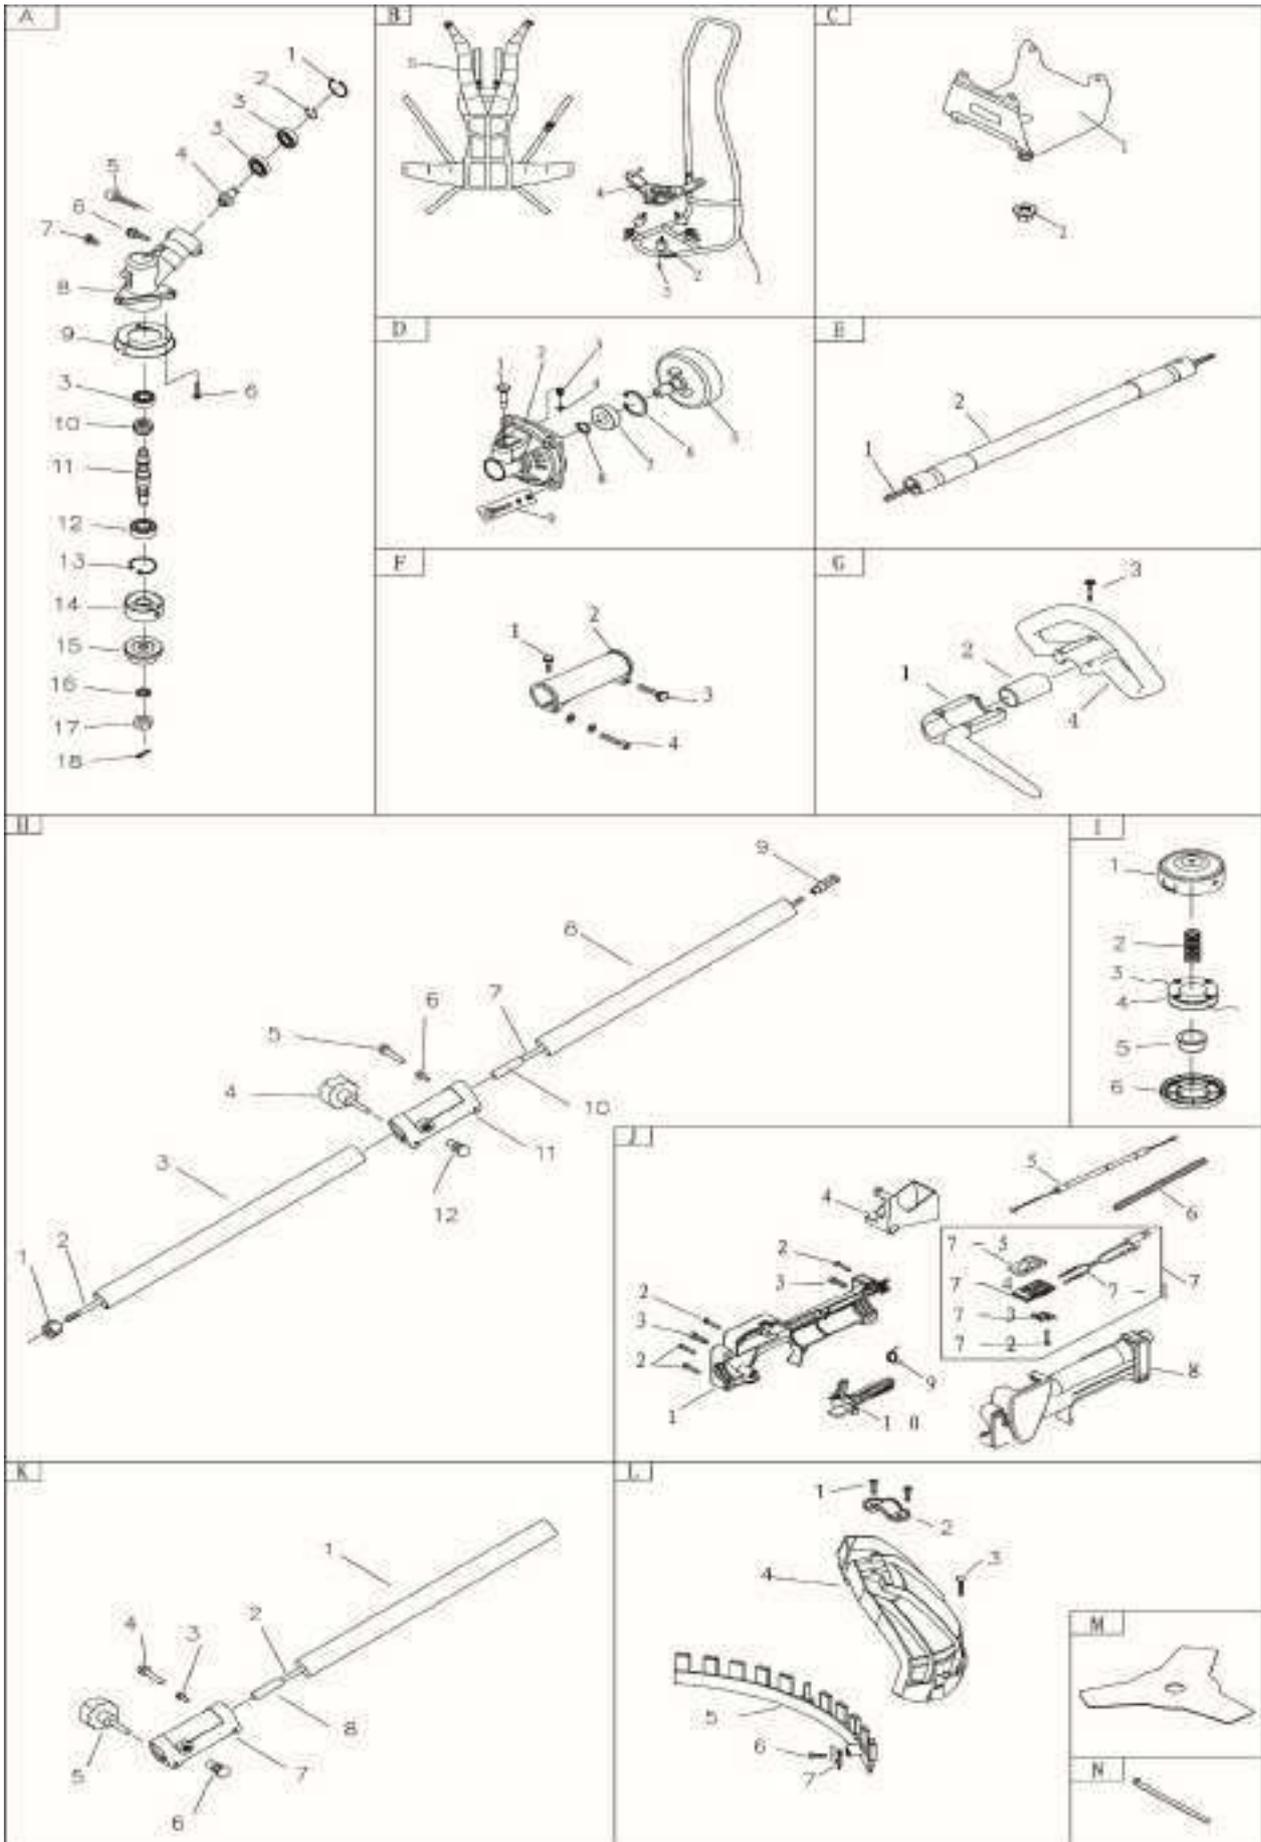

General Parts




EXPLODED PARTS LIST

AGM BMT 3421

No	Code	Name	Qty	No	Code	Name	Qty
A	077476	GEAR CASE ASSY	1	F	077526	JOINT PIPE COMP.	1
1		STOP RING 26	1	1		SCREW M5×12	1
2		STOP RING 10	1	2		JOINT PIPE	1
3		BEARING 6000-2RS	3	3		SCREW M5×30	1
4		PINION (9TEETH)	1	4		SCREW M5×20	1
5		INNER HEXAGON SCREW M6*20	1				
6		SCREW ASSY M5*12	4	G	077527	LOOP HANDLE	1
7		SCREW ASSY M6*12	1	1		GUARD BAR	1
8		GEAR CASE	1	2		RUBBER COVER	1
9	077477	SAFETY GUARD	1	3		SCREW M5*30	4
10		GEAR	1	4		HANDLE	1
11		GEAR SHAFT	1				
12		BEARING 6002-2RS	1	H	077528	PIPE ASSY	1
13		STOP RING 32	1	1		BEARING 23.5	6
14	077478	HOLDER A	1	2	077529	FRONT SHAFT	1
15	077479	HOLDER B	1	3	077530	FRONT PIPE	1
16		WASHER 10	1	4	077531	CLAMP HANDLE	1
17	077480	LEFT NUT	1	5		SCREW ASSY M6*35	1
18		PIN 1.4*16	1	6		SCREW ASSY M5*12	1
				7	077532	REAR SHAFT	1
B		SHOULDER FRAME COMP.	1	8	077533	REAR PIPE	1
1	077517	SHOULDER FRAME	4	9	077534	COUPLING	1
2	077518	CUSHION RUBBER COMP.	3	10	077535	COUPLING(M8+9T)	1
3		NUT M6	6	11	077536	PIPE CONNECTOR	1
4	077519	DOWN BASE COMP.	1	12	077537	PULL BOTTON	1
5	077520	SHOULDER BELT ASS'Y	1				
				I		NYLON CUTTER HEAD	1
C	077521	ENGINE BASE COMP.	1	1			1
1		ENGINE BASE	1	2			1
2		NUT M10	1	3			1
				4			1
D	077522	CLUTCH COMP ASSY	1	5			1
1		PIN	1	6			1
2	077523	CLUTCH CASE	1				
3		SPRING	1	J	077804	THROTTLE LEVER ASSY	1
4		STOP RING 5	1	1		RIGHT HANDGRIP	1
5	077524	CLUTCH DRUM COMP.	1	2		SCREW ST4.2*16	4
6		STOP RING 35	1	3		SCREW M5*18	3
7		BEARING 6202-2RZ/P6	1	4		TRIGGER	1
8		STOP RING 15	1	5		CABLE	1
9		SCREW M6×20	4	6		CABLE PROTECTIVE SLEEVE	1
				7		STOP WIRE	1
E	077525	FLEXIBLE LINER COMP.	1	8		LEFT HANDGRIP	1
1		FLEXIBLE SHAFT COMP.	1	9		SPRING	1
2		FLEXIBLE PIPE COMP.	1	10		CONTROL HANDLE	1

General Parts

AGM BMT 3421

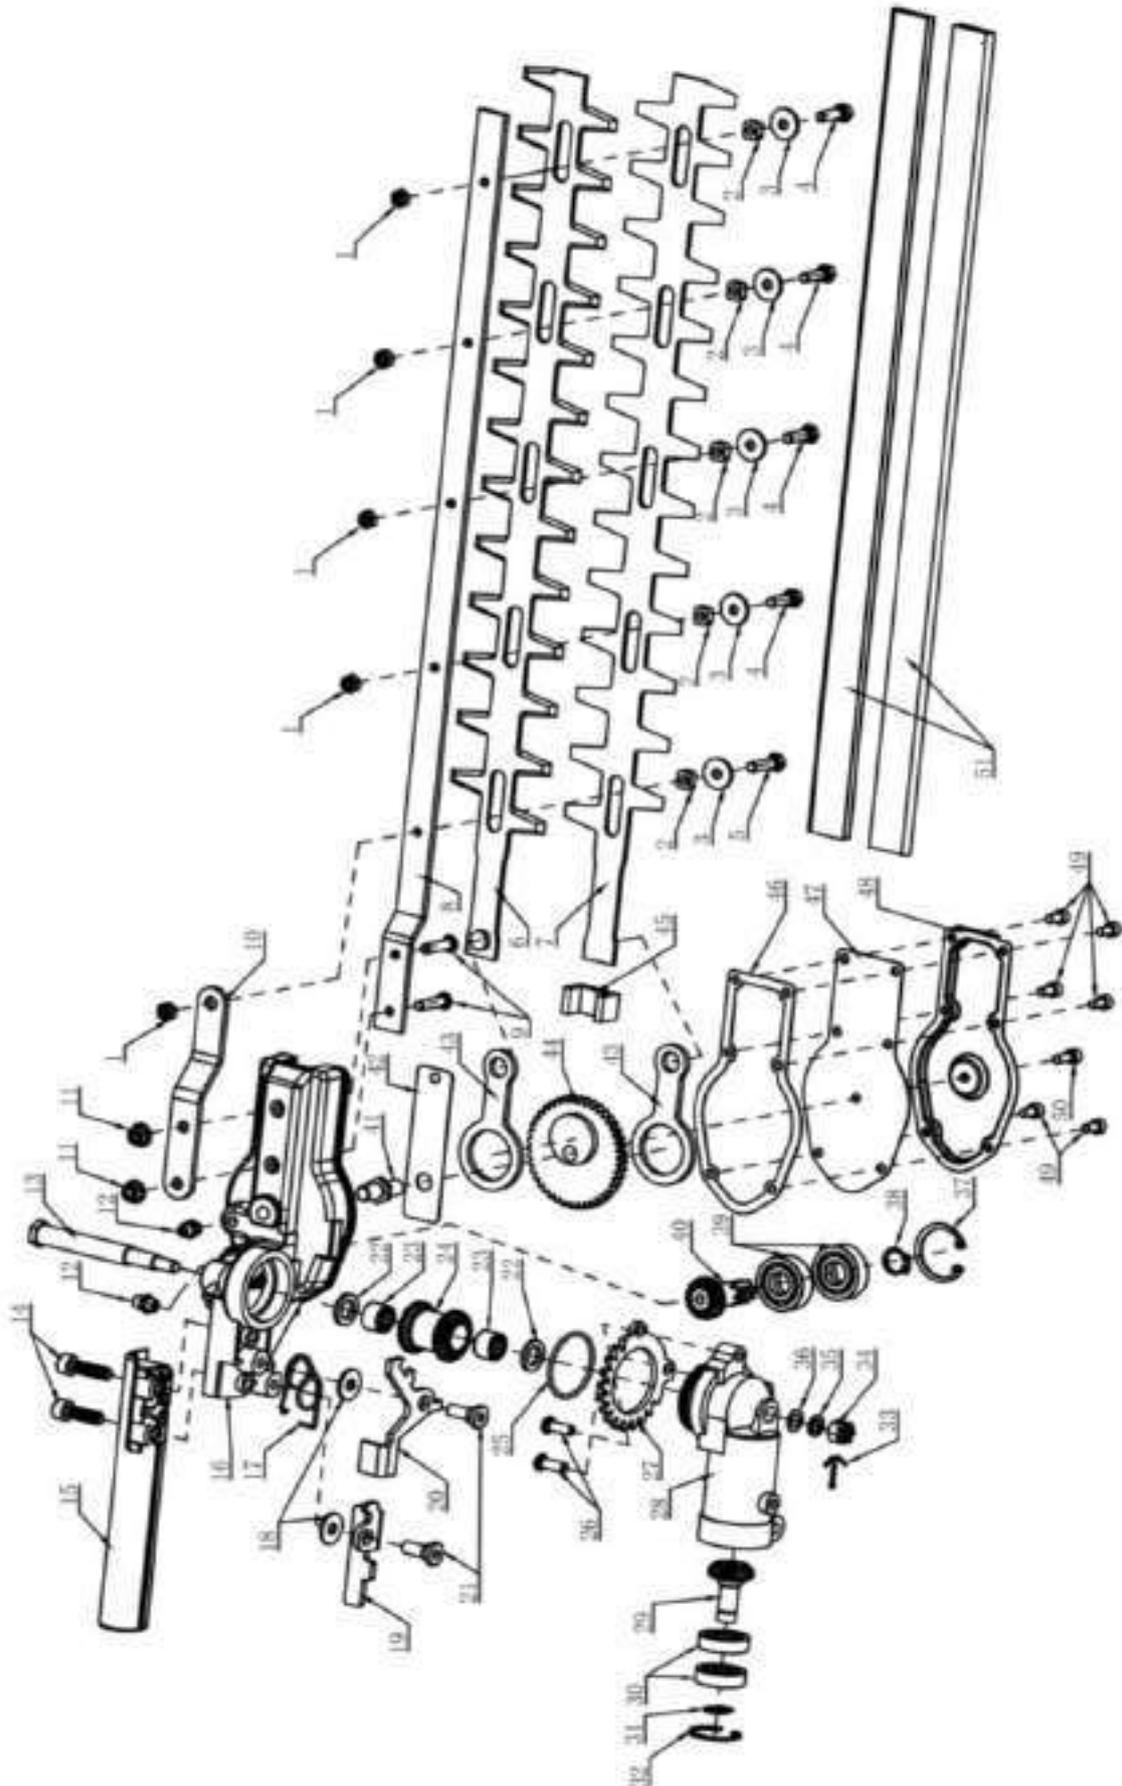

Hedge Trimmer




EXPLODED PARTS LIST

AGM BMT 3421

No	Code	Name	Qty	No	Code	Name	Qty
1	077491	NUT	5	48	077503	COVER BOARD	1
2		BLADE LOCK BLOCK	5	49		SCREW	6
3		SLIDER GASKET	5	50		SCREW	1
4		SCREW	4	51		BLADE COVER	2
5		SCREW	1				
6		BLADE	1				
7		BLADE	1				
8		BLADE FIXED PLATE	1				
9		SCREW	2				
10		FASTENING PLATE	1				
11		NUT	2				
12		SCREW	2				
13	077492	LONG AXIS	1				
14		SCREW	2				
15	077493	PLASTIC HANDLE	1				
16	077494	BIG CRANKCASE	1				
17	077495	SPRING	1				
18		WASHER	2				
19	077496	TRIGGER SAFETY	1				
20	077497	POSITION TRIGGER	1				
21		SCREW	2				
22		WASHER	2				
23		BEARING	2				
24		SPROCKET	1				
25		O-RING	1				
26		SCREW	2				
27		POSITIONING GEAR	1				
28		SMALL CRANKCASE	1				
29		SMALL GEAR	1				
30		BEARING	2				
31		CIRCLIP	1				
32		CIRCLIP	1				
33		PIN	1				
34		NUT	1				
35		SPRING WASHER	1				
36		FLAT WASHER	1				
37		CIRCLIP	1				
38		CIRCLIP	1				
39		BEARING	2				
40		PASSIVE GEAR	1				
41	077498	SHORT SHAFT	1				
42	077499	BACKGRIND	1				
43	077500	CONNECTING ROD	1				
44	077501	CAM	1				
45		FELT SEALING WASHER	1				
46	077502	PAPER SEALING WASHER	1				
47		WEARING PLATE	1				

Hedge Trimmer

AGM BMT 3421

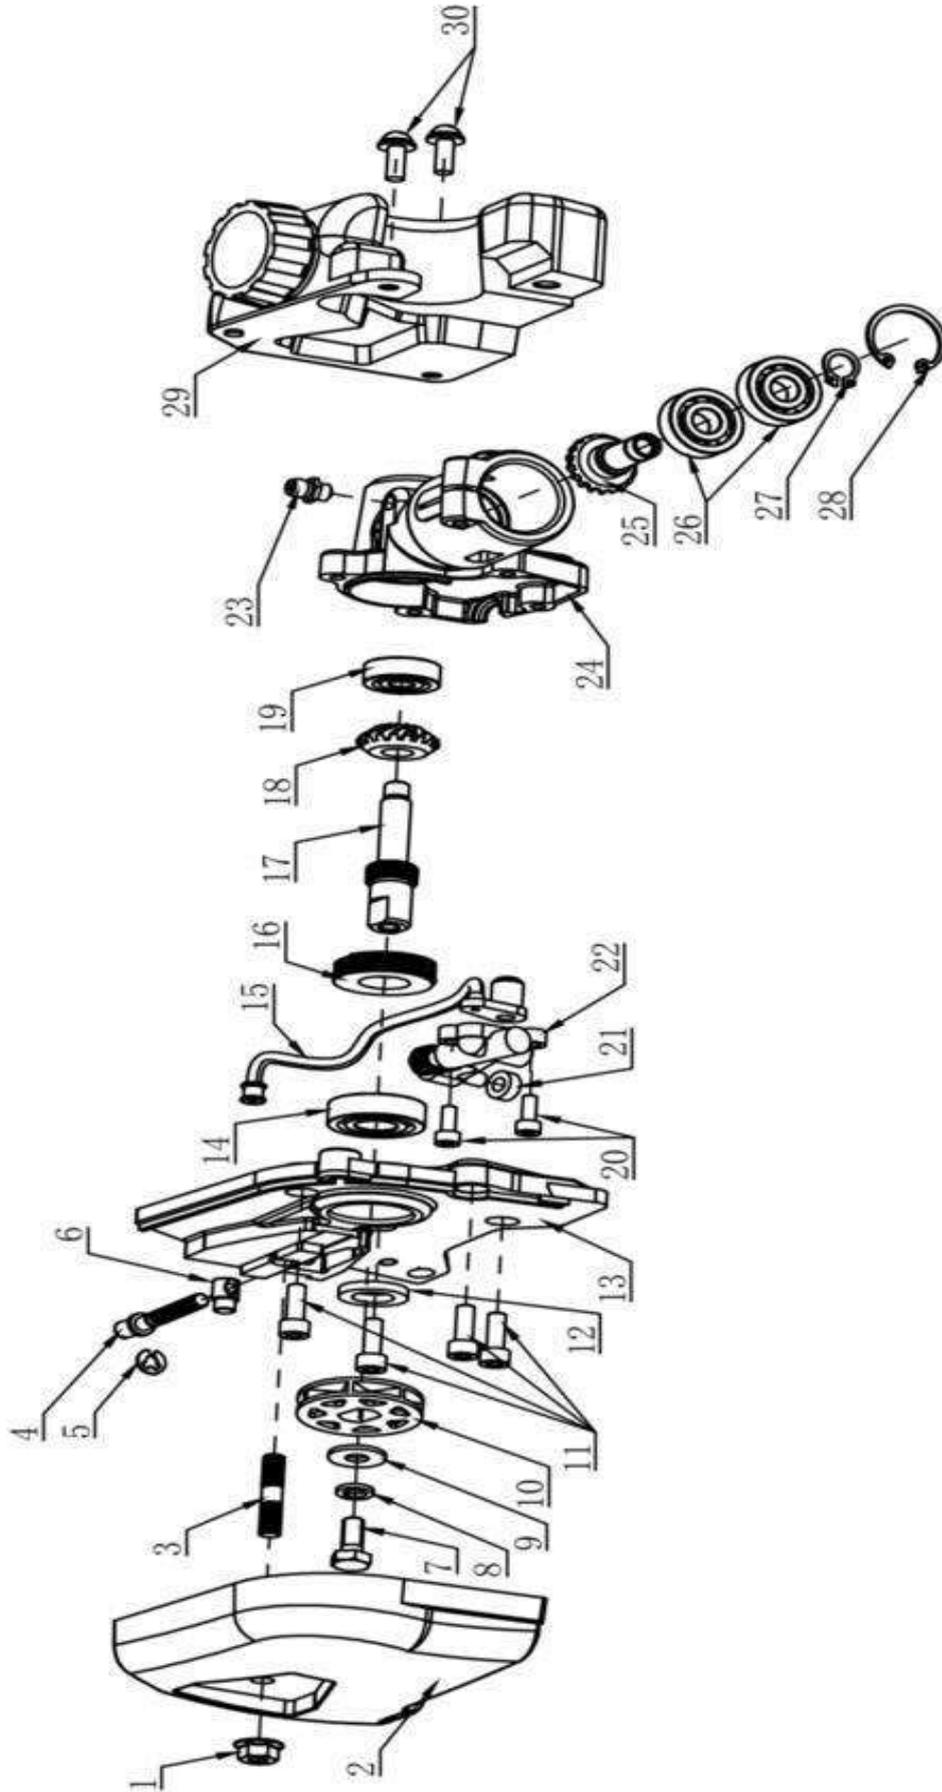

Chain Saw



EXPLODED PARTS LIST

AGM BMT 3421

No	Code	Name	Qty	No	Code	Name	Qty
1	077504	NUT	1				
2	077505	CHAIN COVER	1				
3	077506	BOLT	1				
4	077507	ADJUSTBLE SCREW	1				
5	077508	CIRCLIP	1				
6	077509	NUT	1				
7		BOLT	1				
8		WASHER	1				
9		WASHER	1				
10	077510	CHAIN WHEEL	1				
11		BOLT	4				
12		WASHER	1				
13	077511	CASE COVER	1				
14		BEARING	1				
15	077512	OIL PIPE	1				
16	077513	PLASTIC WORM	1				
17		OUTPUT SHAFT	1				
18		BIG GEAR	1				
19		BEARING	1				
20		BOLT	2				
21		SPONGE	1				
22	077516	OIL PUMP	1				
23		OIL INJECTION NOZZLE	1				
24		BOX BODY	1				
25		GEAR	1				
26		BEARING	2				
27		CIRCLIP	1				
28		CIRCLIP	1				
29	077515	OIL TANK	1				
30		SCREW ASSY	2				
17	077514	OUTPUT SHAFT	1				
18		BIG GEAR	1				
19		BEARING	1				
23		OIL INJECTION NOZZLE	1				
24		BOX BODY	1				
25		GEAR	1				
26		BEARING	2				
27		CIRCLIP	1				
28	CIRCLIP	1					

Chain Saw