


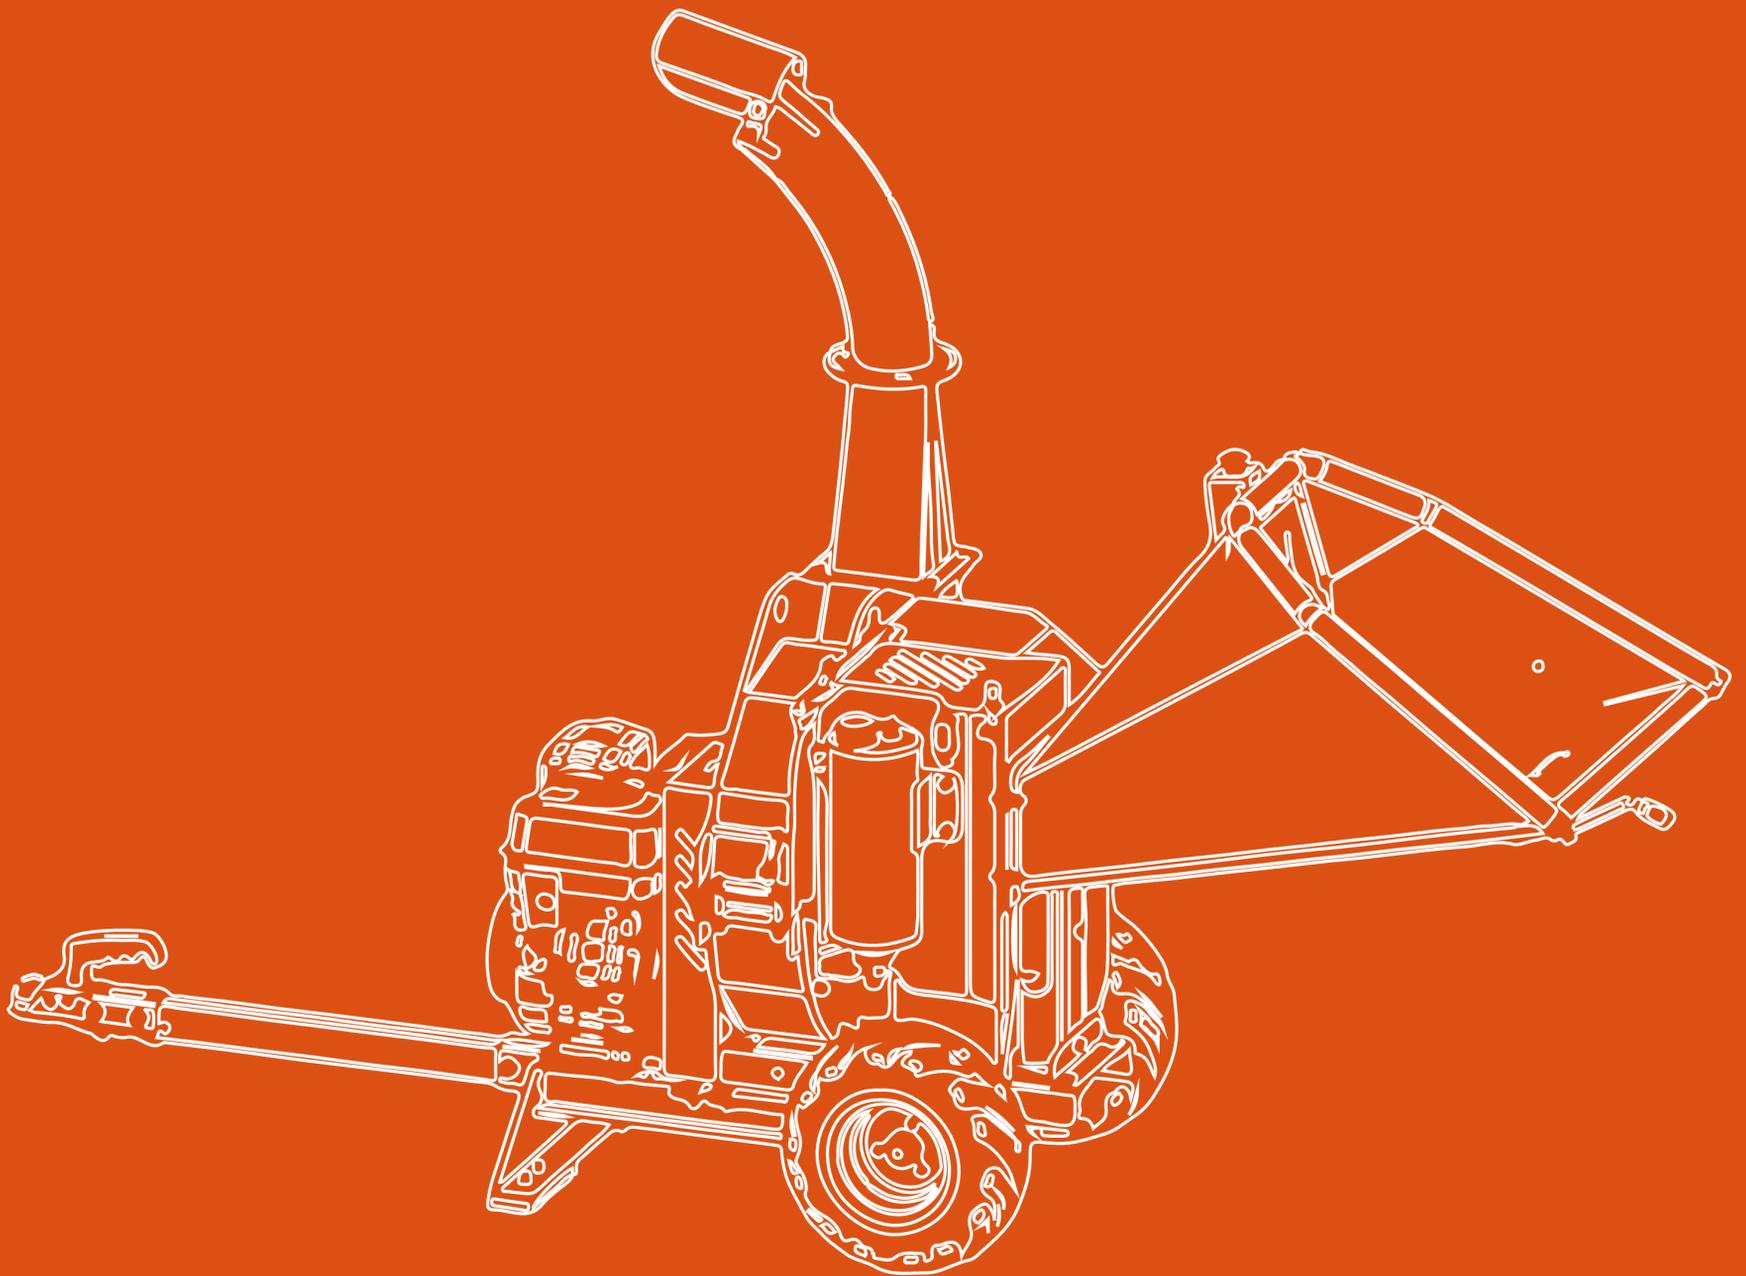

DAEWOO
POWER PRODUCTS

DAFWC560AU
WOOD CHIPPER




EXPLODED VIEW / DESPIECE / VUE ÉCLATÉE

www.daewoopowerproducts.com


Manufactured under license of Daewoo International Corporation, Korea
Fabricado bajo licencia de Daewoo International Corporation, Corea

CRANKCASE. / GEAR ASSY, GOVERNOR

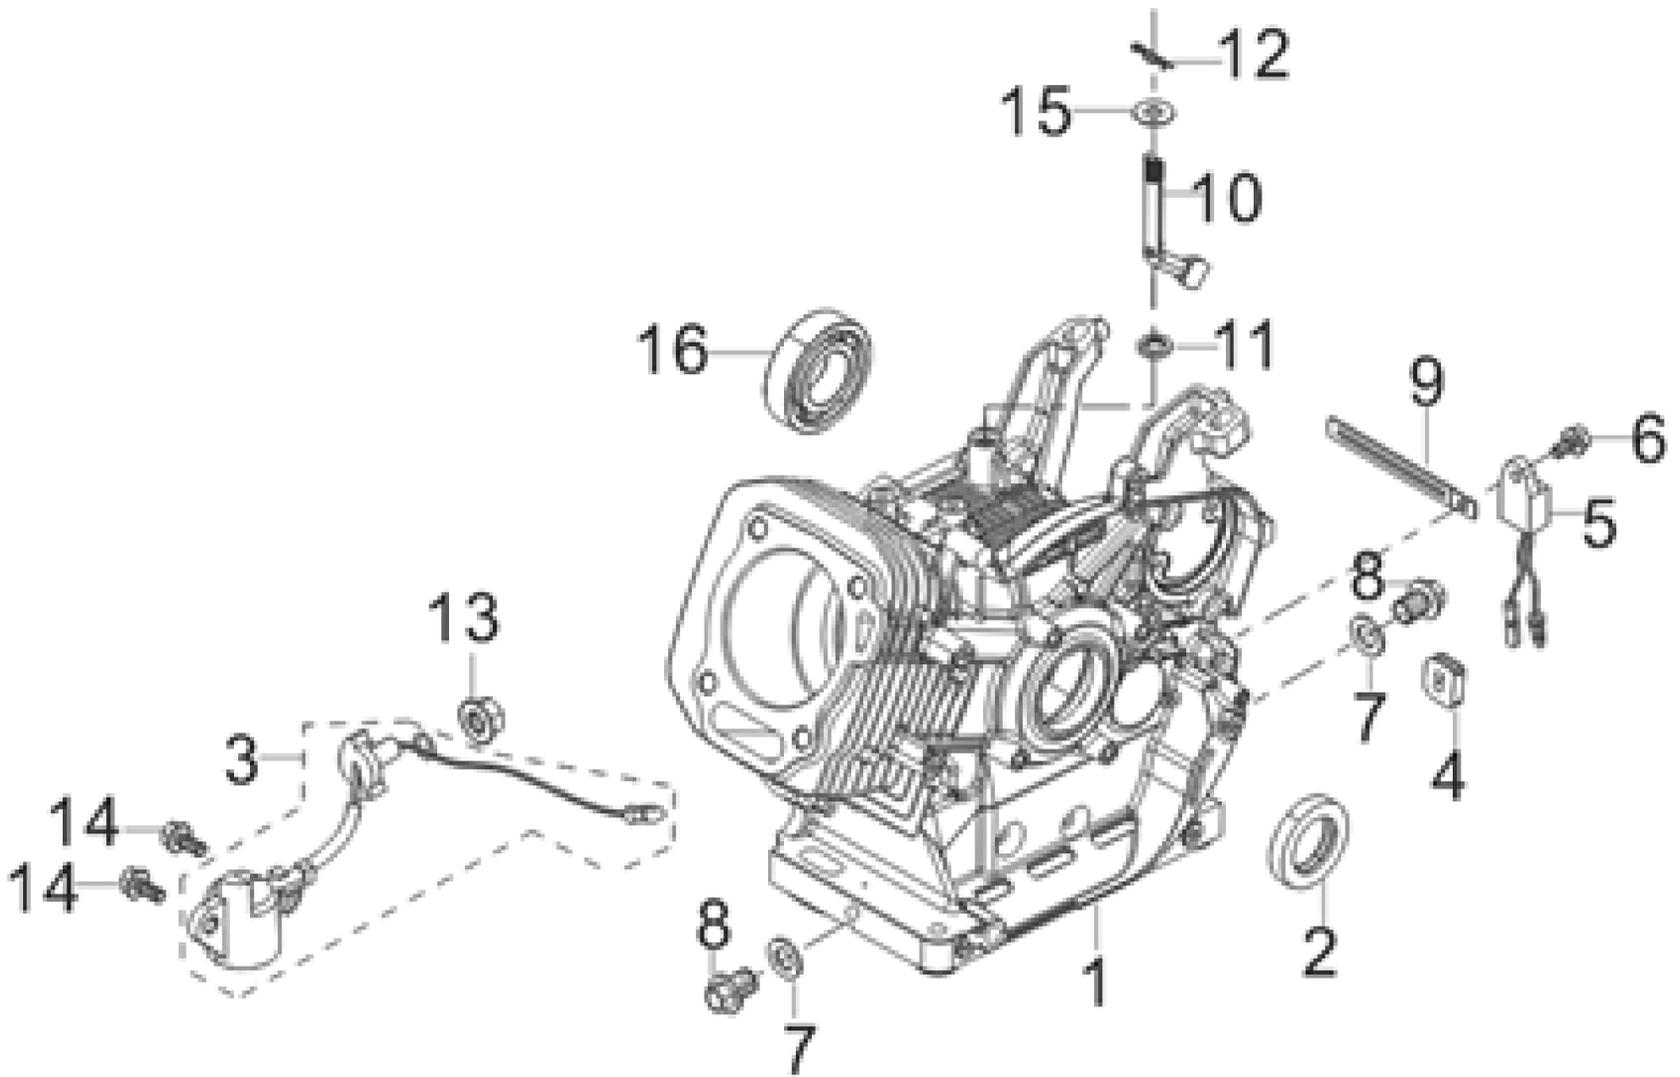


PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
E01-1	1	DA04-WC0611-000409-01-001	CRANKCASE SUBASSEMBLY.	1
E01-2	1	DA04-WC0611-000409-01-002	SEAL, OIL	1
E01-3	1	DA04-WC0611-000409-01-003	SENSOR, ENGINE OIL	1
E01-4	1	DA04-WC0611-000409-01-004	PLUG, RUBBER	1
E01-5	1	DA04-WC0611-000409-01-005	PROTECTOR, OIL	1
E01-6	1	DA04-WC0611-000409-01-006	BOLT	1
E01-7	1	DA04-WC0611-000409-01-007	WASHER, FLAT	2
E01-8	1	DA04-WC0611-000409-01-008	BOLT, DRAIN PLUG	2
E01-9	1	DA04-WC0611-000409-01-009	CLIP	1
E01-10	1	DA04-WC0611-000409-01-010	ARM, GOVERNOR	1
E01-11	1	DA04-WC0611-000409-01-011	SEAL, OIL	1
E01-12	1	DA04-WC0611-000409-01-012	PIN	1
E01-13	1	DA04-WC0611-000409-01-013	NUT	1
E01-14	1	DA04-WC0611-000409-01-014	BOLT	2
E01-15	1	DA04-WC0611-000409-01-015	WASHER, FLAT	1
E01-16	1	DA04-WC0611-000409-01-016	BEARING, DEEP GROOVE BALL	1


COVER SUBASSEMBLY, CRANKCASE

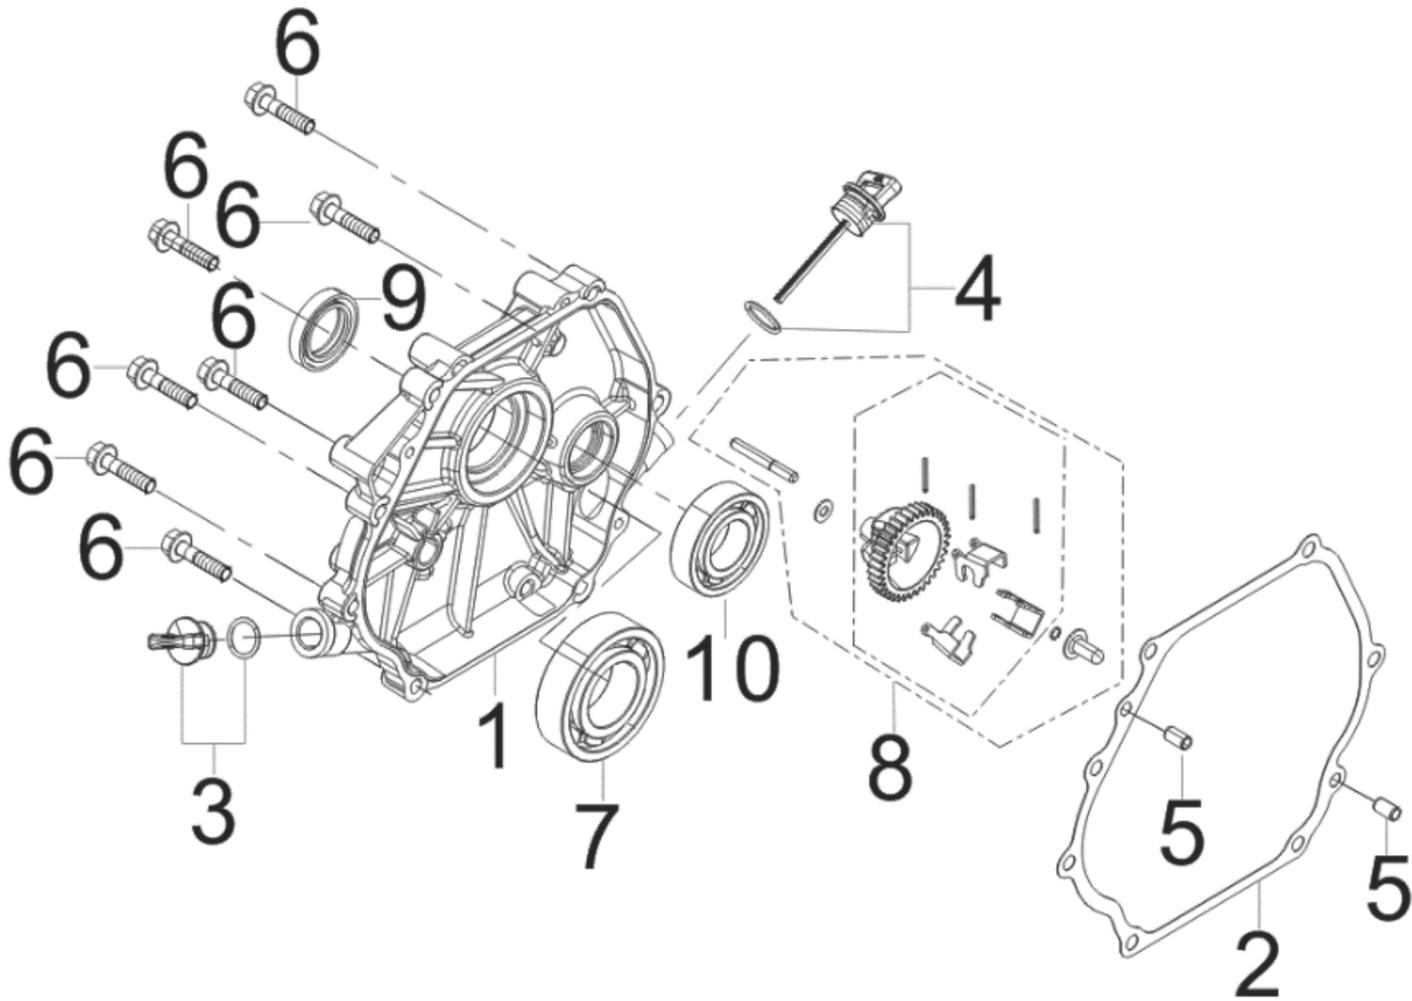


PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
E02-1	2	DA04-WC0611-000409-02-017	COVER, CRANKCASE	1
E02-2	2	DA04-WC0611-000409-02-018	GASKET, CRANKCASE	1
E02-3	2	DA04-WC0611-000409-02-019	PLUG SUBASSEMBLY, ENGINE OIL	1
E02-4	2	DA04-WC0611-000409-02-020	DIPSTICK SUBASSEMBLY, OIL	1
E02-5	2	DA04-WC0611-000409-02-021	PIN	2
E02-6	2	DA04-WC0611-000409-02-022	BOLT	7
E02-7	2	DA04-WC0611-000409-02-023	BEARING, DEEP GROOVE BALL	1
E02-8	2	DA04-WC0611-000409-02-024	GEAR ASSY, GOVERNOR	1
E02-9	2	DA04-WC0611-000409-02-025	SEAL, OIL	1
E02-10	2	DA04-WC0611-000409-02-026	BEARING, DEEP GROOVE BALL	1

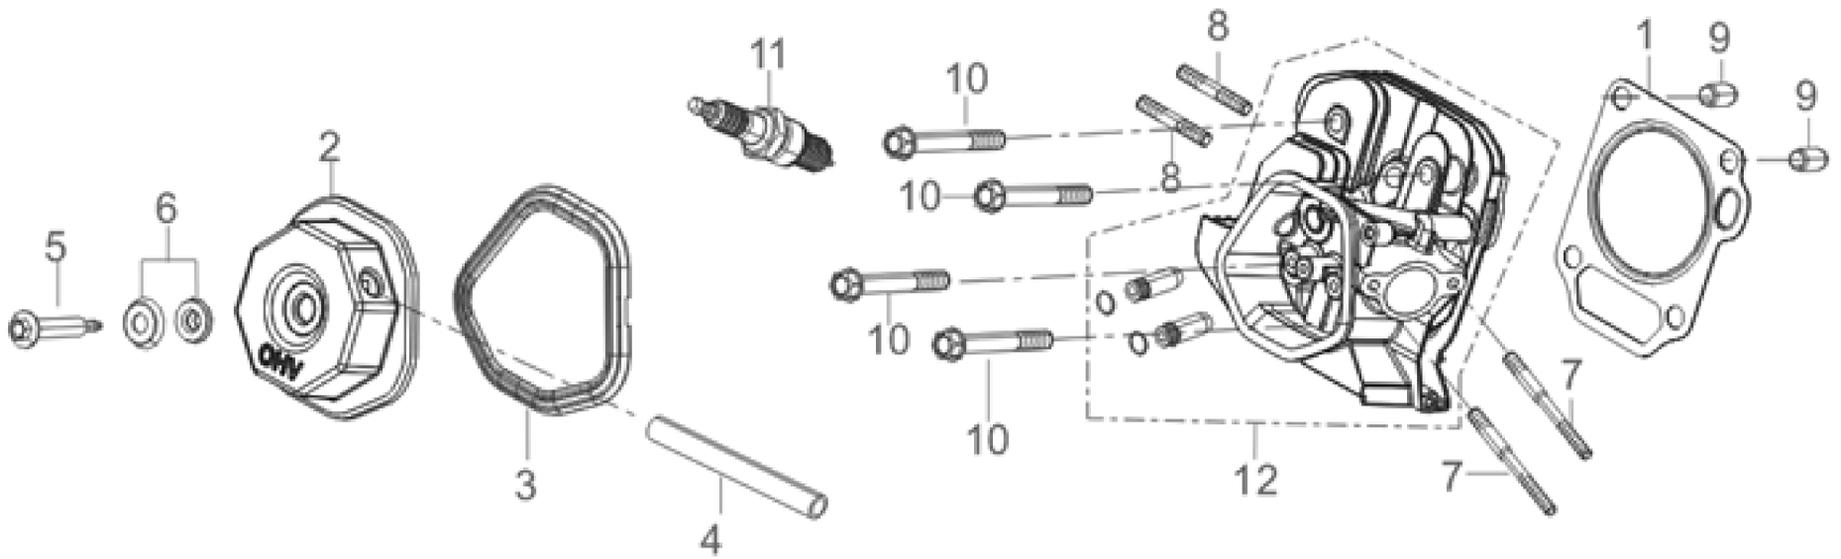


PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
E03-1	3	DA04-WC0611-000409-03-027	GASKET, CYLINDER HEAD	1
E03-2	3	DA04-WC0611-000409-03-028	COVER SUBASSEMBLY, CYLINDER HEAD	1
E03-3	3	DA04-WC0611-000409-03-029	GASKET, CYLINDER HEAD COVER	1
E03-4	3	DA04-WC0611-000409-03-030	TUBE, BREATHER	1
E03-5	3	DA04-WC0611-000409-03-031	BOLT, CYLINDER HEAD	1
E03-6	3	DA04-WC0611-000409-03-032	Cylinder epicranium bolt seal&gasket unit	1
E03-7	3	DA04-WC0611-000409-03-033	BOLT	2
E03-8	3	DA04-WC0611-000409-03-034	BOLT	2
E03-9	3	DA04-WC0611-000409-03-035	PIN	2
E03-10	3	DA04-WC0611-000409-03-036	BOLT, CYLINDER HEAD	4
E03-11	3	DA04-WC0611-000409-03-037	PLUG, SPARK	1
E03-12	3	DA04-WC0611-000409-03-038	HEAD SUBASSEMBLY, CYLINDER	1

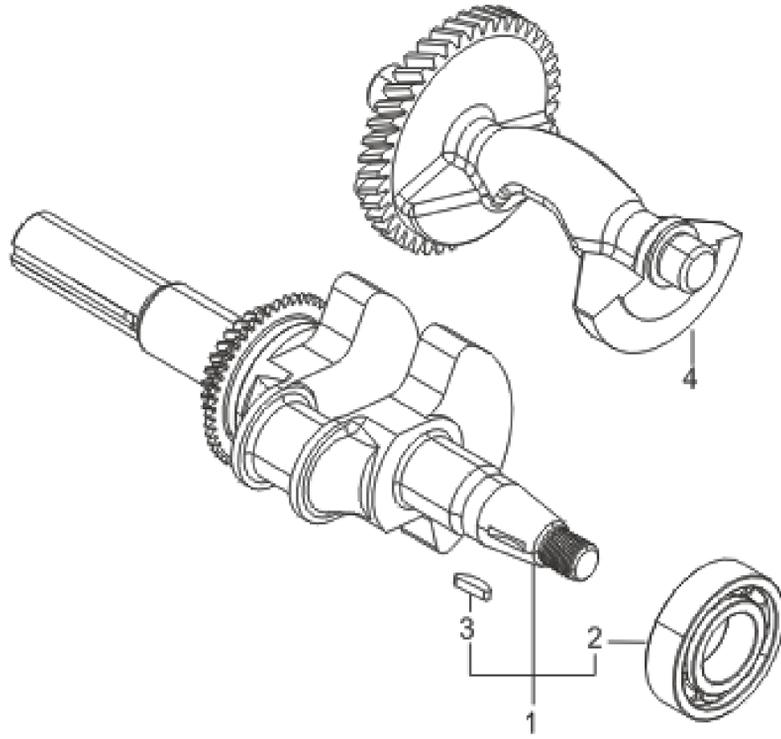


PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
E04-1	4	DA04-WC0611-000409-04-039	CRANKSHAFT ASSY.	1
E04-4	4	DA04-WC0611-000409-04-040	SHAFT ASSY, BALANCING	1

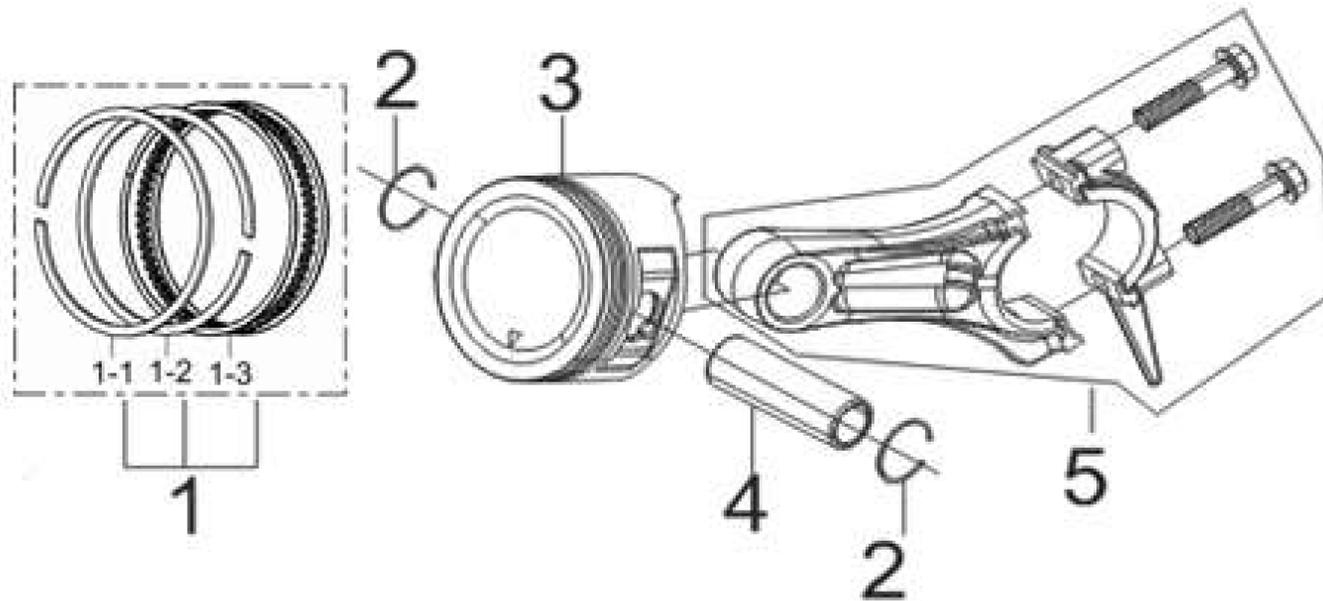


PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
E05-1	5	DA04-WC0611-000409-05-041	RING ASSY, PISTON	1
E05-2	5	DA04-WC0611-000409-05-042	CLIP, PISTON PIN	2
E05-3	5	DA04-WC0611-000409-05-043	PISTON	1
E05-4	5	DA04-WC0611-000409-05-044	PIN, PISTON	1
E05-5	5	DA04-WC0611-000409-05-045	ROD, CONNECTING	1

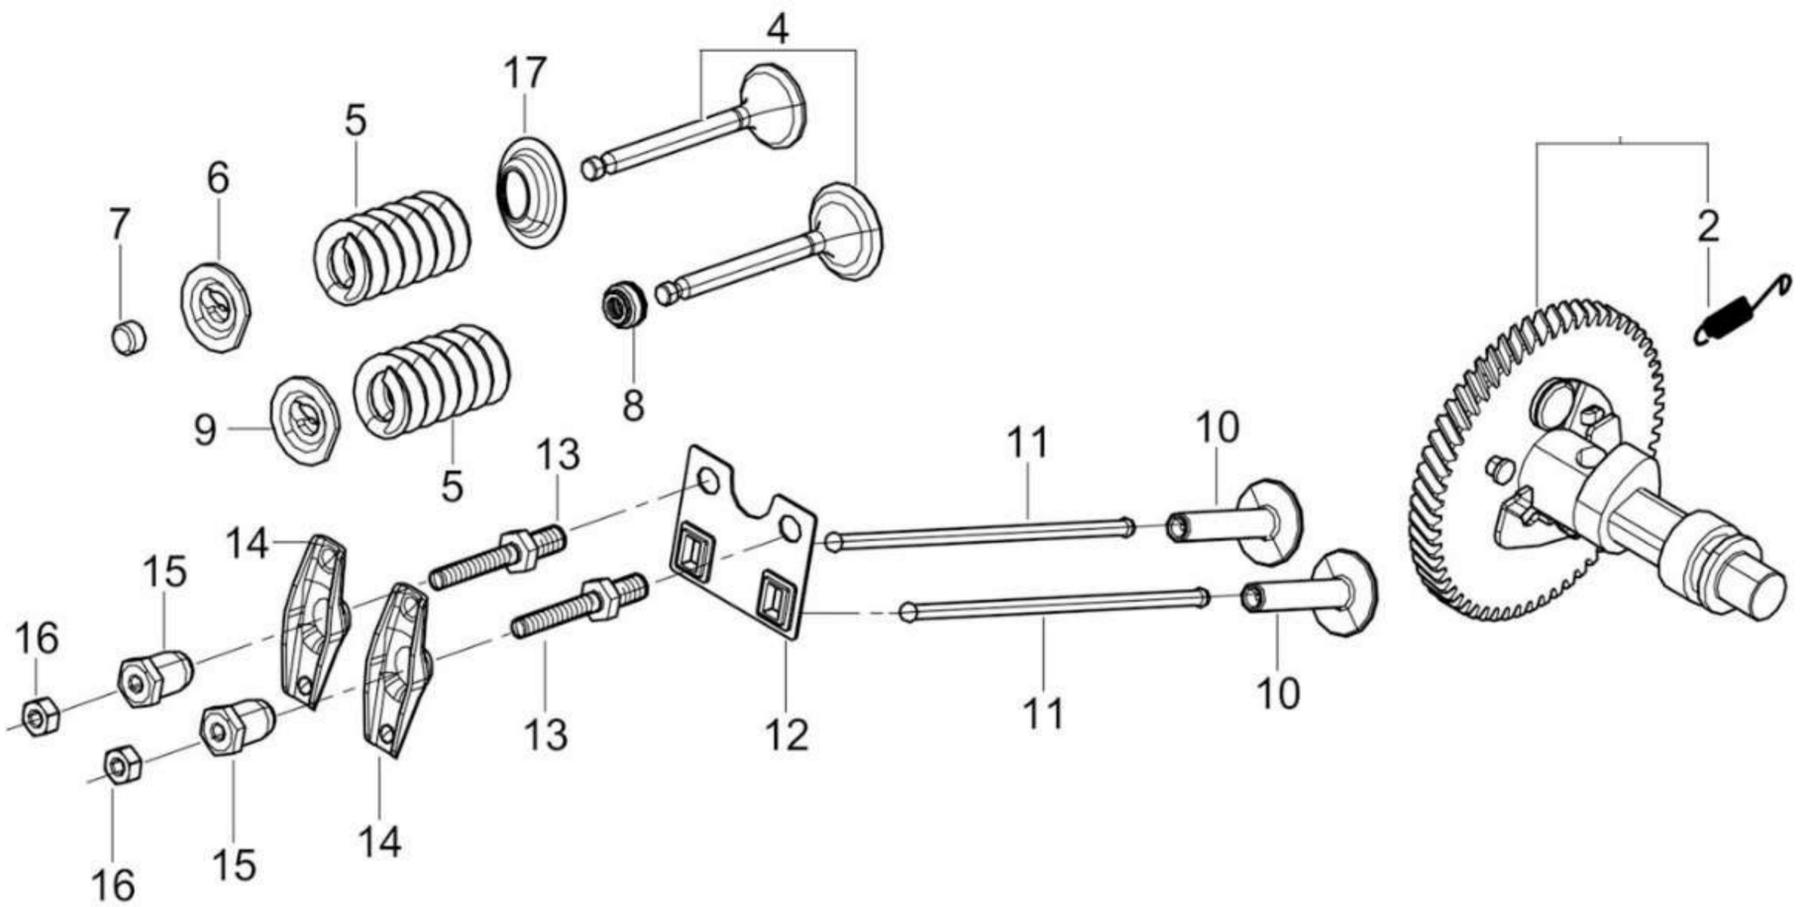


PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
E06-1	6	DA04-WC0611-000409-06-046	CAMSHAFT ASSY.	1
E06-4	6	DA04-WC0611-000409-06-047	VALVE	1
E06-5	6	DA04-WC0611-000409-06-048	SPRING, VALVE	2
E06-6	6	DA04-WC0611-000409-06-049	RETAINER, EXHAUST VALVE	1
E06-7	6	DA04-WC0611-000409-06-050	ROTATOR, VALVE	1
E06-8	6	DA04-WC0611-000409-06-051	GUIDE, SEAL	1
E06-9	6	DA04-WC0611-000409-06-052	SEAT, VALVE SPRING	1
E06-10	6	DA04-WC0611-000409-06-053	TAPPET, VALVE	2
E06-11	6	DA04-WC0611-000409-06-054	LIFTER SUBASSEMBLY, VALVE	2
E06-12	6	DA04-WC0611-000409-06-055	PLATE SUBASSEMBLY, LIFTER STOPPER	1
E06-13	6	DA04-WC0611-000409-06-056	BOLT, ROCKER SHAFT	2
E06-14	6	DA04-WC0611-000409-06-057	ROCKER, VALVE	2
E06-15	6	DA04-WC0611-000409-06-058	NUT, VALVE ADJUSTING	2
E06-16	6	DA04-WC0611-000409-06-059	NUT, VALVE LOCK	2
E06-17	6	DA04-WC0611-000409-06-060	RETAINER, VALVE SPRING	1

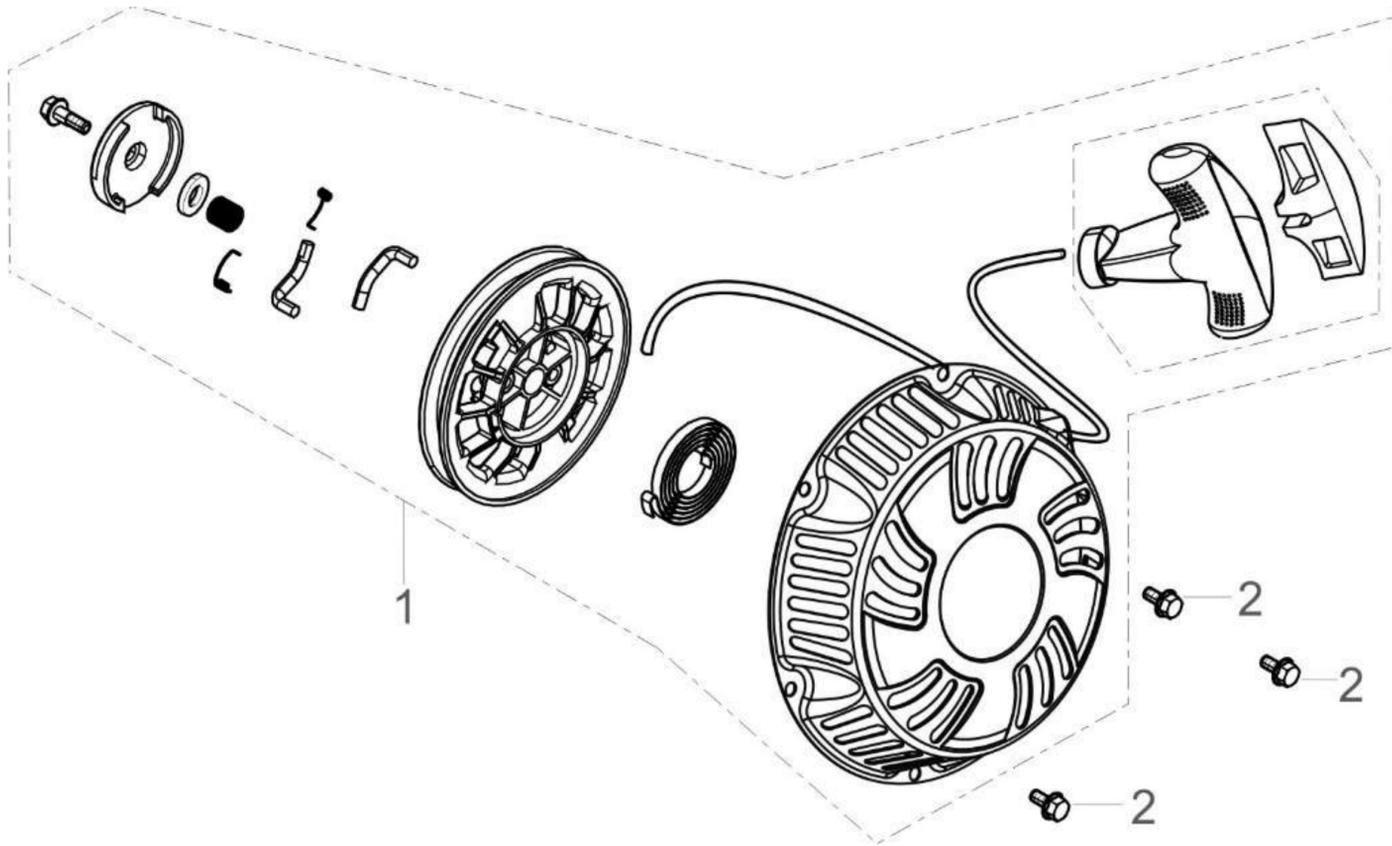


PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
E07-1	7	DA04-WC0611-000409-07-061	STARTER ASSY, RECOIL	1
E07-2	7	DA04-WC0611-000409-07-062	BOLT	3

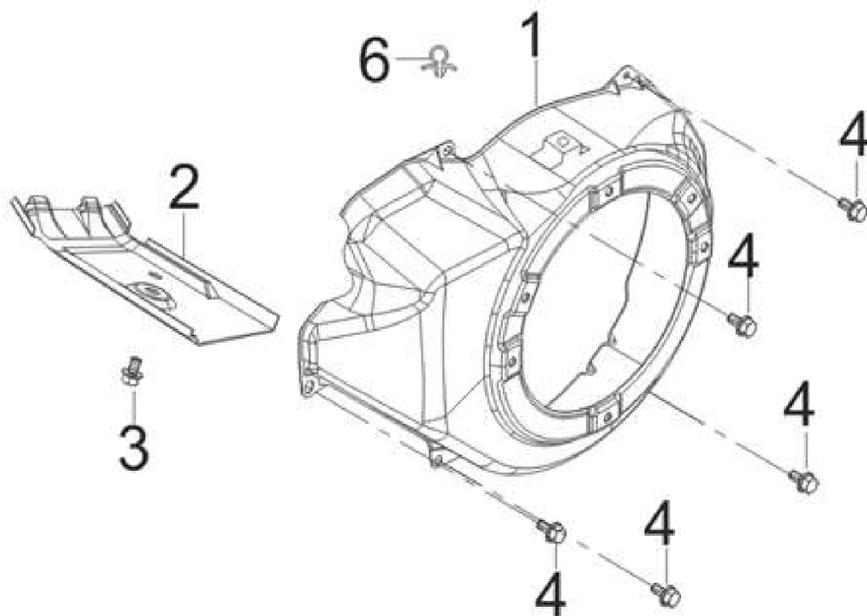

PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
E08-1	8	DA04-WC0611-000409-08-063	SHROUD	1
E08-2	8	DA04-WC0611-000409-08-064	SHROUD, CYLINDER BODY	1
E08-3	8	DA04-WC0611-000409-08-065	BOLT	1
E08-4	8	DA04-WC0611-000409-08-066	BOLT	5
E08-6	8	DA04-WC0611-000409-08-067	CLIP	1

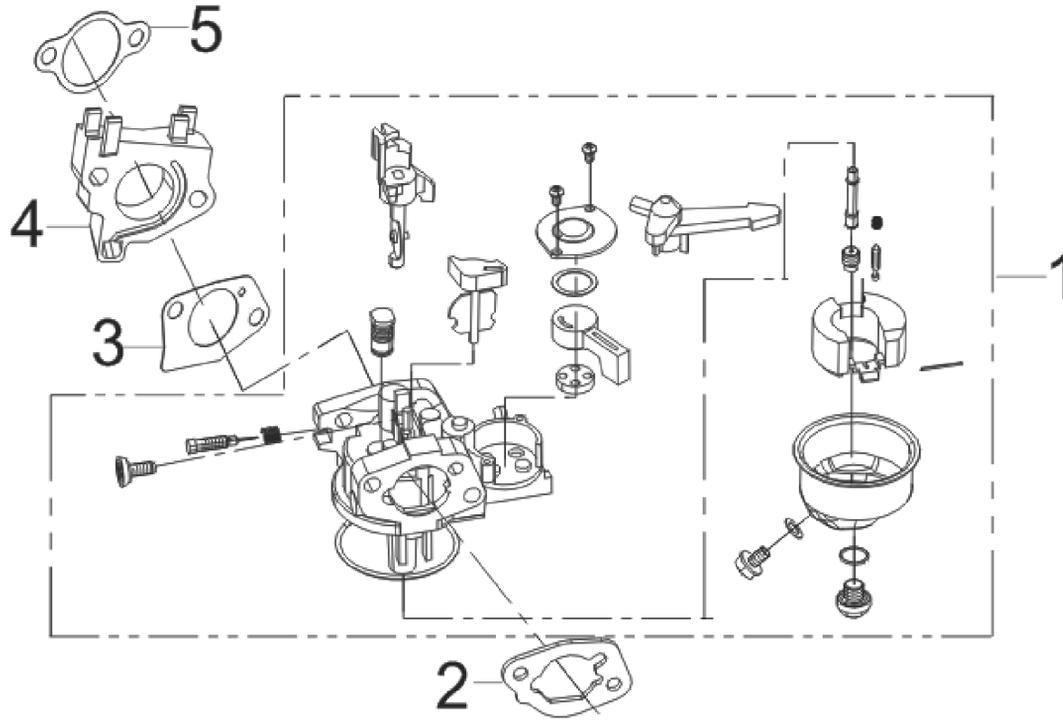


PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
E09-1	9	DA04-WC0611-000409-09-068	CARBURETOR ASSY.	1
E09-2	9	DA04-WC0611-000409-09-069	GASKET, AIR CLEANER	1
E09-3	9	DA04-WC0611-000409-09-070	GASKET, CARBURETOR	1
E09-4	9	DA04-WC0611-000409-09-071	PLATE, CARBURETOR INSULATOR	1
E09-5	9	DA04-WC0611-000409-09-072	GASKET, INLET	1

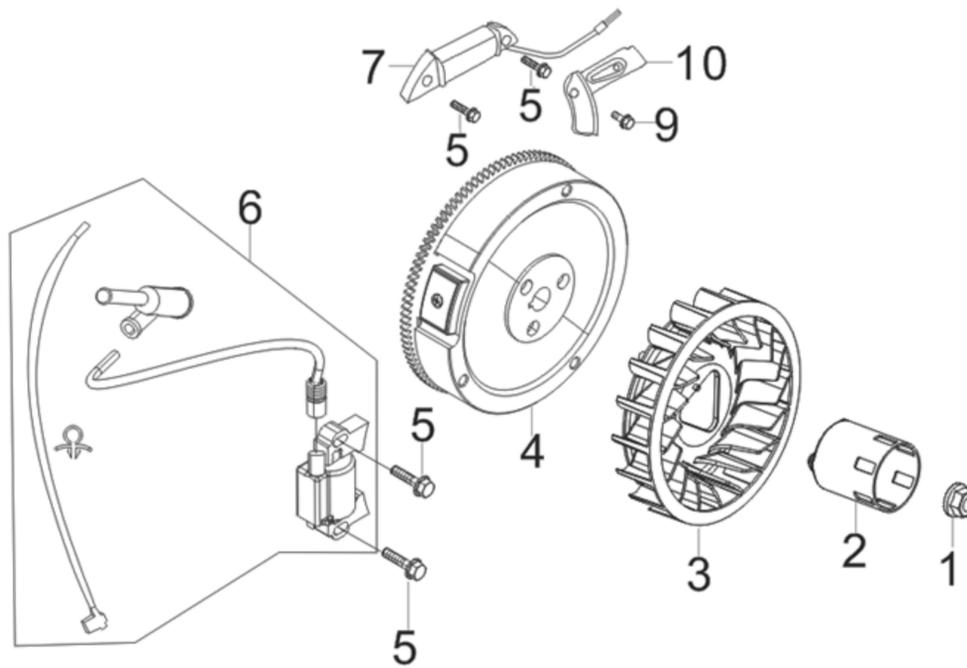


PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
E10-1	10	DA04-WC0611-000409-10-073	NUT, FLYWHEEL	1
E10-2	10	DA04-WC0611-000409-10-074	PULLEY, STARTER	1
E10-3	10	DA04-WC0611-000409-10-075	IMPELLER	1
E10-4	10	DA04-WC0611-000409-10-076	FLYWHEEL SUBASSEMBLY	1
E10-5	10	DA04-WC0611-000409-10-077	BOLT	4
E10-6	10	DA04-WC0611-000409-10-078	COIL, IGNITION	1
E10-7	10	DA04-WC0611-000409-10-079	COIL SUBASSEMBLY, CHARGE	1
E10-9	10	DA04-WC0611-000409-10-080	BOLT	1
E10-10	10	DA04-WC0611-000409-10-081	CLAMP, CHARGE COIL	1

CONTROL ASSY, THROTTLE - START-UP ELECTRIC MACHINE COMPONENTS

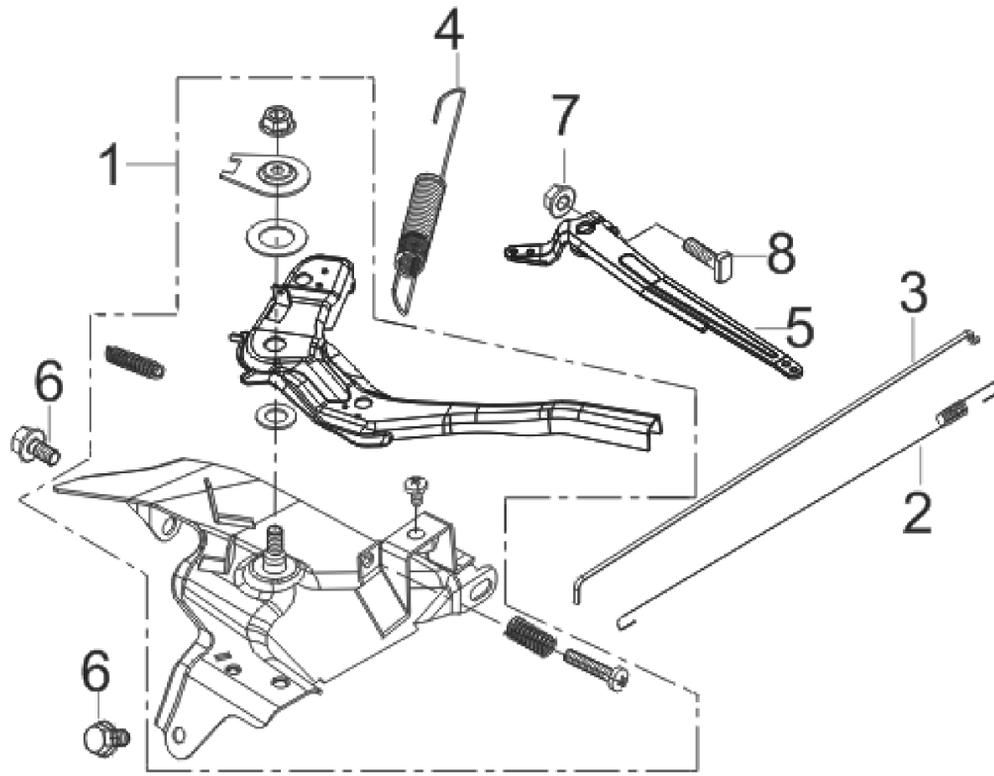


PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
E11-1	11	DA04-WC0611-000409-11-082	CONTROL ASSY, THROTTLE	1
E11-2	11	DA04-WC0611-000409-11-083	SPRING, THROTTLE VALVE RETURNING	1
E11-3	11	DA04-WC0611-000409-11-084	ROD, GOVERNEOR	1
E11-4	11	DA04-WC0611-000409-11-085	SPRING, GOVERNOR	1
E11-5	11	DA04-WC0611-000409-11-086	SUPPORT SUBASSEMBLY, GOVERNOR	1
E11-6	11	DA04-WC0611-000409-11-087	BOLT	2
E11-7	11	DA04-WC0611-000409-11-088	NUT	1
E11-8	11	DA04-WC0611-000409-11-089	BOLT, GOVERNOR SUPPORT	1

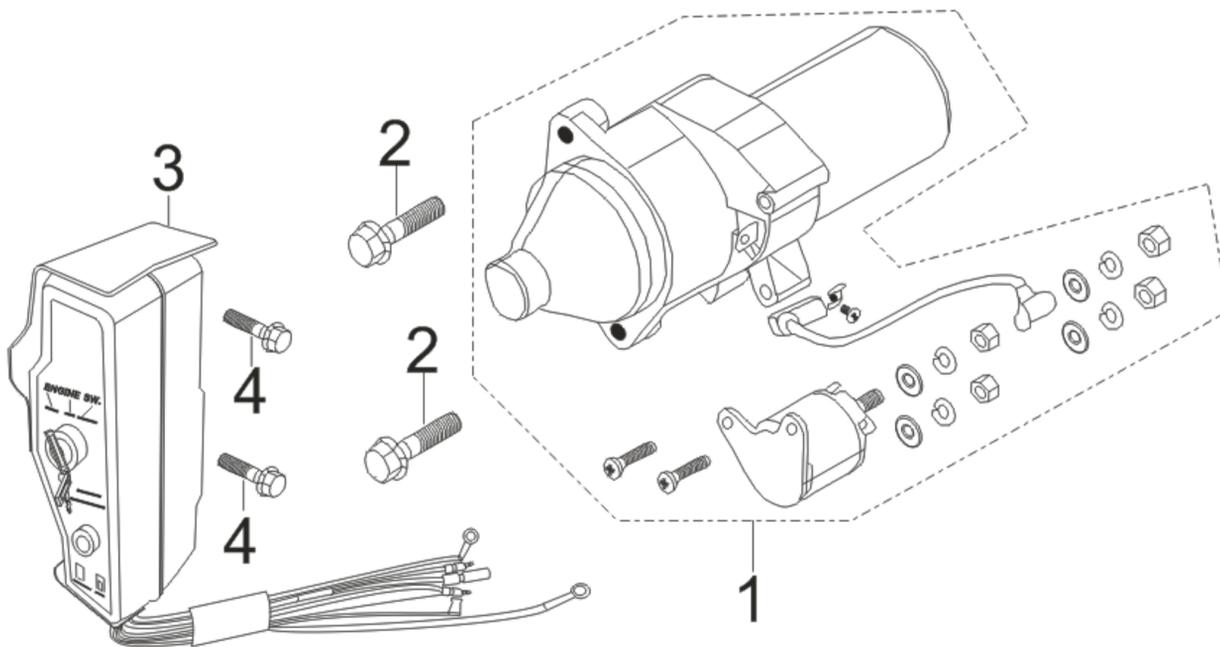


PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
E12-1	12	DA04-WC0611-000409-12-090	MOTOR, STARTING	1
E12-2	12	DA04-WC0611-000409-12-091	BOLT	2
E12-3	12	DA04-WC0611-000409-12-092	BOX, MOTOR CONTROL	1
E12-4	12	DA04-WC0611-000409-12-093	BOLT	2


CLEANER, AIR - MUFFLER ASSY

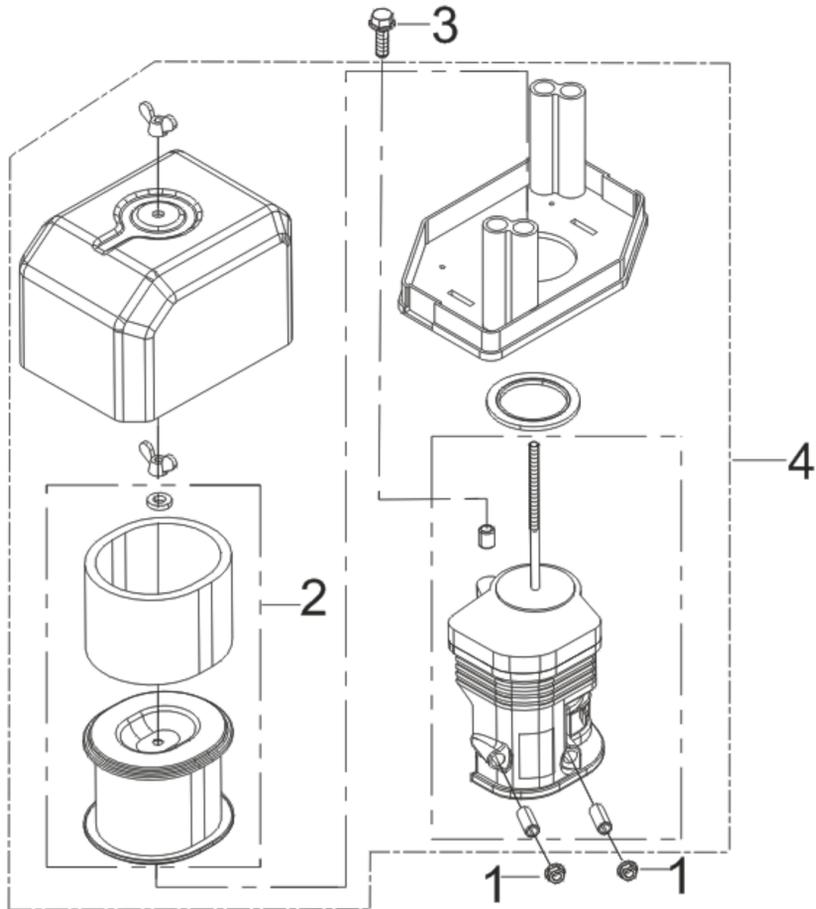


PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
F01-1	13	DA04-WC0611-000409-13-094	NUT	2
F01-2	13	DA04-WC0611-000409-13-095	ELEMENT, AIR CLEANER	1
F01-3	13	DA04-WC0611-000409-13-096	BOLT	1
F01-4	13	DA04-WC0611-000409-13-097	CLEANER, AIR	1

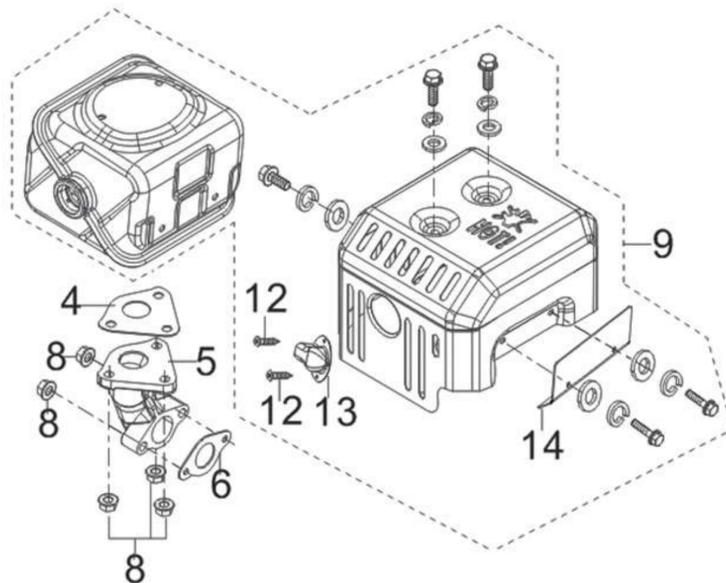

PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
F02-4	14	DA04-WC0611-000409-14-098	GASKET, MUFFLER	1
F02-5	14	DA04-WC0611-000409-14-099	PIPE, EXHAUST	1
F02-6	14	DA04-WC0611-000409-14-100	GASKET, EXHAUST OUTLET	1
F02-8	14	DA04-WC0611-000409-14-101	NUT	5
F02-9	14	DA04-WC0611-000409-14-102	MUFFLER ASSY.	1

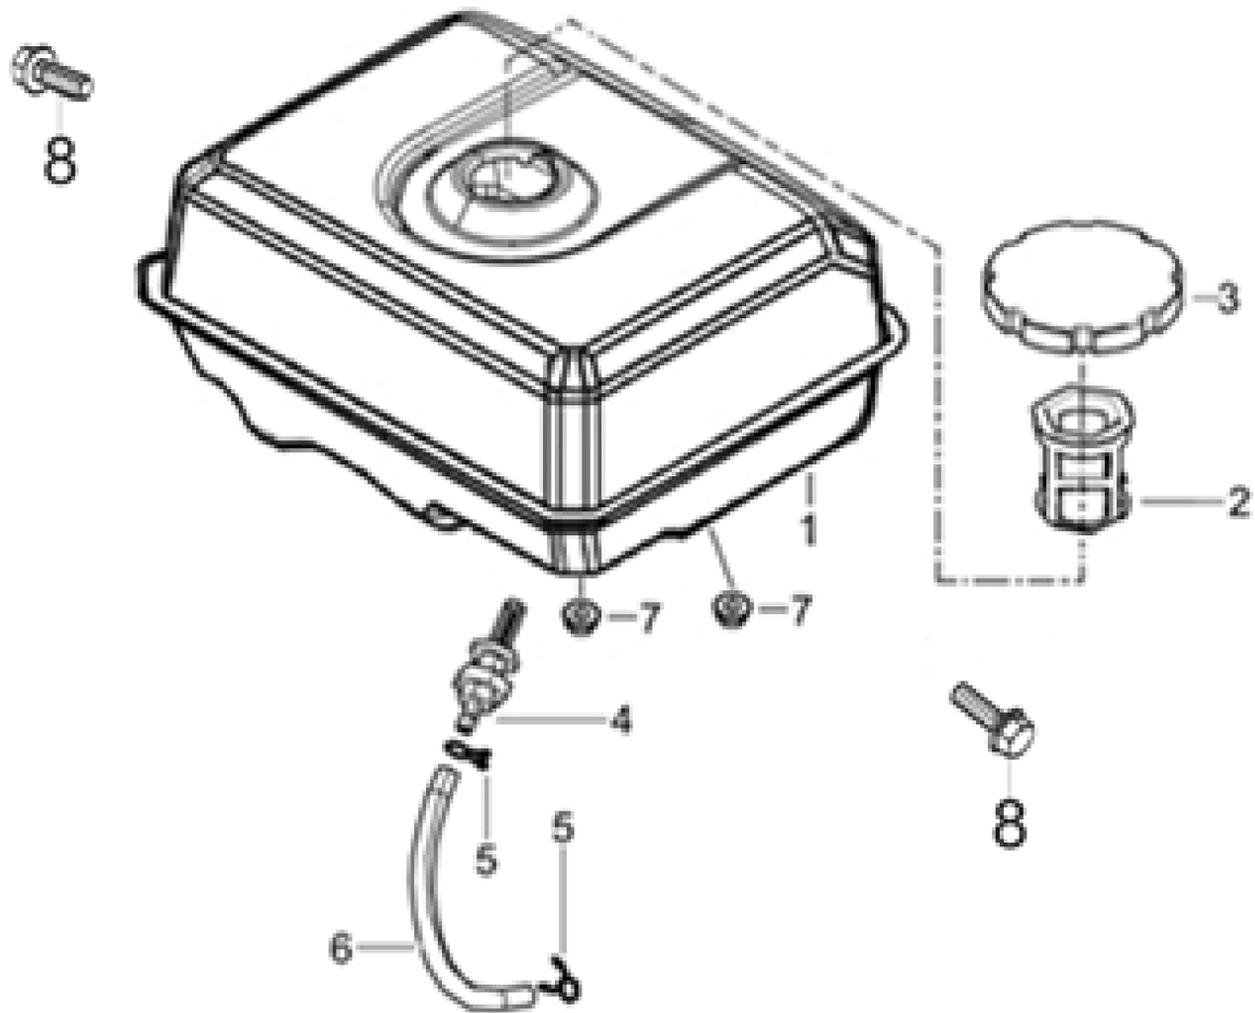

PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
F03-1	15	DA04-WC0611-000409-15-103	TANK, FUEL	1
F03-2	15	DA04-WC0611-000409-15-104	STRAINER, FUEL	1
F03-3	15	DA04-WC0611-000409-15-105	COVER, FUEL TANK	1
F03-4	15	DA04-WC0611-000409-15-106	OUTLET SUBASSEMBLY, FUEL TANK OIL	1
F03-5	15	DA04-WC0611-000409-15-107	COLLAR	2
F03-6	15	DA04-WC0611-000409-15-108	TUBE, FUEL	1
F03-7	15	DA04-WC0611-000409-15-109	NUT	2
F03-8	15	DA04-WC0611-000409-15-110	BOLT	2

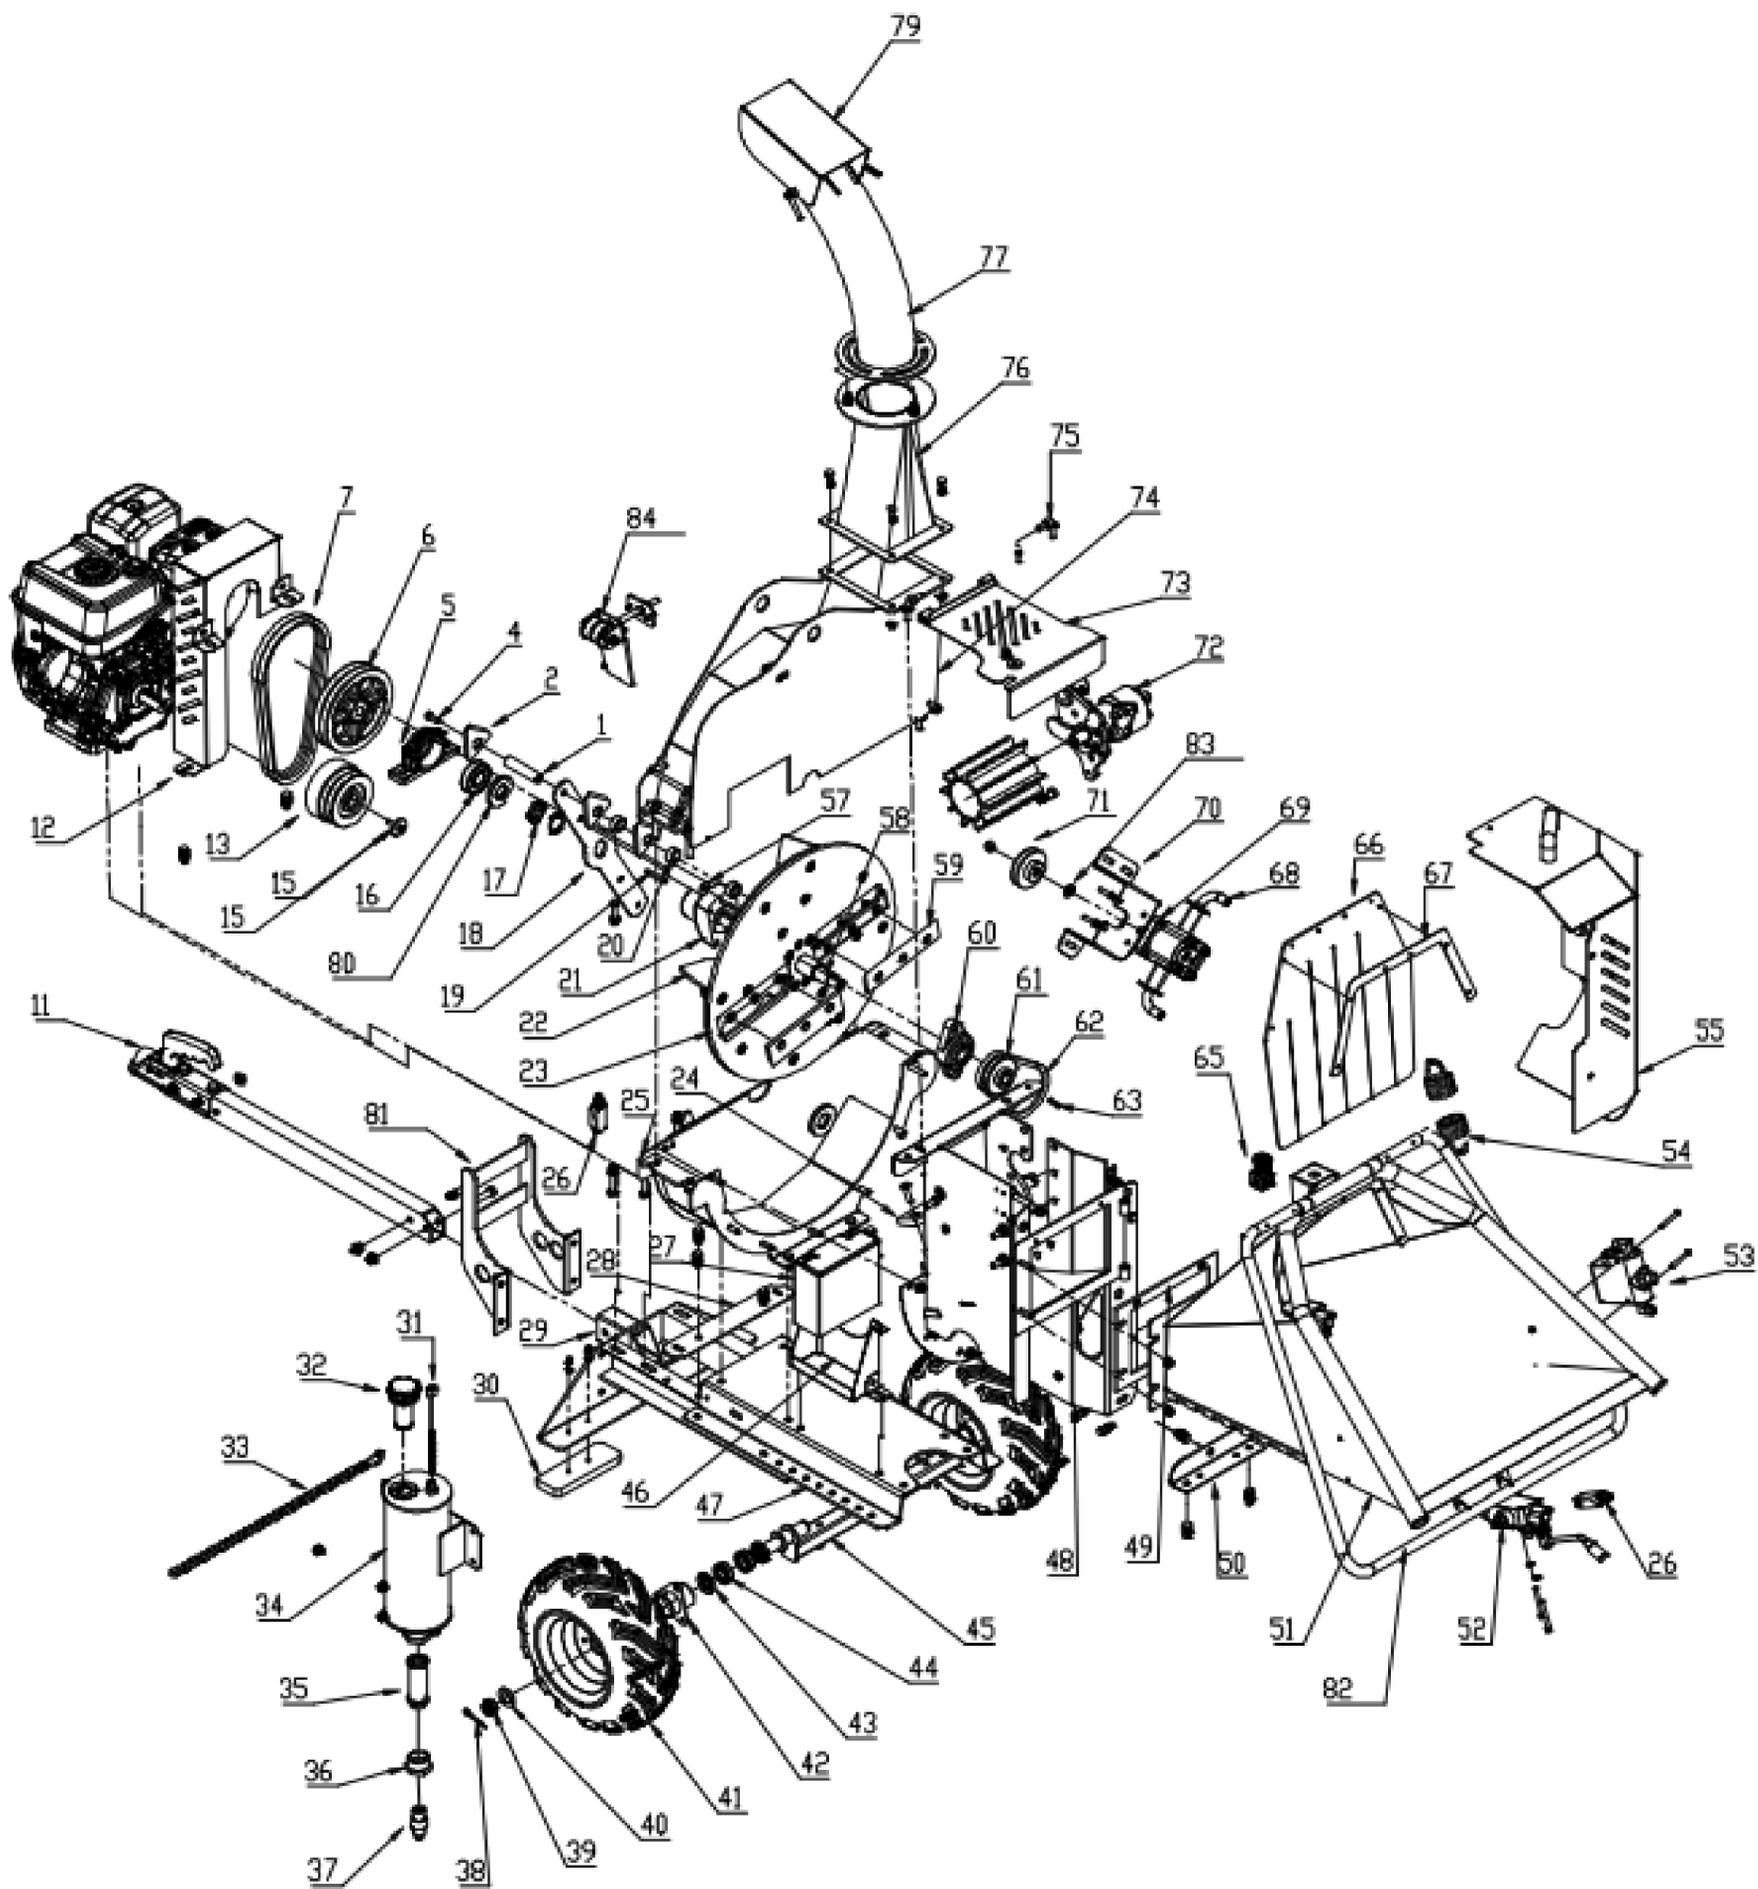

PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
1	16	DA04-WC0611-000409-16-111	PENTA-BLADE ROD	-
2	16	DA04-WC0611-000409-16-112	TRIANGLE BLADE	-
4	16	DA04-WC0611-000409-16-113	M10*25 THINHEAD SCREW	-
5	16	DA04-WC0611-000409-16-114	BEARING 1507	-
6	16	DA04-WC0611-000409-16-115	PULLEY Ø200	-
7	16	DA04-WC0611-000409-16-116	B-BELT 940	-
8	16	DA04-WC0611-000409-16-117	ENGINE	-
11	16	DA04-WC0611-000409-16-118	TOW BAR	-
12	16	DA04-WC0611-000409-16-119	BELT COVER	-
13	16	DA04-WC0611-000409-16-120	CLUTCH Ø125	-
15	16	DA04-WC0611-000409-16-121	M8*25 SCREW	-
16	16	DA04-WC0611-000409-16-122	BEARING 6306-2RS	-
17	16	DA04-WC0611-000409-16-123	LOCK NUT M35*1-5	-
18	16	DA04-WC0611-000409-16-124	BLADE PUSH-PLATE	-
19	16	DA04-WC0611-000409-16-125	KEY WAY 8*7*60	-
20	16	DA04-WC0611-000409-16-126	LONG BLADE SPACER	-
21	16	DA04-WC0611-000409-16-127	BEARING BASE	-
22	16	DA04-WC0611-000409-16-128	FAN PLATE	-
23	16	DA04-WC0611-000409-16-129	BLADE PLATE	-
24	16	DA04-WC0611-000409-16-130	ANVIL	-
25	16	DA04-WC0611-000409-16-131	BOTTOM FRAME	-
26	16	DA04-WC0611-000409-16-132	SWITCH	-
27	16	DA04-WC0611-000409-16-133	BATTERY	-
28	16	DA04-WC0611-000409-16-134	COVER FIXING PLATE	-
29	16	DA04-WC0611-000409-16-135	REAR FRAME	-
30	16	DA04-WC0611-000409-16-136	RUBBER PAD	-
31	16	DA04-WC0611-000409-16-137	OIL BEAN COVER	-
32	16	DA04-WC0611-000409-16-138	OIL FEED FILTER	-
33	16	DA04-WC0611-000409-16-139	CHAIN	-
34	16	DA04-WC0611-000409-16-140	TANK	-
35	16	DA04-WC0611-000409-16-141	OIL OUTLET FILTER	-
36	16	DA04-WC0611-000409-16-142	1.5INCH INTERFACE	-
37	16	DA04-WC0611-000409-16-143	OIL OUTLET INTERFACE	-
38	16	DA04-WC0611-000409-16-144	PIN Ø3.5*40	-
39	16	DA04-WC0611-000409-16-145	NUT M24	-
40	16	DA04-WC0611-000409-16-146	Ø25 WASHER	-
41	16	DA04-WC0611-000409-16-147	WHEEL 16*8.0-7	-
42	16	DA04-WC0611-000409-16-148	FLANGE	-
43	16	DA04-WC0611-000409-16-149	SEAL Ø25*47*7	-
44	16	DA04-WC0611-000409-16-150	BEARING6205	-
45	16	DA04-WC0611-000409-16-151	WHEEL PIPE AXLE	-
46	16	DA04-WC0611-000409-16-152	BATTERY BOX	-
47	16	DA04-WC0611-000409-16-153	BASEFRAME PLATE	-
48	16	DA04-WC0611-000409-16-154	MOUTH FRAME	-
49	16	DA04-WC0611-000409-16-155	FEED RUBBER	-
50	16	DA04-WC0611-000409-16-156	FOOT ANGLE PLATE	-
51	16	DA04-WC0611-000409-16-157	FEED HOPPER	-
52	16	DA04-WC0611-000409-16-158	SWITCH VALVE	-
53	16	DA04-WC0611-000409-16-159	SPEED VALVE	-
54	16	DA04-WC0611-000409-16-160	SPRING	-
55	16	DA04-WC0611-000409-16-161	COVER	-
57	16	DA04-WC0611-000409-16-162	INTERVAL ROD	-
58	16	DA04-WC0611-000409-16-163	MAIN AXLE	-
59	16	DA04-WC0611-000409-16-164	PLATE BLADE	-
60	16	DA04-WC0611-000409-16-165	BEARING FL206	-
61	16	DA04-WC0611-000409-16-166	PULLEY A Ø90	-
62	16	DA04-WC0611-000409-16-167	BELT A Ø500	-
63	16	DA04-WC0611-000409-16-168	PIN 8*7*30	-
65	16	DA04-WC0611-000409-16-169	EMERGENCY STOP	-
66	16	DA04-WC0611-000409-16-170	HOPPER BLOCK PLATE	-
67	16	DA04-WC0611-000409-16-171	PUSH BAR	-
68	16	DA04-WC0611-000409-16-172	PUMP JOINT	-
69	16	DA04-WC0611-000409-16-173	PUMP	-
70	16	DA04-WC0611-000409-16-174	PUMP FIXING PLATE	-
71	16	DA04-WC0611-000409-16-175	PUMP PULLEY	-
72	16	DA04-WC0611-000409-16-176	RATCHET & MOTOR	-
73	16	DA04-WC0611-000409-16-177	TOP COVER	-
74	16	DA04-WC0611-000409-16-178	TOP BODY	-
75	16	DA04-WC0611-000409-16-179	SCREW HOOK	-
76	16	DA04-WC0611-000409-16-180	BOTTOM DISCHARGE	-
77	16	DA04-WC0611-000409-16-181	TOP DISCHARGE	-
78	16	DA04-WC0611-000409-16-182	FASTEN HANDLE	-
79	16	DA04-WC0611-000409-16-183	REFLECT COVER	-
80	16	DA04-WC0611-000409-16-184	BEARING SEAL	-
81	16	DA04-WC0611-000409-16-185	ENGINE PROTECTION	-
82	16	DA04-WC0611-000409-16-186	EMERGENCY STOP BAR	-
83	16	DA04-WC0611-000409-16-187	WASHER	-
84	16	DA04-WC0611-000409-16-188	TENSION WHEEL	-