




**DAEWOO**  
POWER PRODUCTS


**DAFWC230**  
WOOD CHIPPER

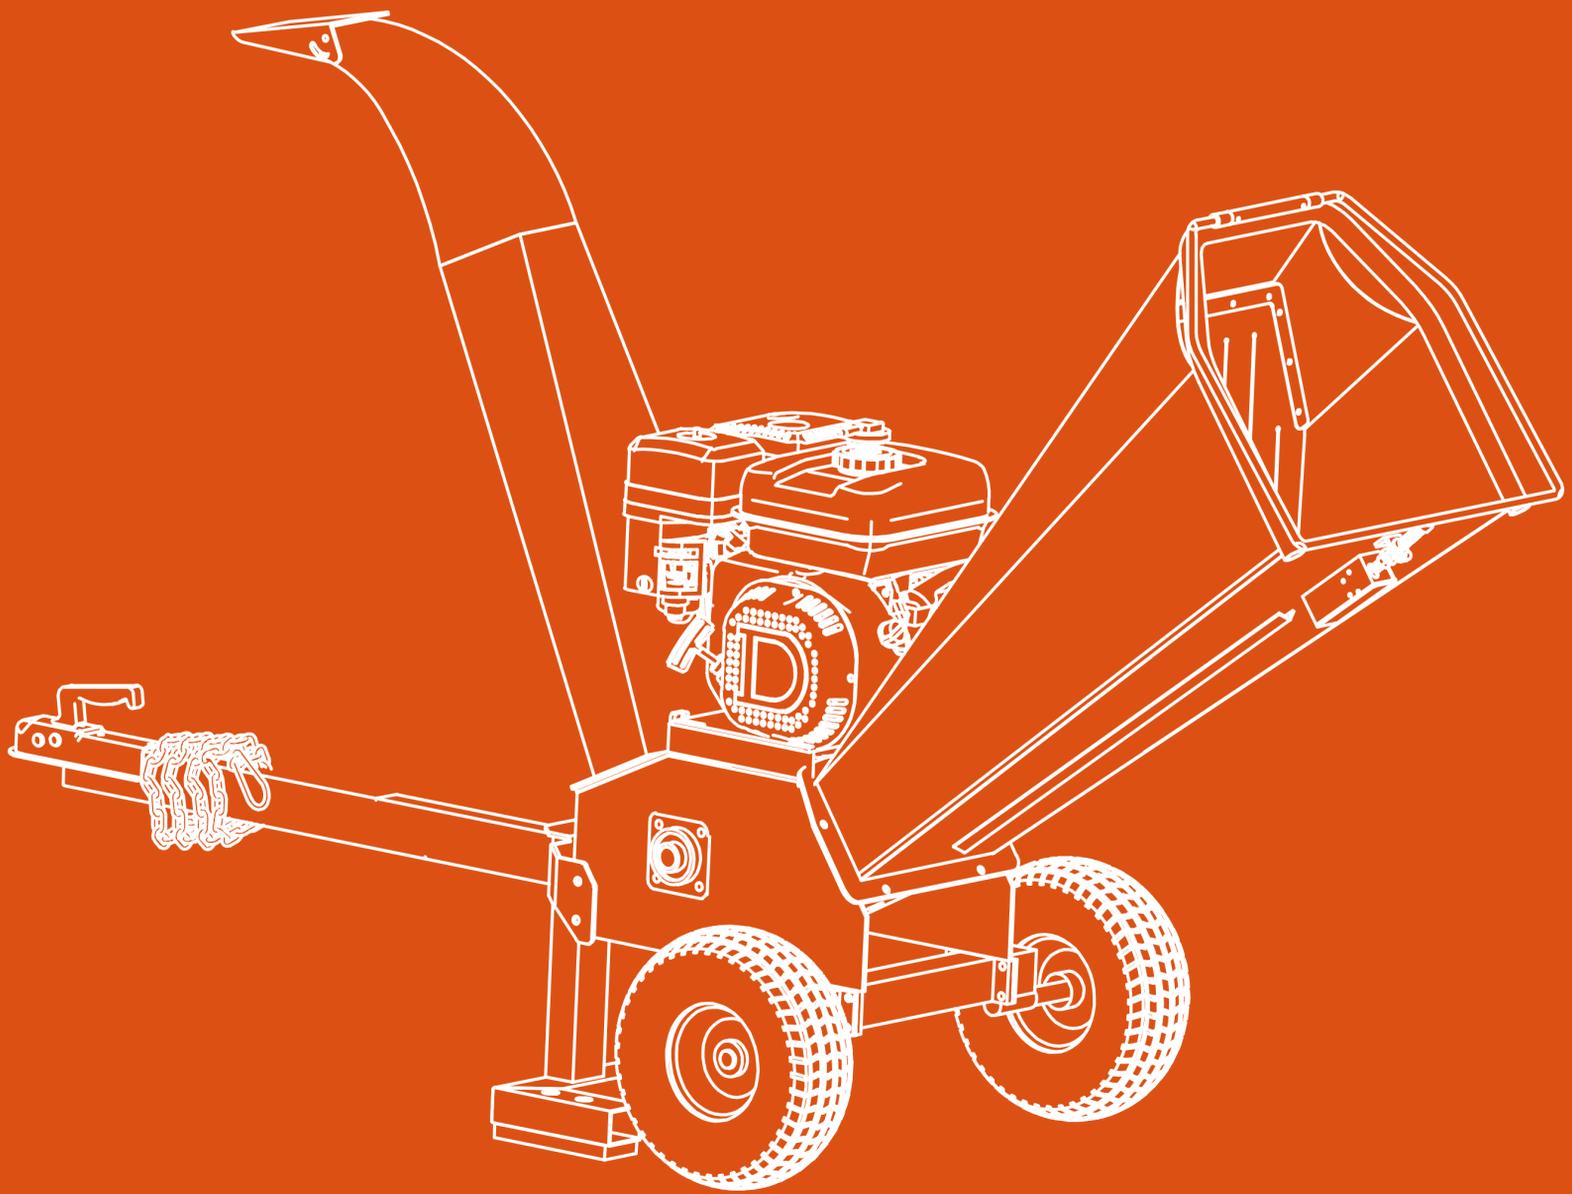

**EXPLODED VIEW / DESPIECE / VUE ÉCLATÉE**


[www.daewoopowerproducts.com](http://www.daewoopowerproducts.com)

Manufactured under license of Daewoo International Corporation, Korea  
Fabricado bajo licencia de Daewoo International Corporation, Corea

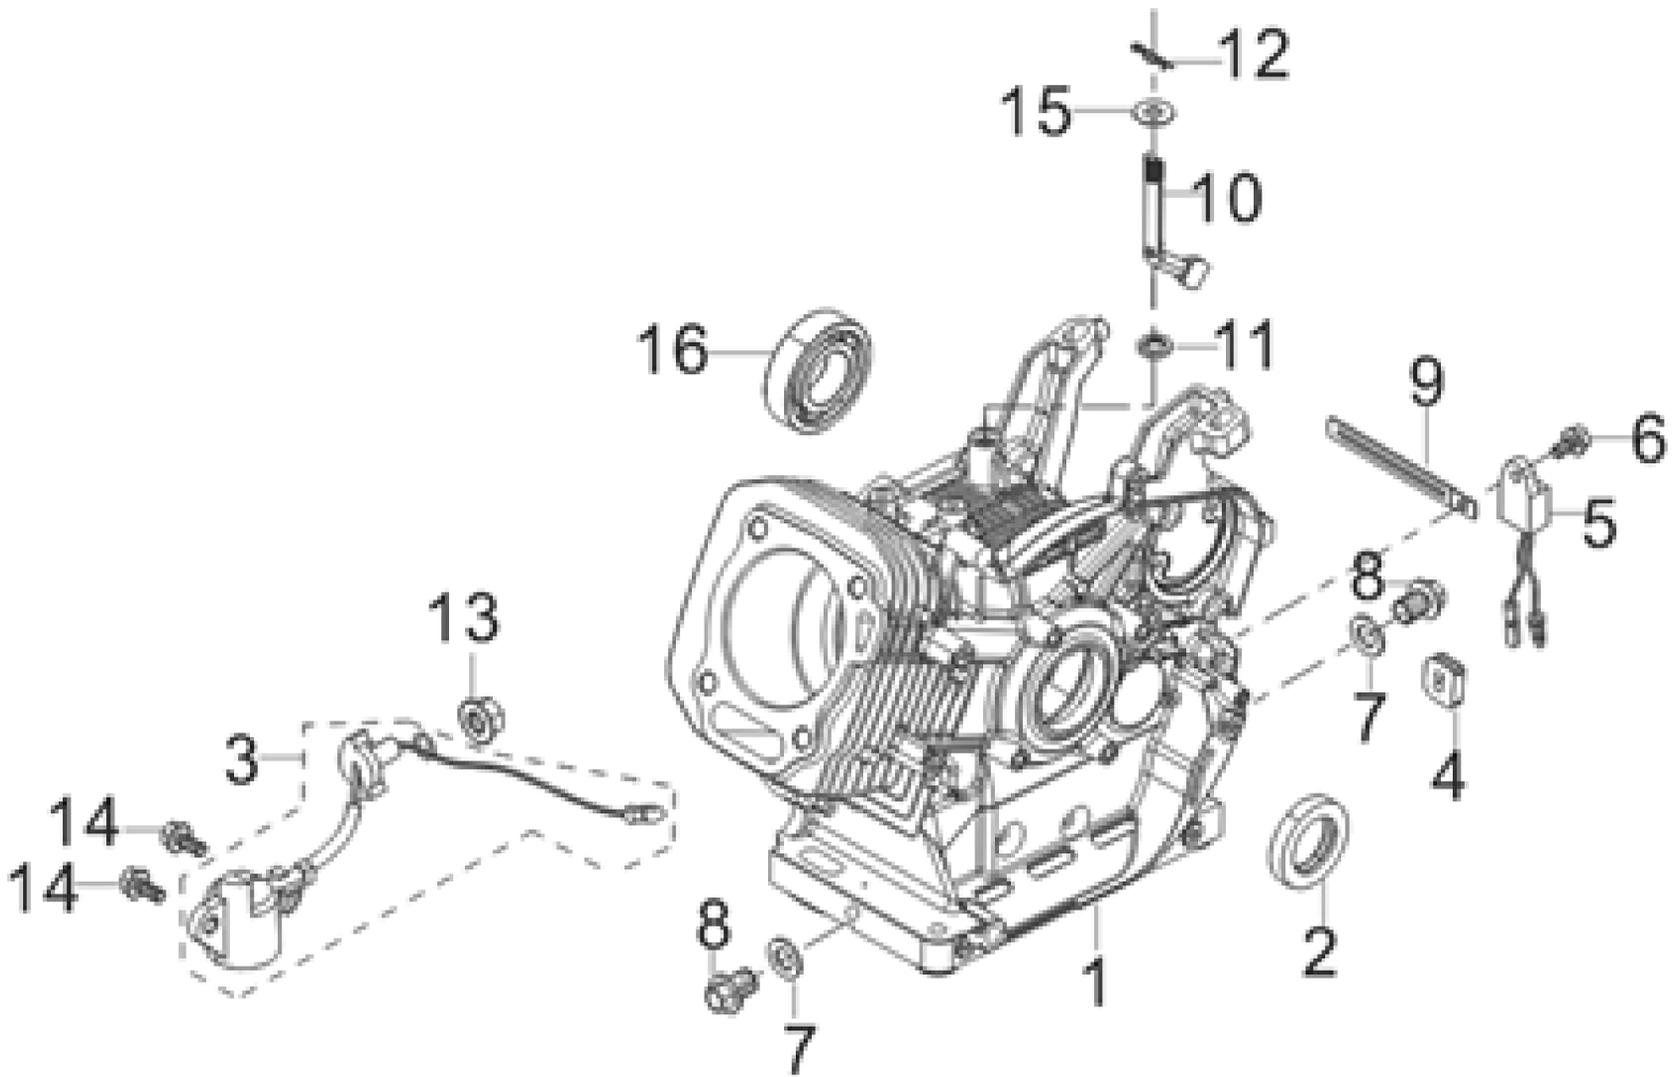


PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
E01-1	1	DA04-WC0511-000409-01-001	CRANKCASE SUBASSEMBLY.	1
E01-2	1	DA04-WC0511-000409-01-002	SEAL, OIL	1
E01-3	1	DA04-WC0511-000409-01-003	SENSOR, ENGINE OIL	1
E01-4	1	DA04-WC0511-000409-01-004	PLUG, RUBBER	1
E01-5	1	DA04-WC0511-000409-01-005	PROTECTOR, OIL	1
E01-6	1	DA04-WC0511-000409-01-006	BOLT	1
E01-7	1	DA04-WC0511-000409-01-007	WASHER, FLAT	2
E01-8	1	DA04-WC0511-000409-01-008	BOLT, DRAIN PLUG	2
E01-9	1	DA04-WC0511-000409-01-009	CLIP	1
E01-10	1	DA04-WC0511-000409-01-010	ARM, GOVERNOR	1
E01-11	1	DA04-WC0511-000409-01-011	SEAL, OIL	1
E01-12	1	DA04-WC0511-000409-01-012	PIN	1
E01-13	1	DA04-WC0511-000409-01-013	NUT	1
E01-14	1	DA04-WC0511-000409-01-014	BOLT	2
E01-15	1	DA04-WC0511-000409-01-015	WASHER, FLAT	1
E01-16	1	DA04-WC0511-000409-01-016	BEARING, DEEP GROOVE BALL	1


**COVER SUBASSEMBLY, CRANKCASE**

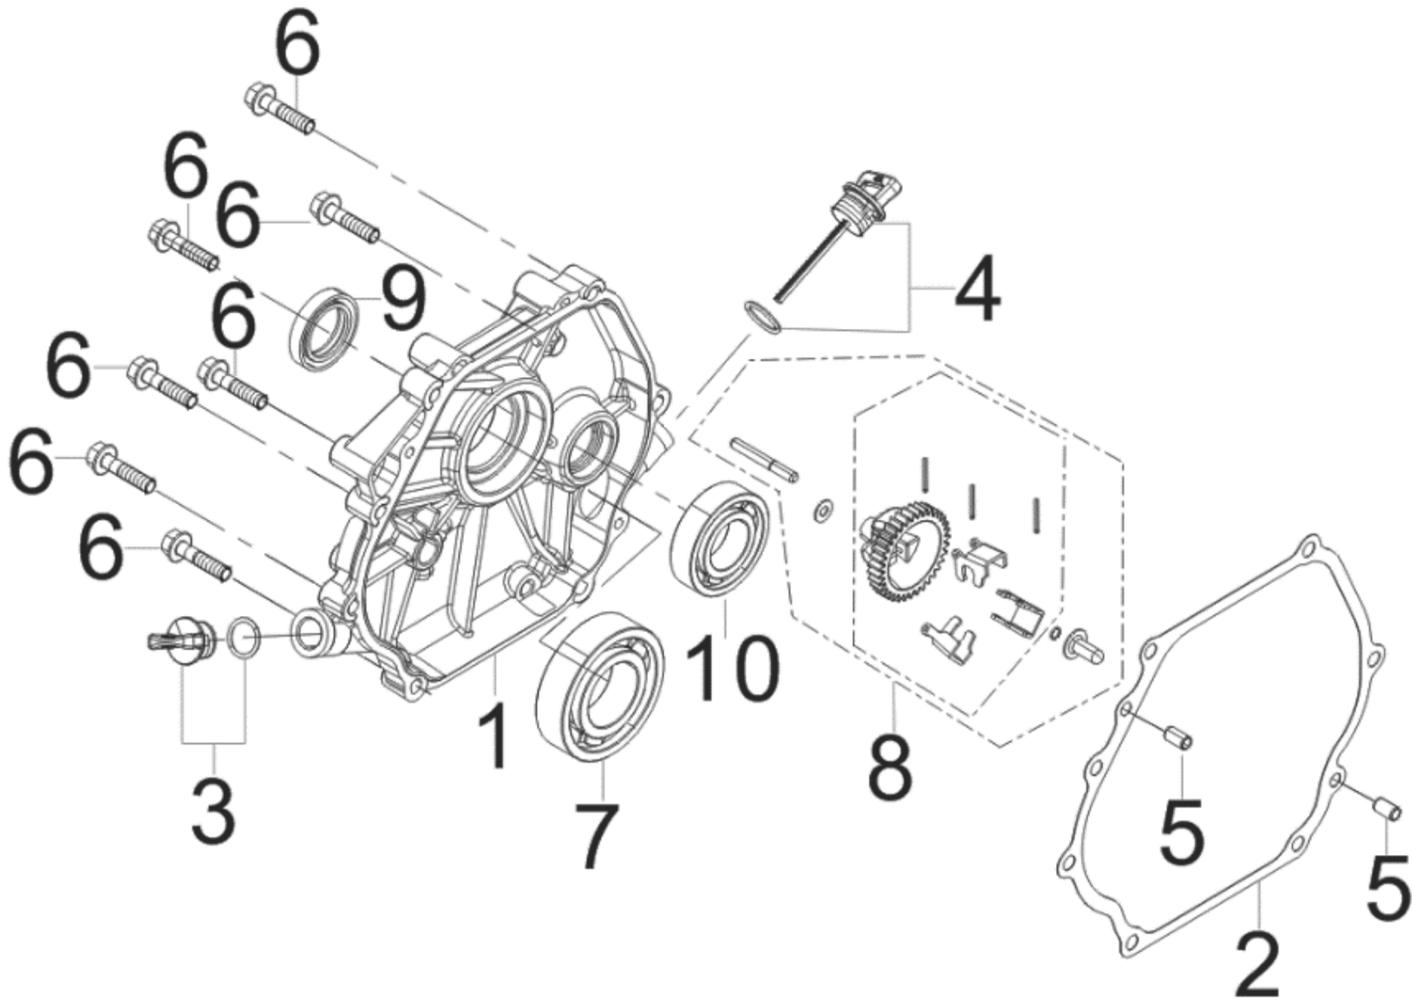


PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
E02-1	2	DA04-WC0511-000409-02-017	COVER, CRANKCASE	1
E02-2	2	DA04-WC0511-000409-02-018	GASKET, CRANKCASE	1
E02-3	2	DA04-WC0511-000409-02-019	PLUG SUBASSEMBLY, ENGINE OIL	1
E02-4	2	DA04-WC0511-000409-02-020	DIPSTICK SUBASSEMBLY, OIL	1
E02-5	2	DA04-WC0511-000409-02-021	PIN	2
E02-6	2	DA04-WC0511-000409-02-022	BOLT	7
E02-7	2	DA04-WC0511-000409-02-023	BEARING, DEEP GROOVE BALL	1
E02-8	2	DA04-WC0511-000409-02-024	GEAR ASSY, GOVERNOR	1
E02-9	2	DA04-WC0511-000409-02-025	SEAL, OIL	1
E02-10	2	DA04-WC0511-000409-02-026	BEARING, DEEP GROOVE BALL	1

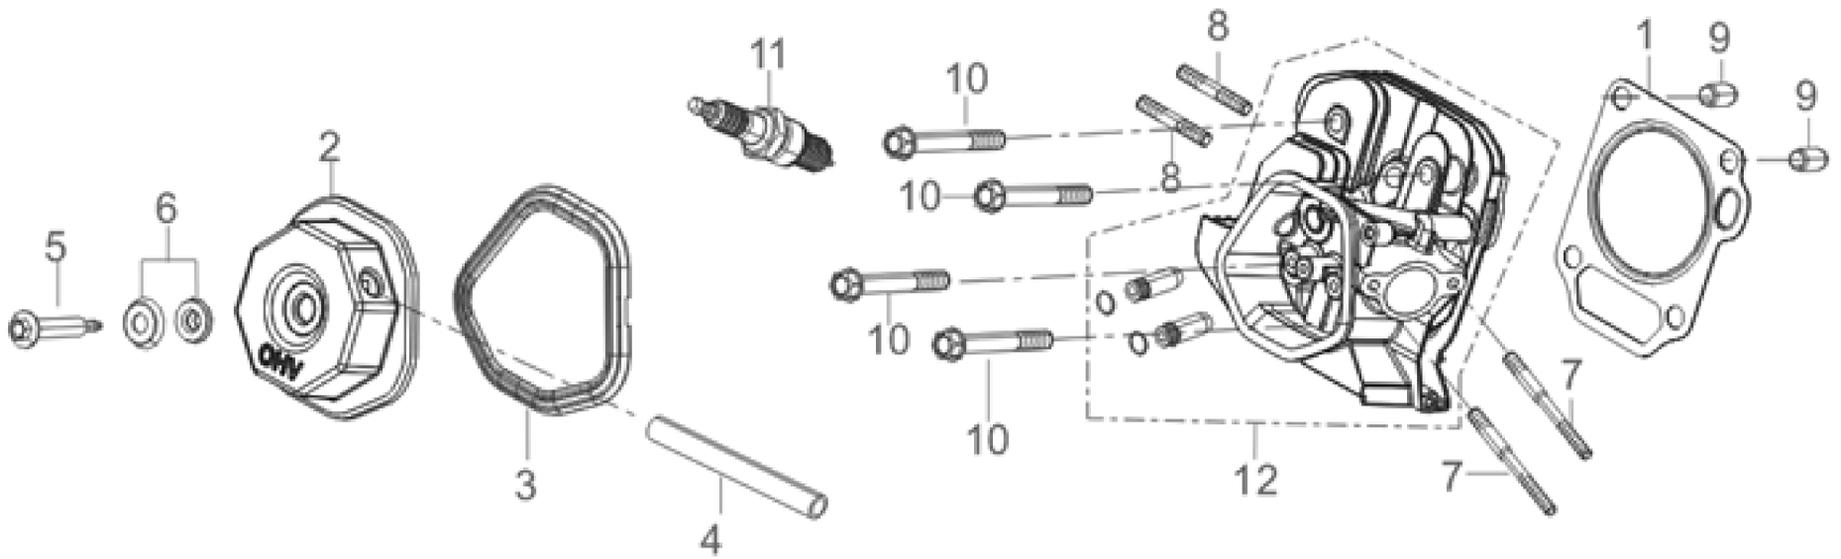

PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
E03-1	3	DA04-WC0511-000409-03-027	GASKET, CYLINDER HEAD	1
E03-2	3	DA04-WC0511-000409-03-028	COVER SUBASSEMBLY, CYLINDER HEAD	1
E03-3	3	DA04-WC0511-000409-03-029	GASKET, CYLINDER HEAD COVER	1
E03-4	3	DA04-WC0511-000409-03-030	TUBE, BREATHER	1
E03-5	3	DA04-WC0511-000409-03-031	BOLT, CYLINDER HEAD	1
E03-6	3	DA04-WC0511-000409-03-032	Cylinder epicranium bolt seal&gasket unit	1
E03-7	3	DA04-WC0511-000409-03-033	BOLT	2
E03-8	3	DA04-WC0511-000409-03-034	BOLT	2
E03-9	3	DA04-WC0511-000409-03-035	PIN	2
E03-10	3	DA04-WC0511-000409-03-036	BOLT, CYLINDER HEAD	4
E03-11	3	DA04-WC0511-000409-03-037	PLUG, SPARK	1
E03-12	3	DA04-WC0511-000409-03-038	HEAD SUBASSEMBLY, CYLINDER	1

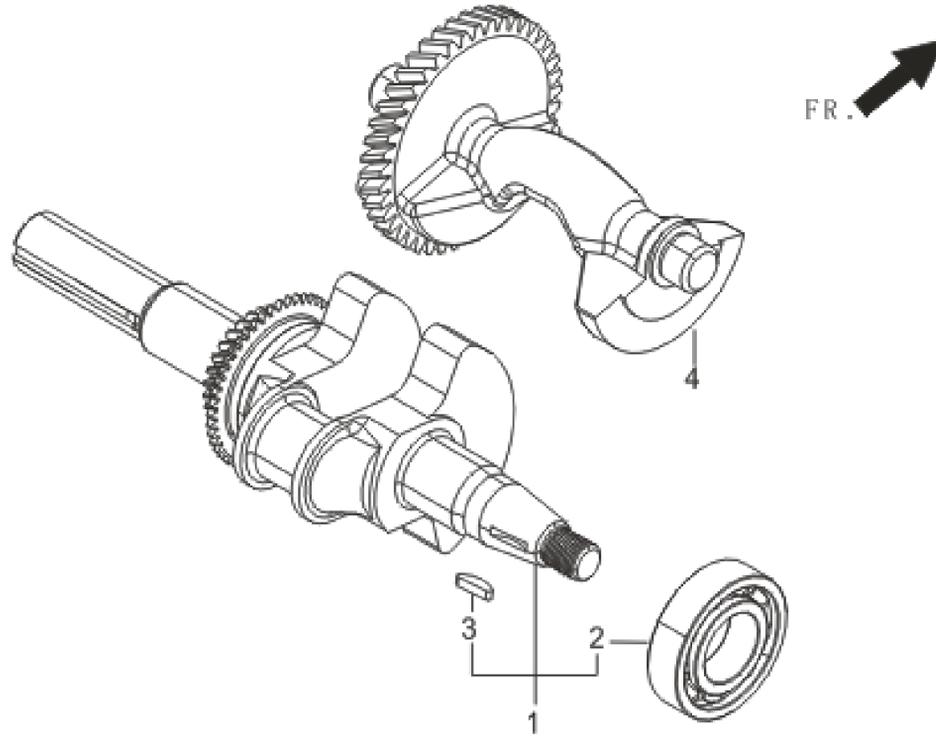


PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
E04-1	4	DA04-WC0511-000409-04-039	CRANKSHAFT ASSY.	1
E04-4	4	DA04-WC0511-000409-04-040	SHAFT ASSY, BALANCING	1

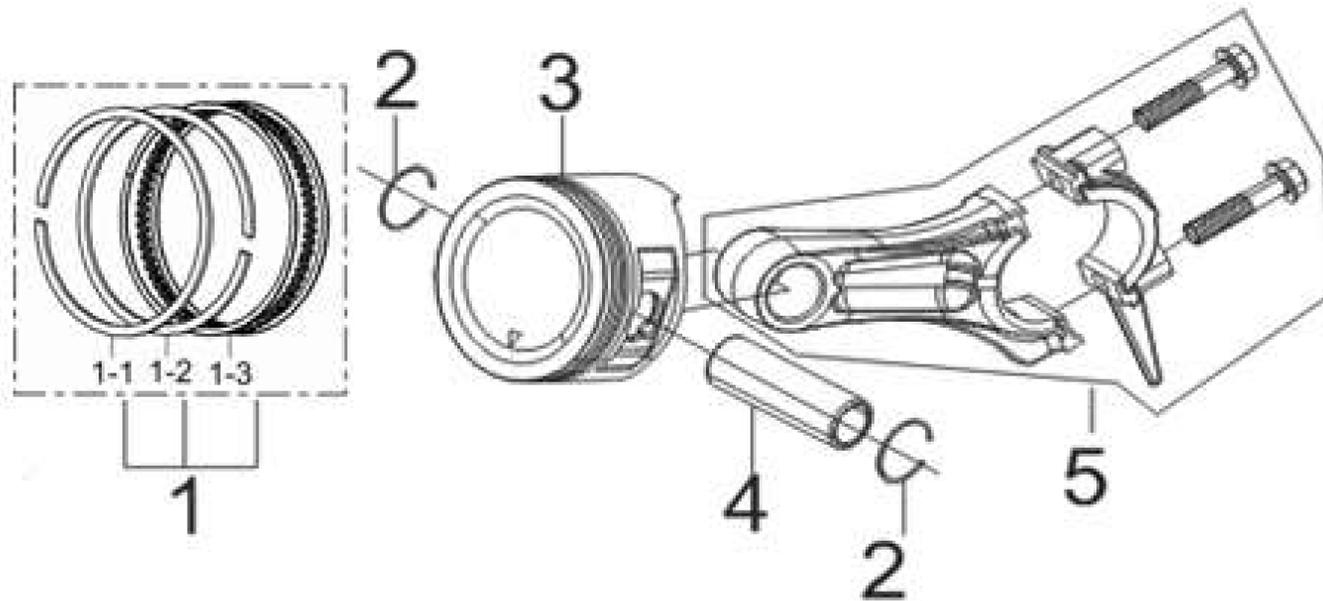


PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
E05-1	5	DA04-WC0511-000409-05-041	RING ASSY, PISTON	1
E05-2	5	DA04-WC0511-000409-05-042	CLIP, PISTON PIN	2
E05-3	5	DA04-WC0511-000409-05-043	PISTON	1
E05-4	5	DA04-WC0511-000409-05-044	PIN, PISTON	1
E05-5	5	DA04-WC0511-000409-05-045	ROD, CONNECTING	1


**TRAIN, VALVE / CAMSHAFT SUBASSEMBLY**

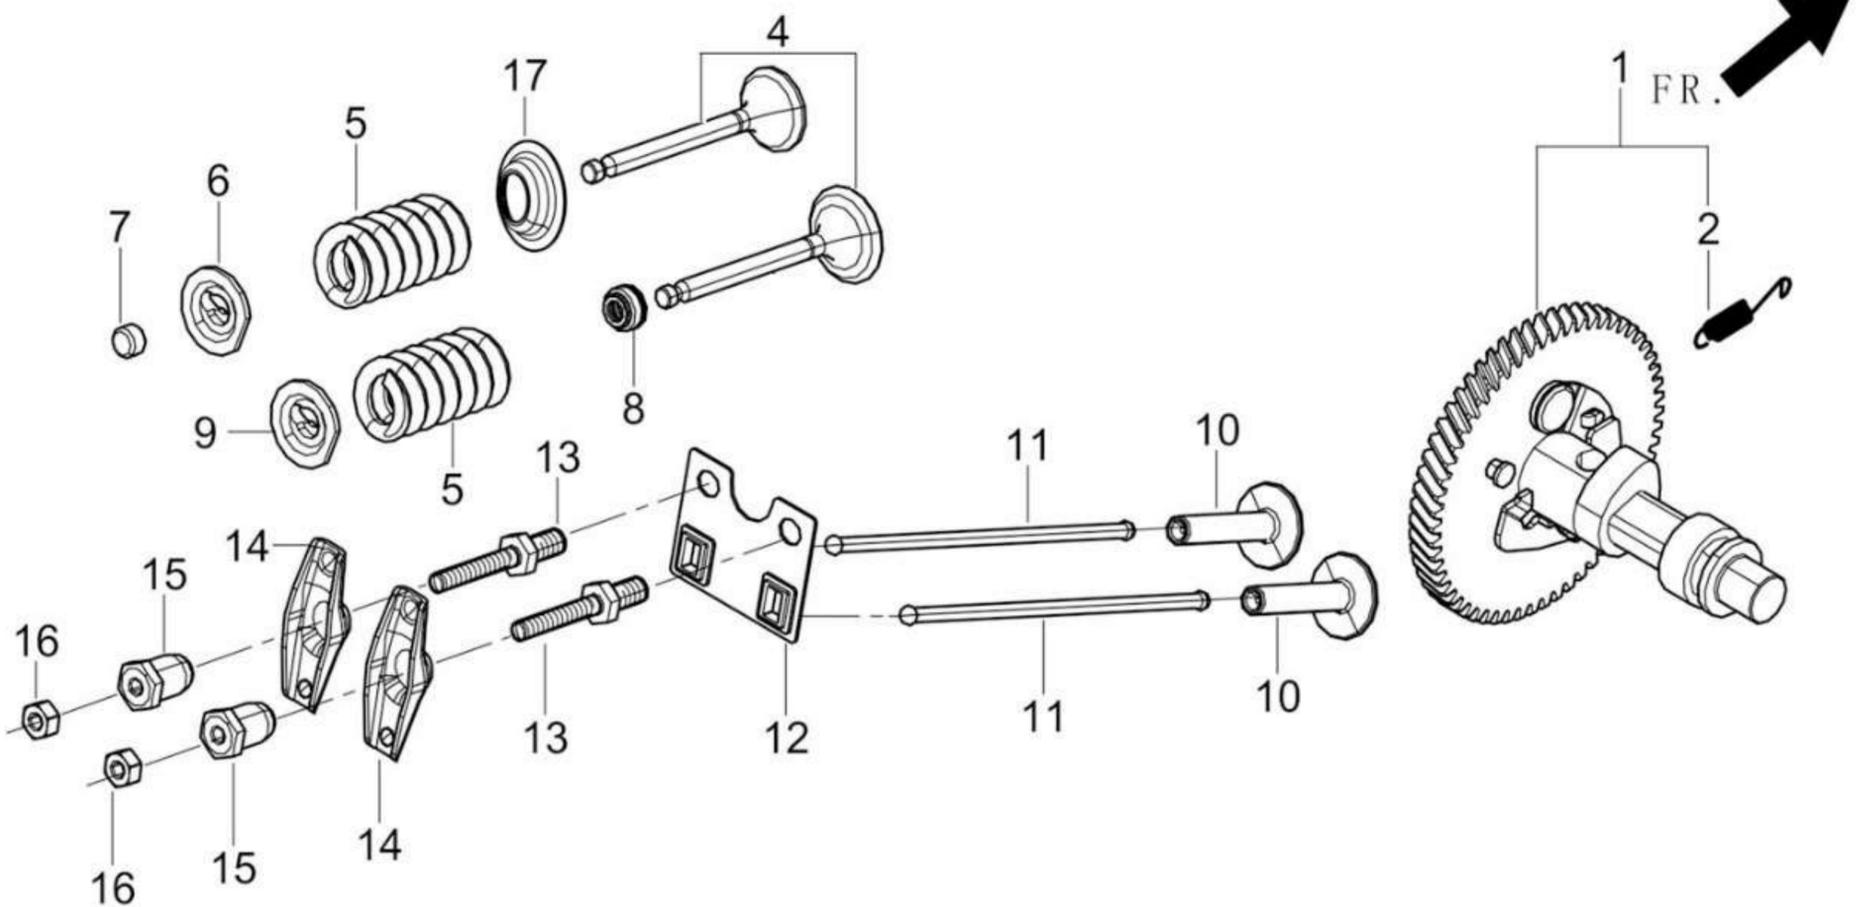


PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
E06-1	6	DA04-WC0511-000409-06-046	CAMSHAFT ASSY.	1
E06-4	6	DA04-WC0511-000409-06-047	VALVE	1
E06-5	6	DA04-WC0511-000409-06-048	SPRING, VALVE	2
E06-6	6	DA04-WC0511-000409-06-049	RETAINER, EXHAUST VALVE	1
E06-7	6	DA04-WC0511-000409-06-050	ROTATOR, VALVE	1
E06-8	6	DA04-WC0511-000409-06-051	GUIDE, SEAL	1
E06-9	6	DA04-WC0511-000409-06-052	SEAT, VALVE SPRING	1
E06-10	6	DA04-WC0511-000409-06-053	TAPPET, VALVE	2
E06-11	6	DA04-WC0511-000409-06-054	LIFTER SUBASSEMBLY, VALVE	2
E06-12	6	DA04-WC0511-000409-06-055	PLATE SUBASSEMBLY, LIFTER STOPPER	1
E06-13	6	DA04-WC0511-000409-06-056	BOLT, ROCKER SHAFT	2
E06-14	6	DA04-WC0511-000409-06-057	ROCKER, VALVE	2
E06-15	6	DA04-WC0511-000409-06-058	NUT, VALVE ADJUSTING	2
E06-16	6	DA04-WC0511-000409-06-059	NUT, VALVE LOCK	2
E06-17	6	DA04-WC0511-000409-06-060	RETAINER, VALVE SPRING	1

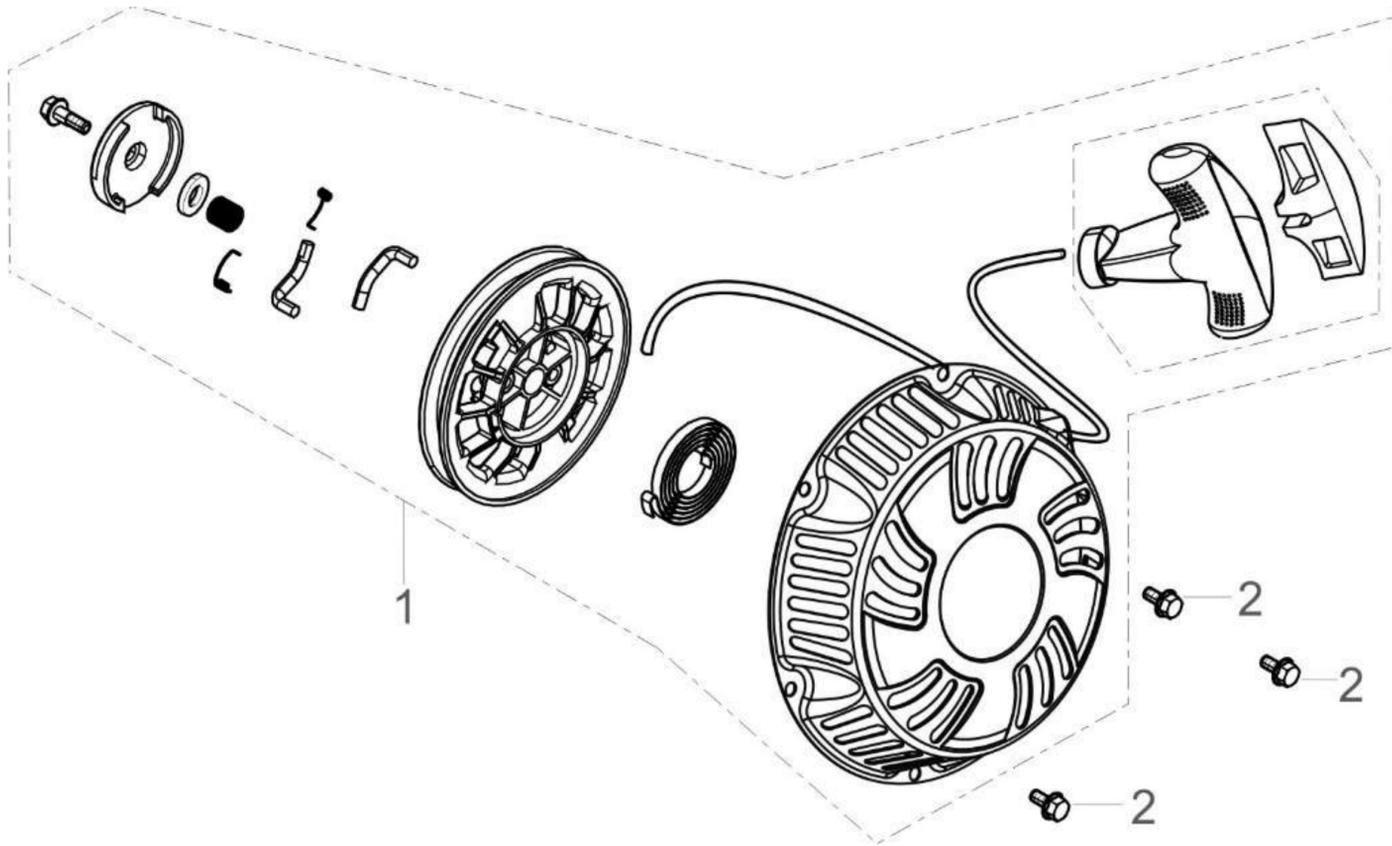


PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
E07-1	7	DA04-WC0511-000409-07-061	STARTER ASSY, RECOIL	1
E07-2	7	DA04-WC0511-000409-07-062	BOLT	3

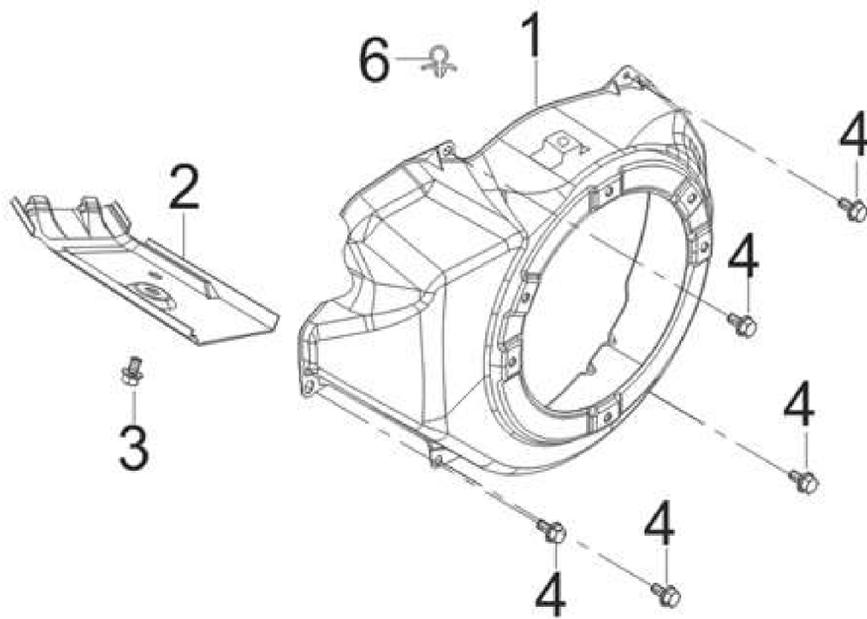

PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
E08-1	8	DA04-WC0511-000409-08-063	SHROUD	1
E08-2	8	DA04-WC0511-000409-08-064	SHROUD, CYLINDER BODY	1
E08-3	8	DA04-WC0511-000409-08-065	BOLT	1
E08-4	8	DA04-WC0511-000409-08-066	BOLT	5
E08-6	8	DA04-WC0511-000409-08-067	CLIP	1

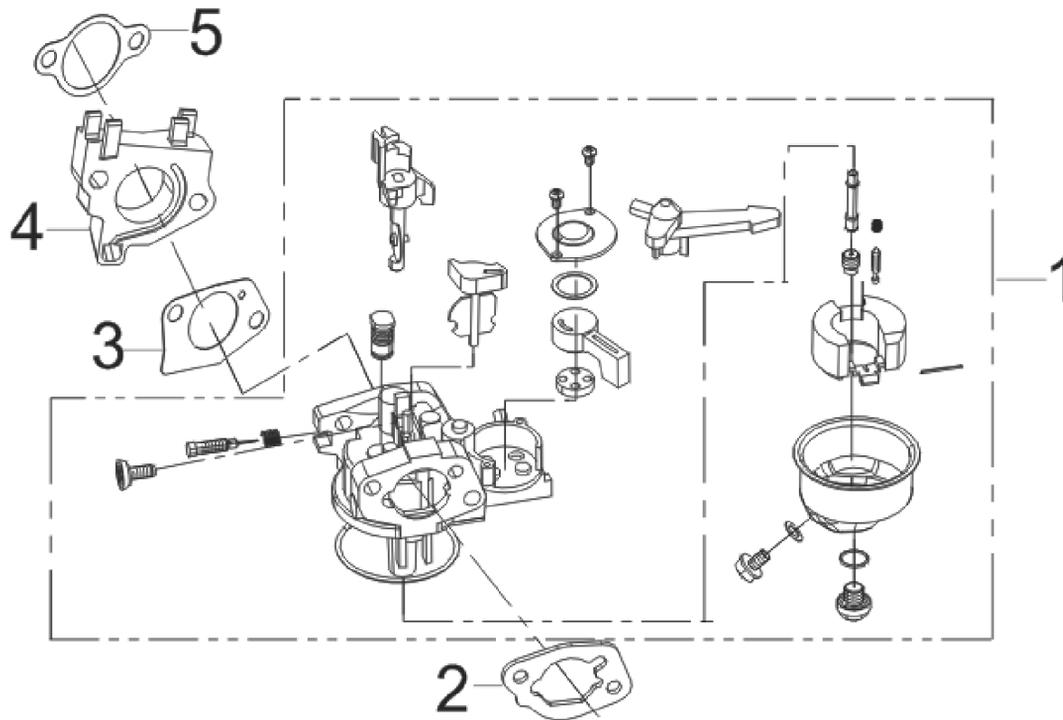


E09-1	9	DA04-WC0511-000409-09-068	CARBURETOR ASSY.	1
E09-2	9	DA04-WC0511-000409-09-069	GASKET, AIR CLEANER	1
E09-3	9	DA04-WC0511-000409-09-070	GASKET, CARBURETOR	1
E09-4	9	DA04-WC0511-000409-09-071	PLATE, CARBURETOR INSULATOR	1
E09-5	9	DA04-WC0511-000409-09-072	GASKET, INLET	1

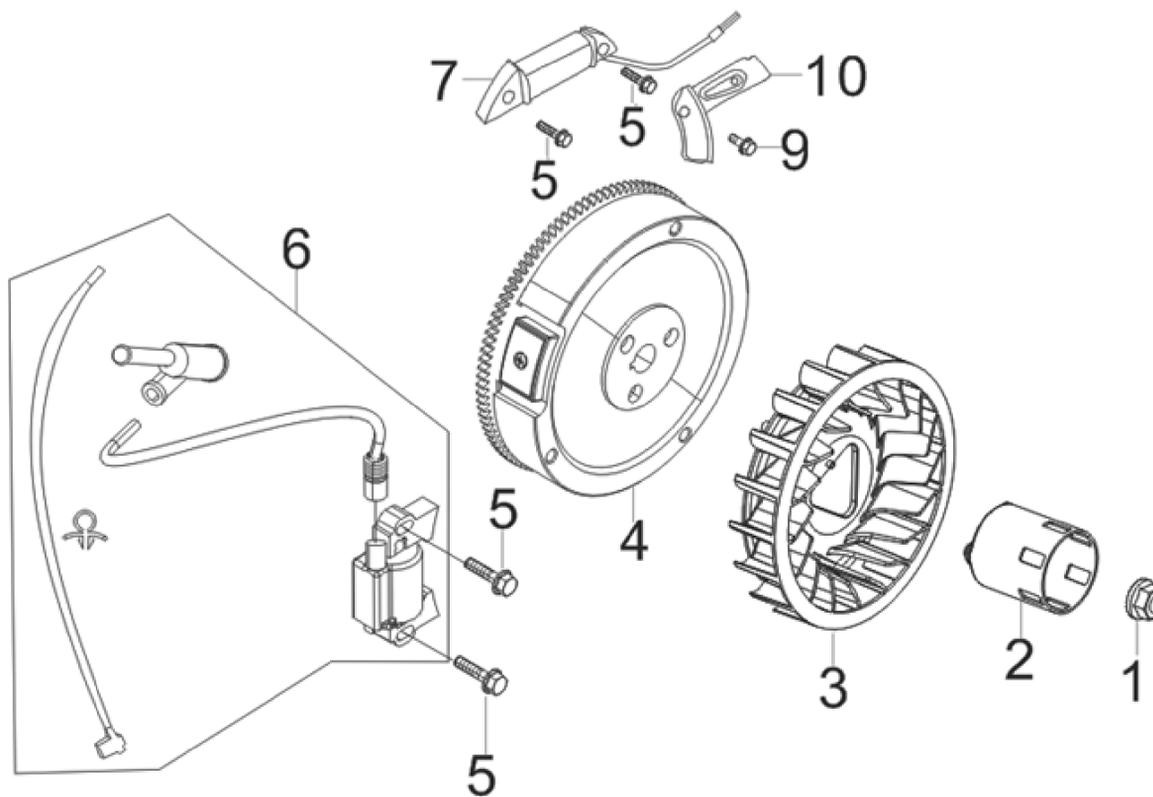


E10-1	10	DA04-WC0511-000409-10-073	NUT, FLYWHEEL	1
E10-2	10	DA04-WC0511-000409-10-074	PULLEY, STARTER	1
E10-3	10	DA04-WC0511-000409-10-075	IMPELLER	1
E10-4	10	DA04-WC0511-000409-10-076	FLYWHEEL SUBASSEMBLY	1
E10-5	10	DA04-WC0511-000409-10-077	BOLT	4
E10-6	10	DA04-WC0511-000409-10-078	COIL, IGNITION	1
E10-7	10	DA04-WC0511-000409-10-079	COIL SUBASSEMBLY, CHARGE	1
E10-9	10	DA04-WC0511-000409-10-080	BOLT	1
E10-10	10	DA04-WC0511-000409-10-081	CLAMP, CHARGE COIL	1

**CONTROL ASSY, THROTTLE - START-UP ELECTRIC MACHINE COMPONENTS**

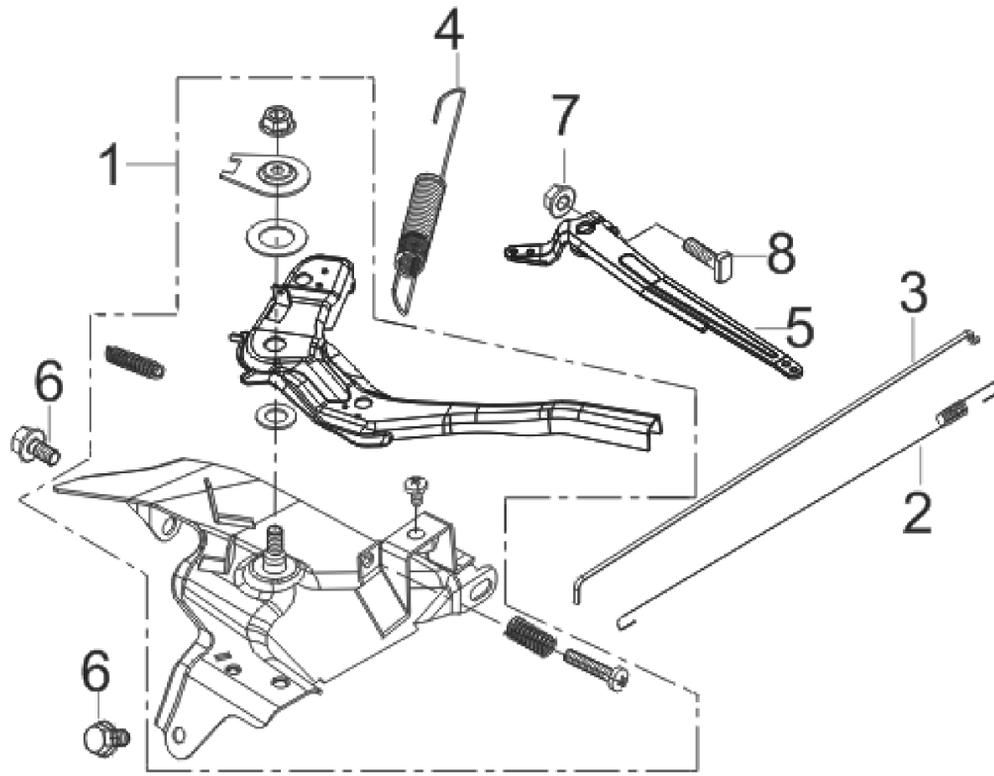


PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
E11-1	11	DA04-WC0511-000409-11-082	CONTROL ASSY, THROTTLE	1
E11-2	11	DA04-WC0511-000409-11-083	SPRING, THROTTLE VALVE RETURNING	1
E11-3	11	DA04-WC0511-000409-11-084	ROD, GOVERNEOR	1
E11-4	11	DA04-WC0511-000409-11-085	SPRING, GOVERNOR	1
E11-5	11	DA04-WC0511-000409-11-086	SUPPORT SUBASSEMBLY, GOVERNOR	1
E11-6	11	DA04-WC0511-000409-11-087	BOLT	2
E11-7	11	DA04-WC0511-000409-11-088	NUT	1
E11-8	11	DA04-WC0511-000409-11-089	BOLT, GOVERNOR SUPPORT	1

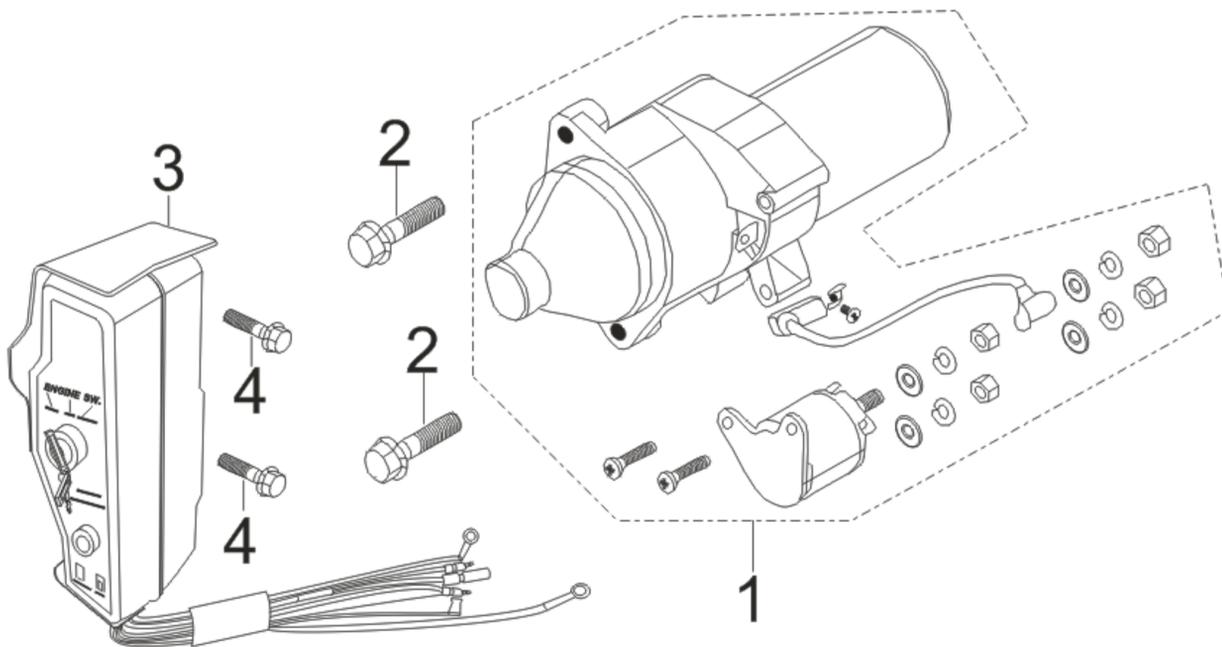


PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
E12-1	12	DA04-WC0511-000409-12-090	MOTOR, STARTING	1
E12-2	12	DA04-WC0511-000409-12-091	BOLT	2
E12-3	12	DA04-WC0511-000409-12-092	BOX, MOTOR CONTROL	1
E12-4	12	DA04-WC0511-000409-12-093	BOLT	2


**CLEANER, AIR - MUFFLER ASSY**

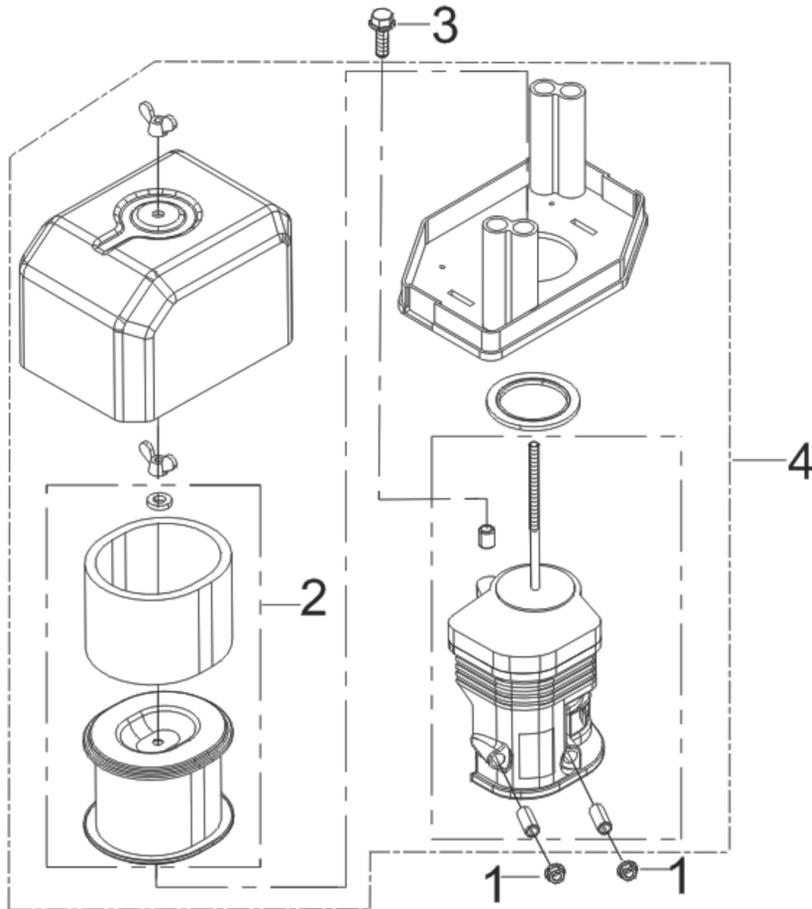


PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
F01-1	13	DA04-WC0511-000409-13-094	NUT	2
F01-2	13	DA04-WC0511-000409-13-095	ELEMENT, AIR CLEANER	1
F01-3	13	DA04-WC0511-000409-13-096	BOLT	1
F01-4	13	DA04-WC0511-000409-13-097	CLEANER, AIR	1

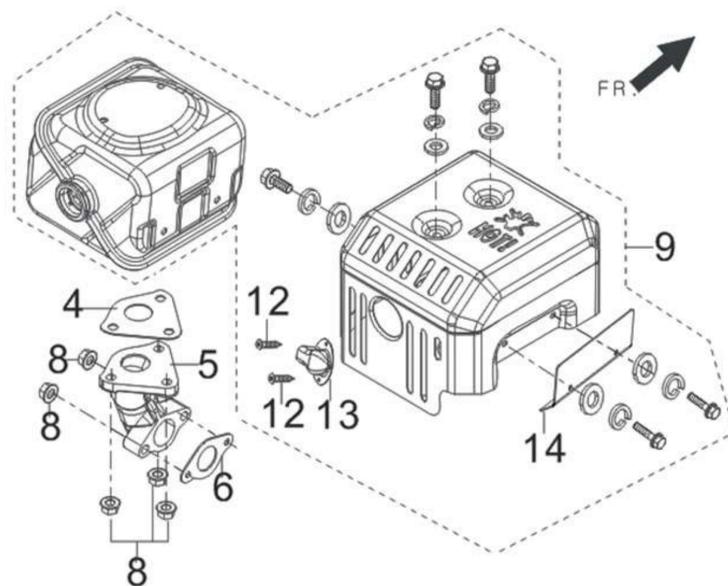

PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
F02-4	14	DA04-WC0511-000409-14-098	GASKET, MUFFLER	1
F02-5	14	DA04-WC0511-000409-14-099	PIPE, EXHAUST	1
F02-6	14	DA04-WC0511-000409-14-100	GASKET, EXHAUST OUTLET	1
F02-8	14	DA04-WC0511-000409-14-101	NUT	5
F02-9	14	DA04-WC0511-000409-14-102	MUFFLER ASSY.	1

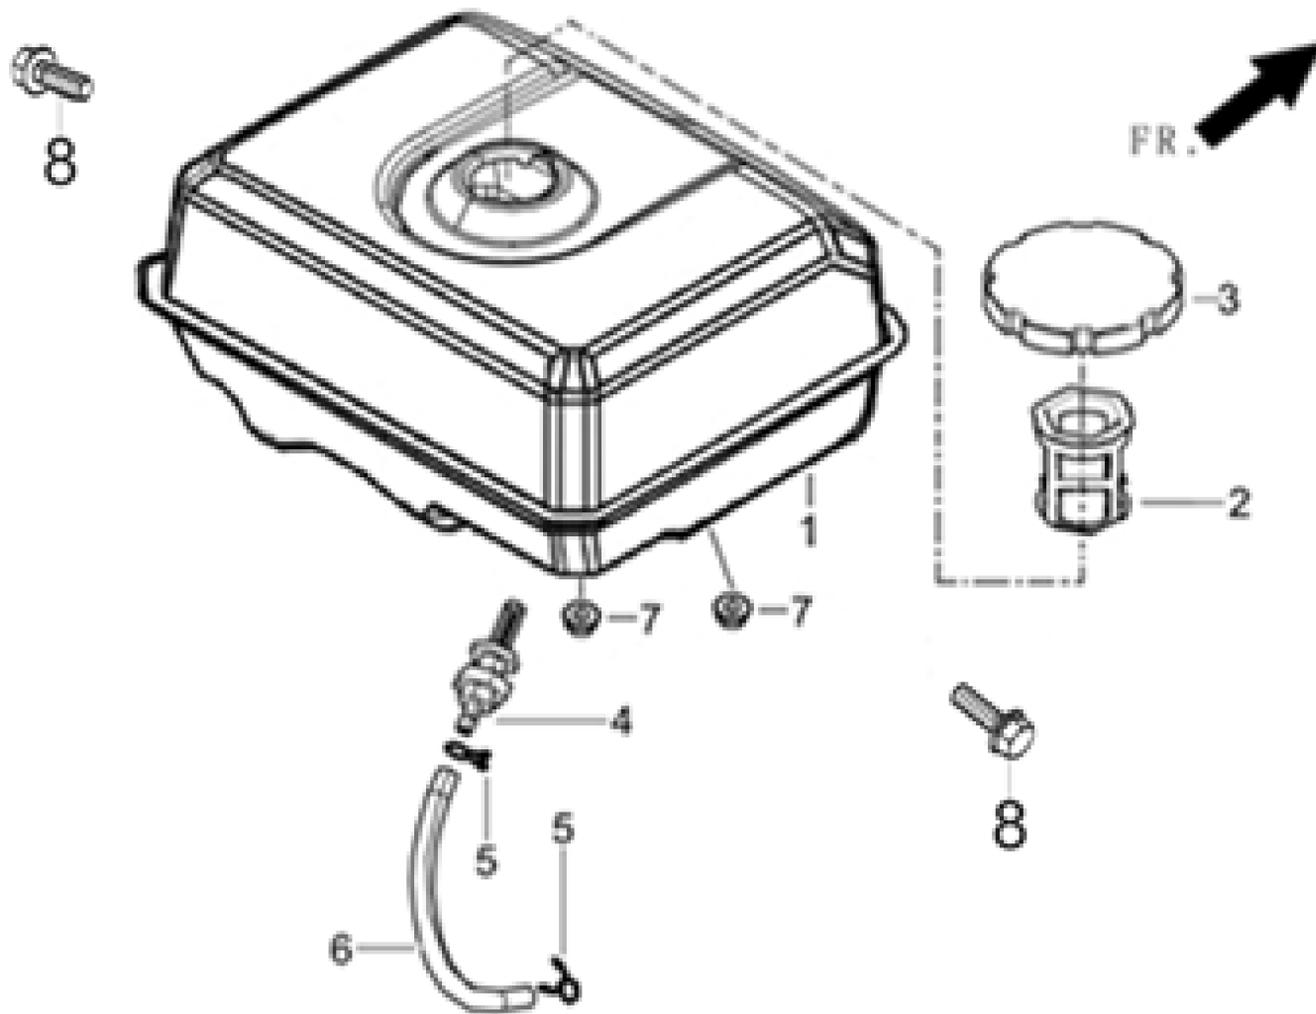

PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
F03-1	15	DA04-WC0511-000409-15-103	TANK, FUEL	1
F03-2	15	DA04-WC0511-000409-15-104	STRAINER, FUEL	1
F03-3	15	DA04-WC0511-000409-15-105	COVER, FUEL TANK	1
F03-4	15	DA04-WC0511-000409-15-106	OUTLET SUBASSEMBLY, FUEL TANK OIL	1
F03-5	15	DA04-WC0511-000409-15-107	COLLAR	2
F03-6	15	DA04-WC0511-000409-15-108	TUBE, FUEL	1
F03-7	15	DA04-WC0511-000409-15-109	NUT	2
F03-8	15	DA04-WC0511-000409-15-110	BOLT	2

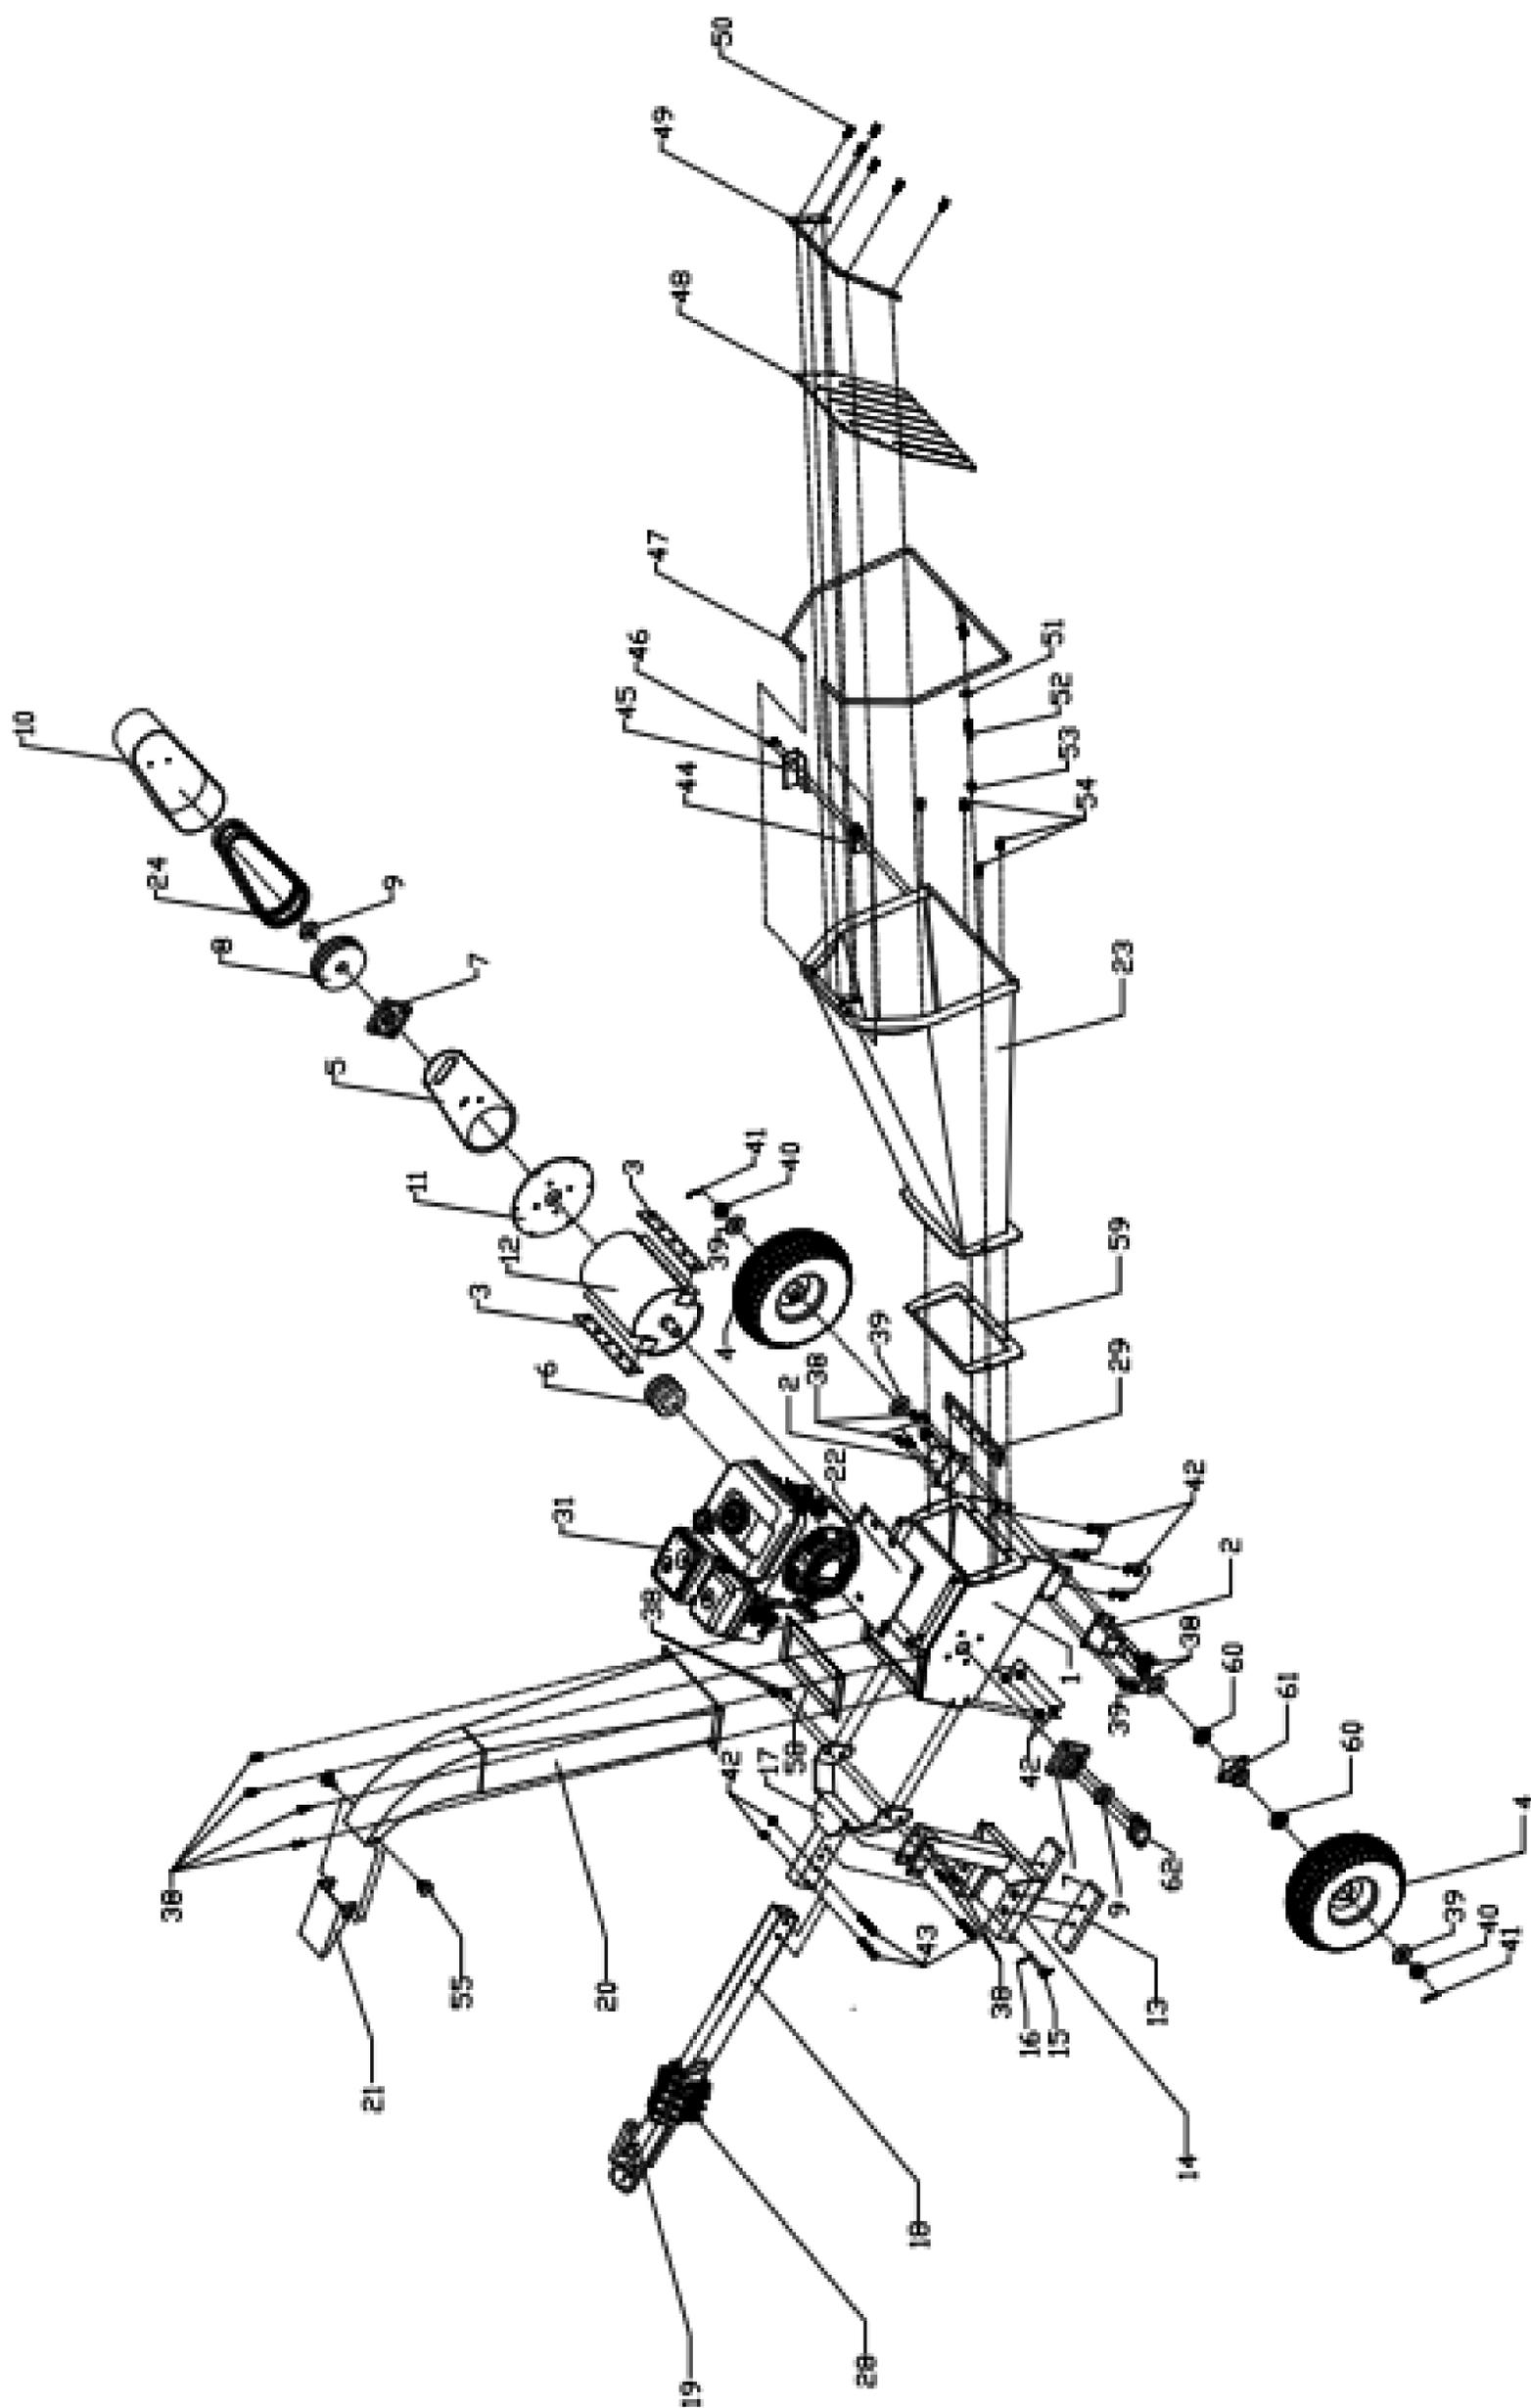

PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
1	16	DA04-WC0511-000409-16-111	FOUNDATION	-
2	16	DA04-WC0511-000409-16-112	WHEEL AXIS	-
3	16	DA04-WC0511-000409-16-113	BLADE	-
4	16	DA04-WC0511-000409-16-114	WHEEL	-
5	16	DA04-WC0511-000409-16-115	BELT COVER INNER PLATE	-
6	16	DA04-WC0511-000409-16-116	CLUTCH	-
7	16	DA04-WC0511-000409-16-117	BEARING	-
8	16	DA04-WC0511-000409-16-118	PULLEY	-
9	16	DA04-WC0511-000409-16-119	42*9*5 SPACER	-
10	16	DA04-WC0511-000409-16-120	BELT COVER	-
11	16	DA04-WC0511-000409-16-121	BEARING FIXATION FRAME	-
12	16	DA04-WC0511-000409-16-122	ROLLER	-
13	16	DA04-WC0511-000409-16-123	RUBBER PAD	-
14	16	DA04-WC0511-000409-16-124	SUPPORT FEET	-
15	16	DA04-WC0511-000409-16-125	BOLT PIN	-
16	16	DA04-WC0511-000409-16-126	B-SHAPE PIN	-
17	16	DA04-WC0511-000409-16-127	FEET FIXATION	-
18	16	DA04-WC0511-000409-16-128	TOWER	-
19	16	DA04-WC0511-000409-16-129	TOWER HITCH	-
20	16	DA04-WC0511-000409-16-130	DISCHARGE	-
21	16	DA04-WC0511-000409-16-131	CHUTE ADJUST	-
22	16	DA04-WC0511-000409-16-132	ENGINE FIXATION	-
23	16	DA04-WC0511-000409-16-133	IN-FEED	-
24	16	DA04-WC0511-000409-16-134	BELT	-
28	16	DA04-WC0511-000409-16-135	CHAIN	-
29	16	DA04-WC0511-000409-16-136	LOWER BLADE	-
31	16	DA04-WC0511-000409-16-137	ENGINE	-
38	16	DA04-WC0511-000409-16-138	M10*24 HEX BOLT	-
39	16	DA04-WC0511-000409-16-139	Ø25 WASHER	-
40	16	DA04-WC0511-000409-16-140	M25 OPEN NUT	-
41	16	DA04-WC0511-000409-16-141	PIN	-
42	16	DA04-WC0511-000409-16-142	M10 LOCK NUT	-
43	16	DA04-WC0511-000409-16-143	M10*80 HEX BOLT	-
44	16	DA04-WC0511-000409-16-144	SWITCH	-
45	16	DA04-WC0511-000409-16-145	SWITCH COVER	-
46	16	DA04-WC0511-000409-16-146	M6*60 SOCKET HEAD SCREW	-
47	16	DA04-WC0511-000409-16-147	SWITCH FRAME	-
48	16	DA04-WC0511-000409-16-148	RUBBER OF FEEDER	-
49	16	DA04-WC0511-000409-16-149	RUBBER FITTING	-
50	16	DA04-WC0511-000409-16-150	M6*16 HEX BOLT	-
51	16	DA04-WC0511-000409-16-151	Ø12 WASHER	-
52	16	DA04-WC0511-000409-16-152	Ø16*80*1.5 SPRING	-
53	16	DA04-WC0511-000409-16-153	M12 NUT	-
54	16	DA04-WC0511-000409-16-154	M8*12 HEX BOLT	-
55	16	DA04-WC0511-000409-16-155	DISCHARGE KNOB	-
58	16	DA04-WC0511-000409-16-156	DISCHARGE TO FRAME RUBBER	-
59	16	DA04-WC0511-000409-16-157	FEED TO FRAME RUBBER	-
60	16	DA04-WC0511-000409-16-158	BEARING	-
61	16	DA04-WC0511-000409-16-159	FLANGE	-
62	16	DA04-WC0511-000409-16-160	BEARING COVER	-