


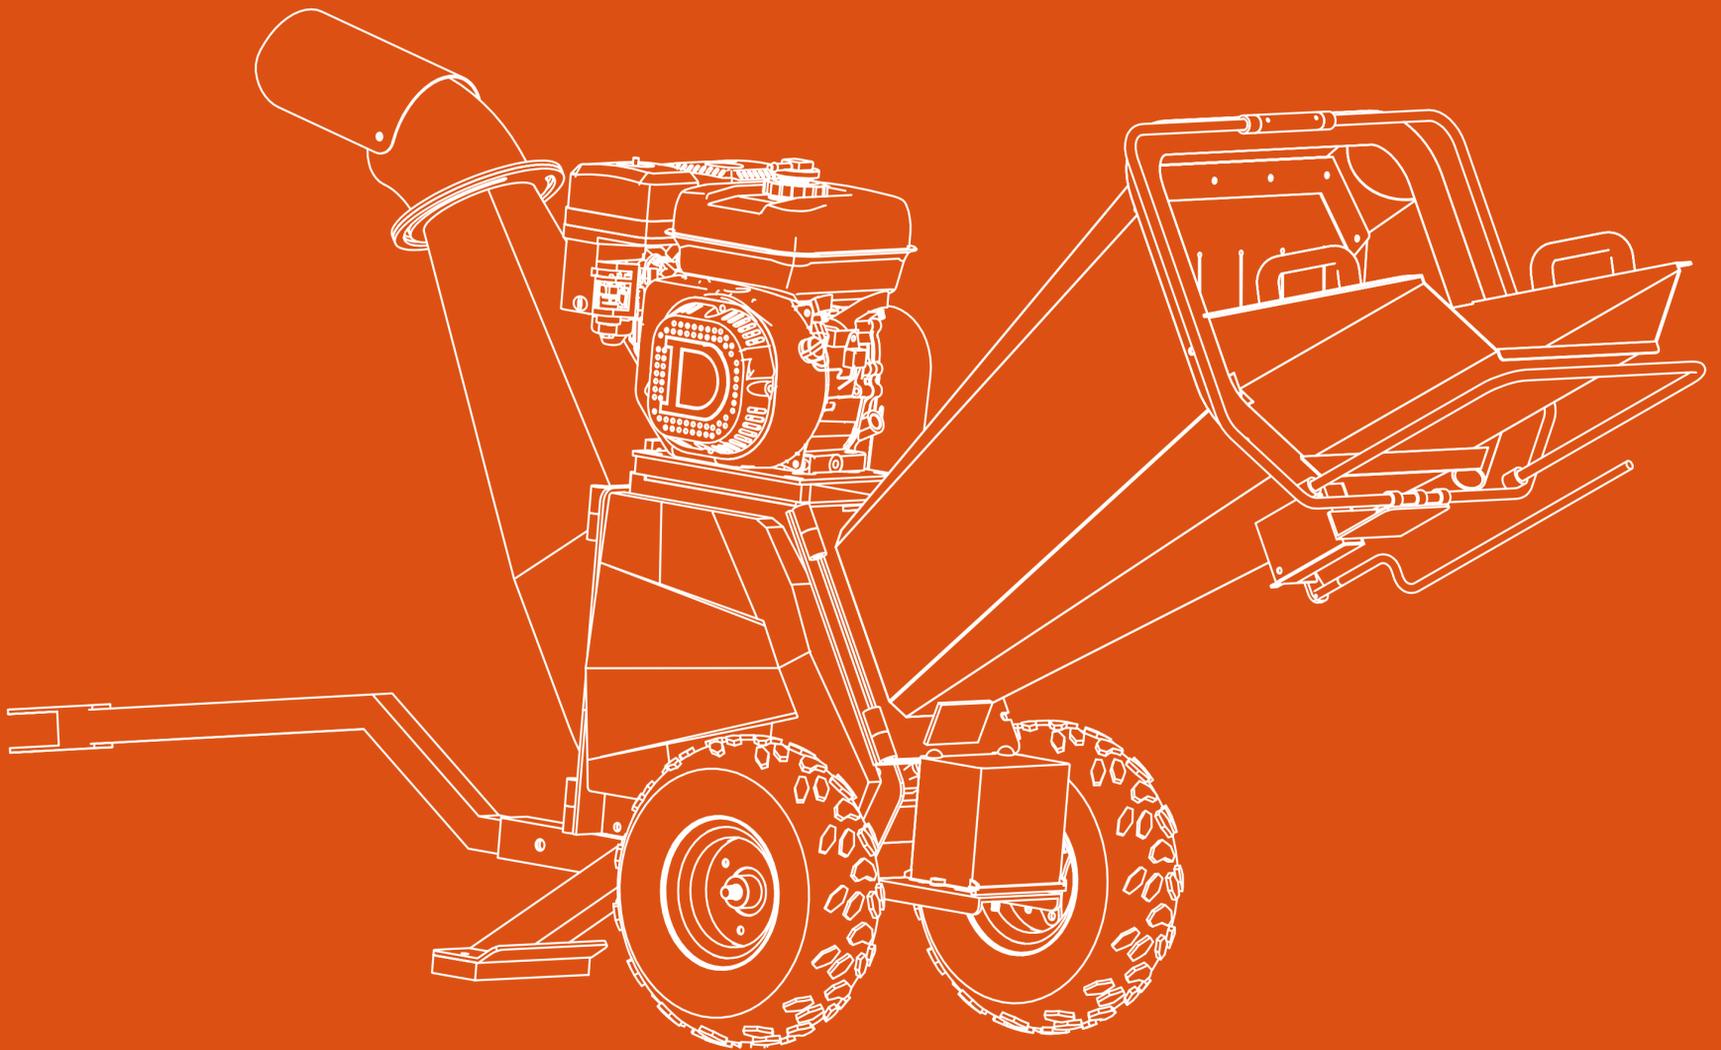

DAEWOO
POWER PRODUCTS


DAFKCC350
WOOD CHIPPER



EXPLODED VIEW / DESPIECE / VUE ÉCLATÉE


www.daewoopowerproducts.com

Manufactured under license of Daewoo International Corporation, Korea
Fabricado bajo licencia de Daewoo International Corporation, Corea

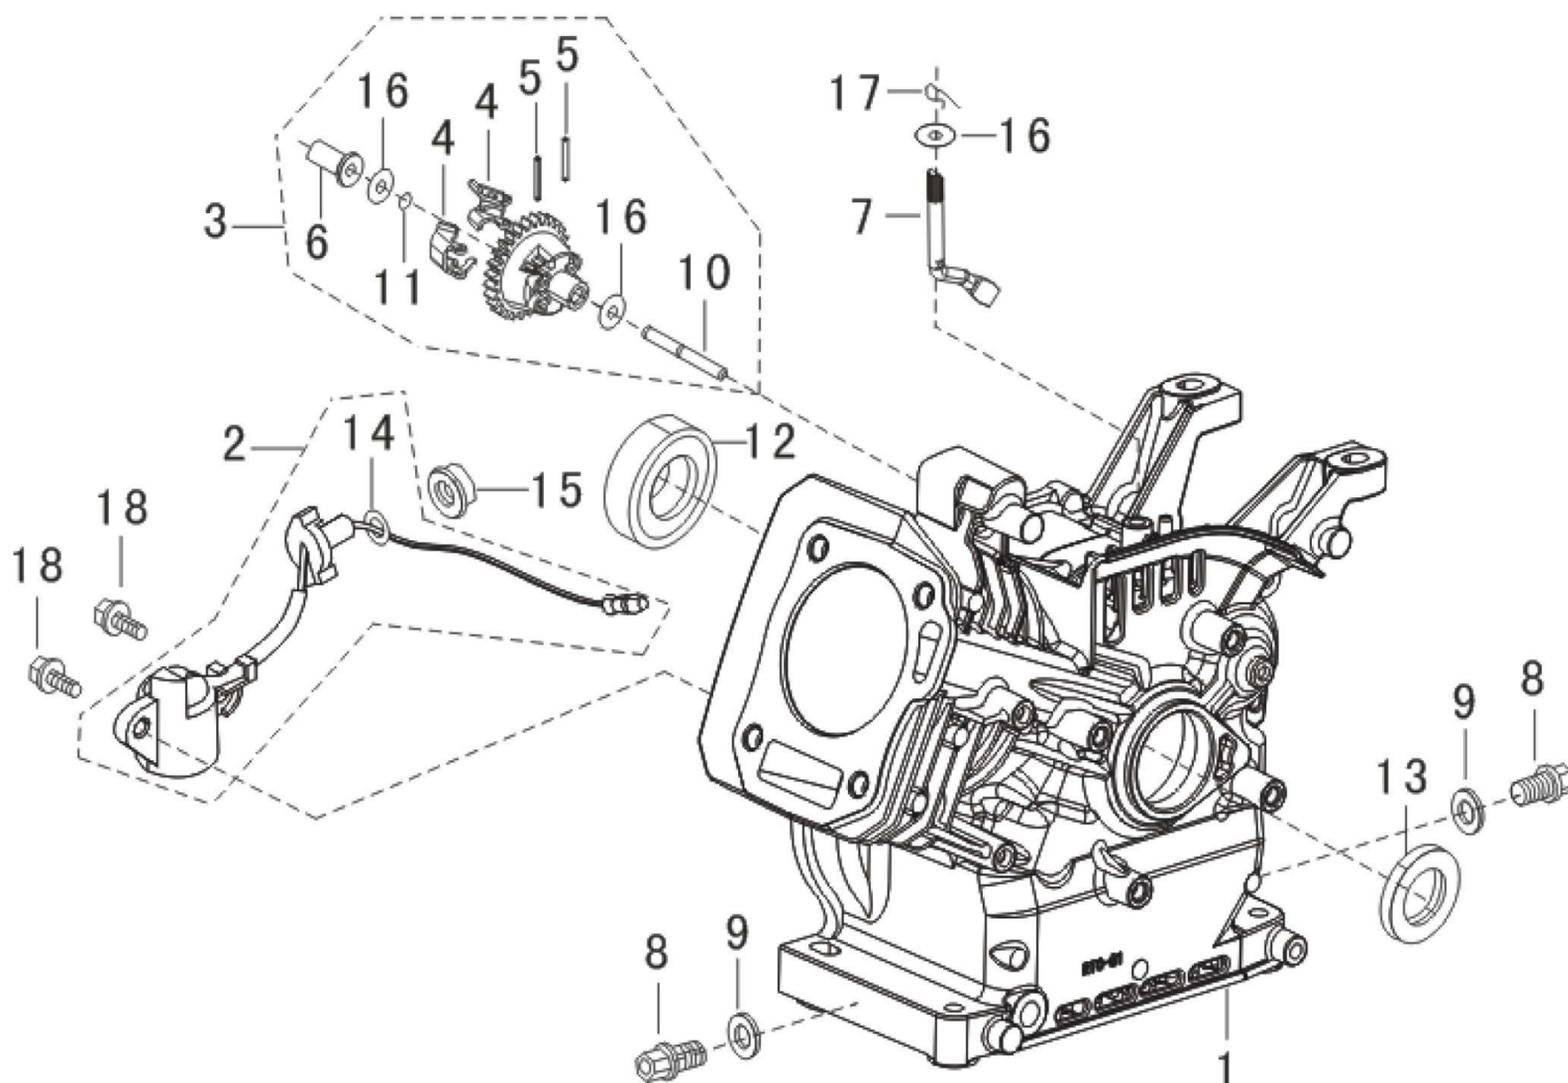


PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
E01-1	1	DA04-WC0311-000409-01-001	CRANKCASE SUBASSEMBLY.	1
E01-2	1	DA04-WC0311-000409-01-002	SENSOR, ENGINE OIL	1
E01-3	1	DA04-WC0311-000409-01-003	GEAR ASSY, GOVERNOR	1
E01-7	1	DA04-WC0311-000409-01-004	ARM, GOVERNOR	1
E01-8	1	DA04-WC0311-000409-01-005	BOLT, DRAIN PLUG	2
E01-9	1	DA04-WC0311-000409-01-006	FLAT WASHER	2
E01-12	1	DA04-WC0311-000409-01-007	DEEP GROOVE BALL BEARING	1
E02-13	1	DA04-WC0311-000409-01-008	SEAL, OIL	1
E02-15	1	DA04-WC0311-000409-01-009	HEXAGON NUT WITH FLANGE	1
E02-16	1	DA04-WC0311-000409-01-010	FLAT WASHER	1
E02-17	1	DA04-WC0311-000409-01-011	COTTER PIN	1
E02-18	1	DA04-WC0311-000409-01-012	BOLT	2


COVER SUBASSEMBLY, CRANKCASE

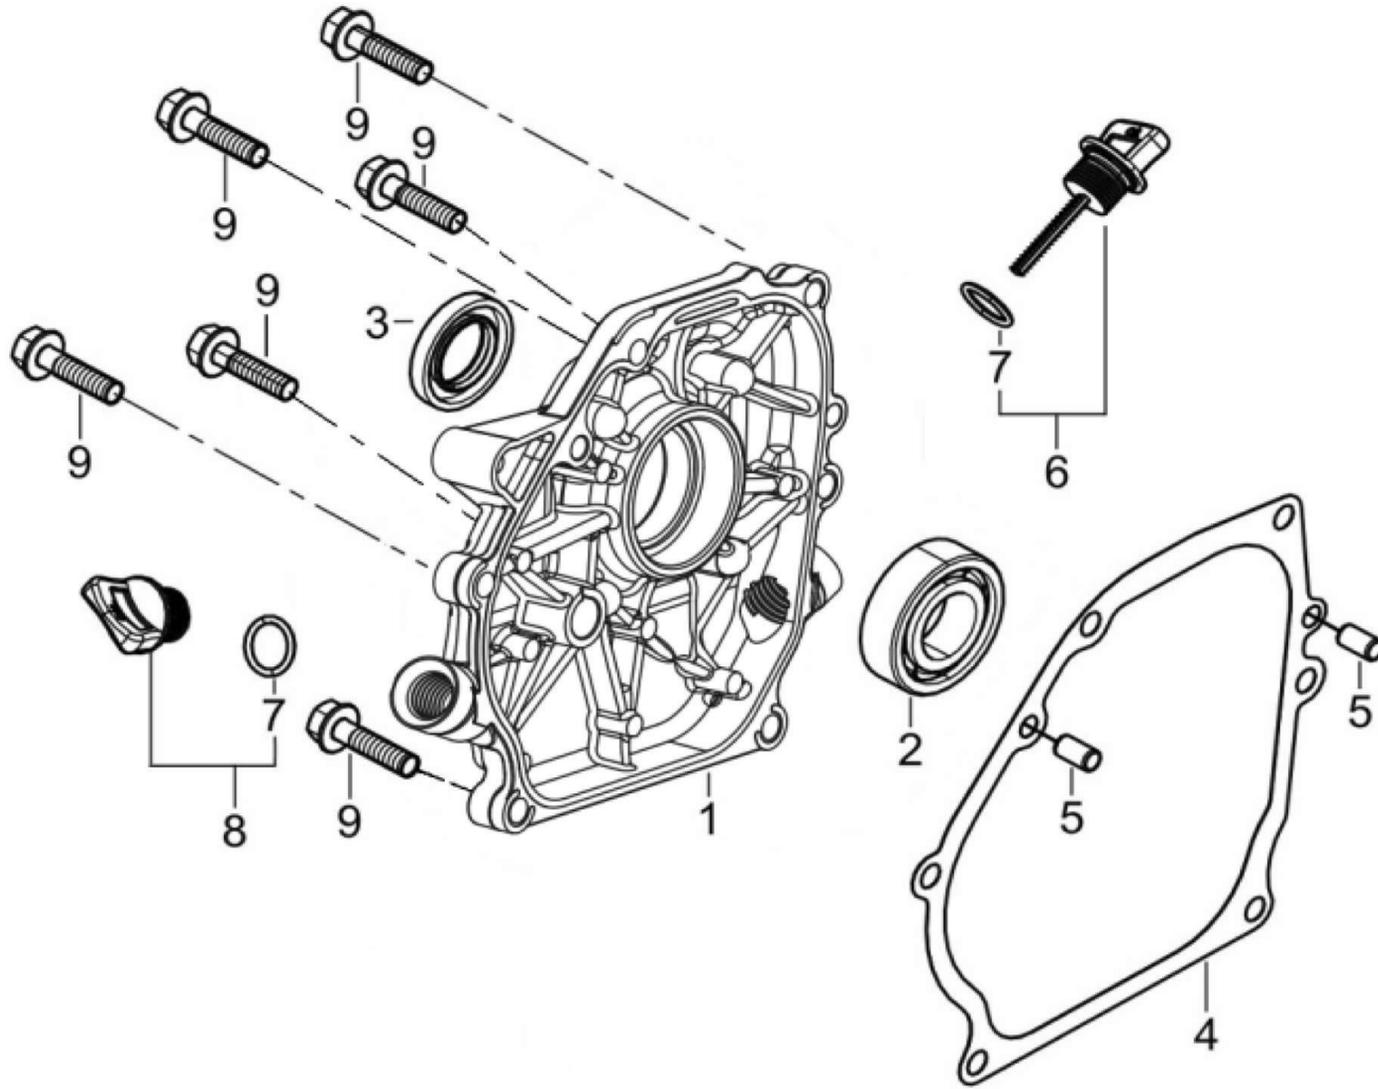


PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
E02-1	2	DA04-WC0311-000409-02-013	COVER, CRANKCASE	1
E02-2	2	DA04-WC0311-000409-02-014	DEEP GROOVE BALL BEARING	1
E02-3	2	DA04-WC0311-000409-02-015	SEAL, OIL	1
E02-4	2	DA04-WC0311-000409-02-016	GASKET, CRANKCASE	1
E02-5	2	DA04-WC0311-000409-02-017	POSITION PIN	2
E02-6	2	DA04-WC0311-000409-02-018	DIPSTICK SUBASSEMBLY, OIL	1
E02-8	2	DA04-WC0311-000409-02-019	PLUG SUBASSEMBLY, ENGINE OIL	1
E02-9	2	DA04-WC0311-000409-02-020	BOLT	6

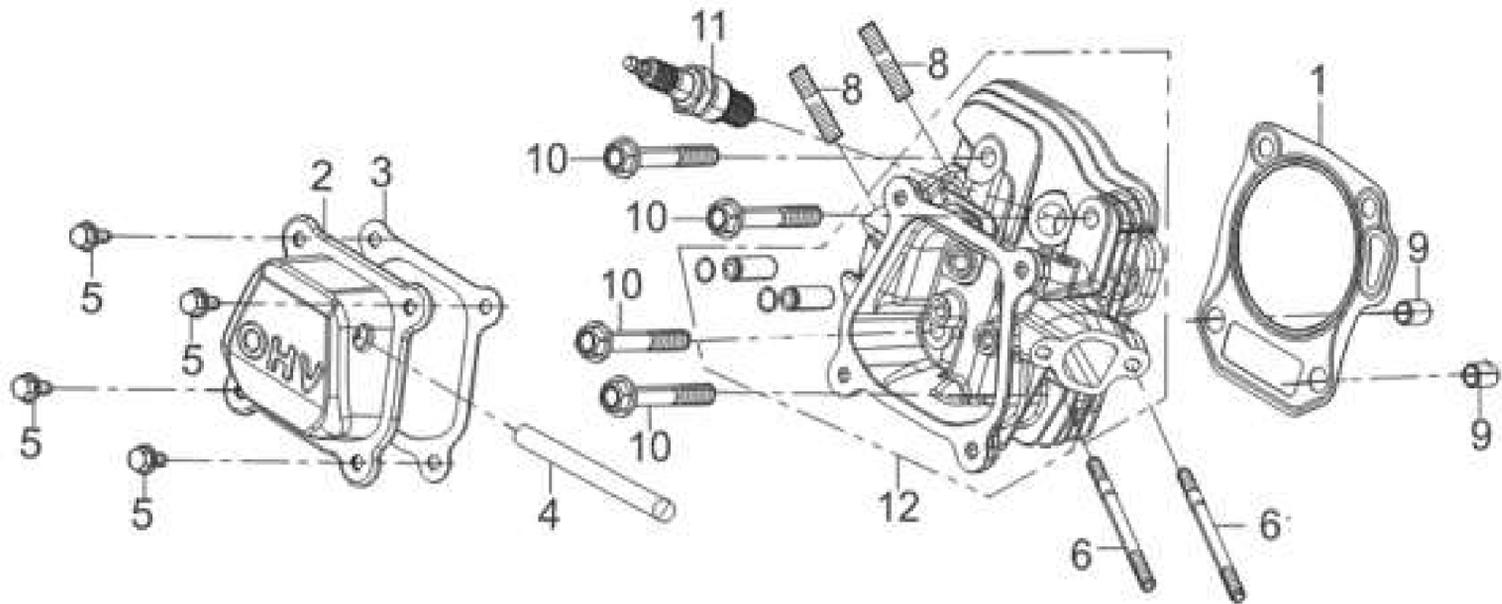

PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
E03-1	3	DA04-WC0311-000409-03-021	GASKET, CYLINDER HEAD	1
E03-2	3	DA04-WC0311-000409-03-022	COVER SUBASSEMBLY, CYLINDER HEAD	1
E03-3	3	DA04-WC0311-000409-03-023	CYLINDER HEAD COVER GASKET	1
E03-4	3	DA04-WC0311-000409-03-024	TUBE, BREATHER	1
E03-5	3	DA04-WC0311-000409-03-025	BOLT	4
E03-6	3	DA04-WC0311-000409-03-026	STUD BOLT	2
E03-8	3	DA04-WC0311-000409-03-027	STUD BOLT	2
E03-9	3	DA04-WC0311-000409-03-028	POSITION PIN	2
E03-10	3	DA04-WC0311-000409-03-029	CYLINDER HEAD BOLT	4
E03-11	3	DA04-WC0311-000409-03-030	PLUG, SPARK	1
E03-12	3	DA04-WC0311-000409-03-031	HEAD SUBASSEMBLY, CYLINDER	1

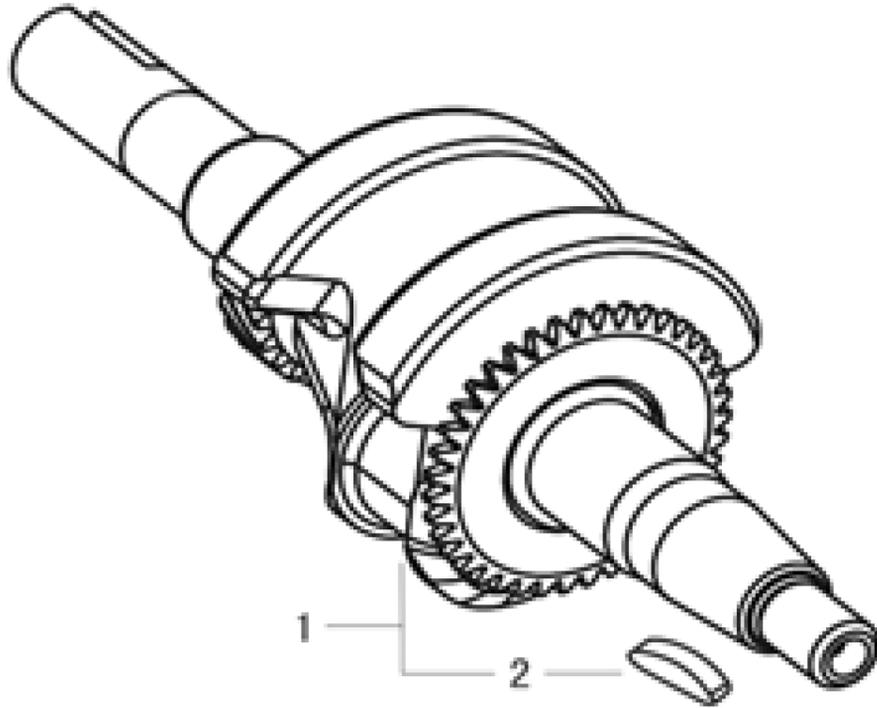


PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
E04-1	4	DA04-WC0311-000409-04-032	CRANKSHAFT ASSY.	1

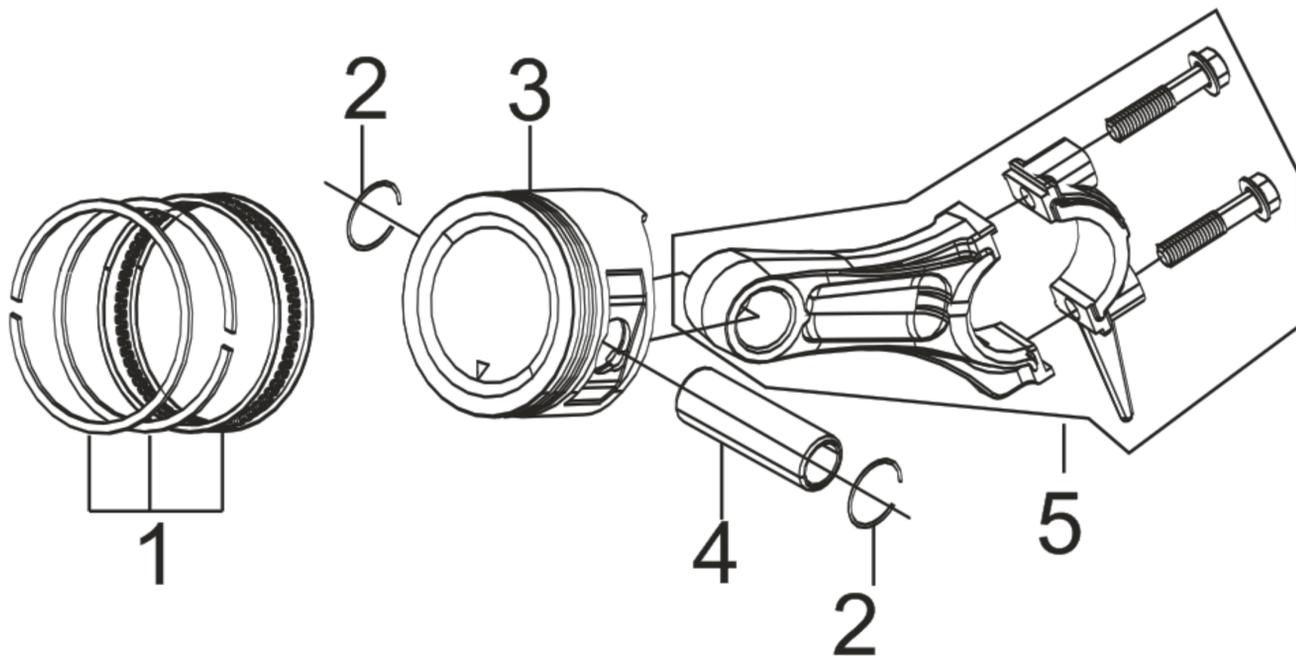


PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
E05-1	5	DA04-WC0311-000409-05-033	RING ASSY, PISTON	1
E05-2	5	DA04-WC0311-000409-05-034	CLIP, PISTON PIN	2
E05-3	5	DA04-WC0311-000409-05-035	PISTON	1
E05-4	5	DA04-WC0311-000409-05-036	PIN, PISTON	1
E05-5	5	DA04-WC0311-000409-05-037	ROD, CONNECTING	1


TRAIN, VALVE / CAMSHAFT SUBASSEMBLY

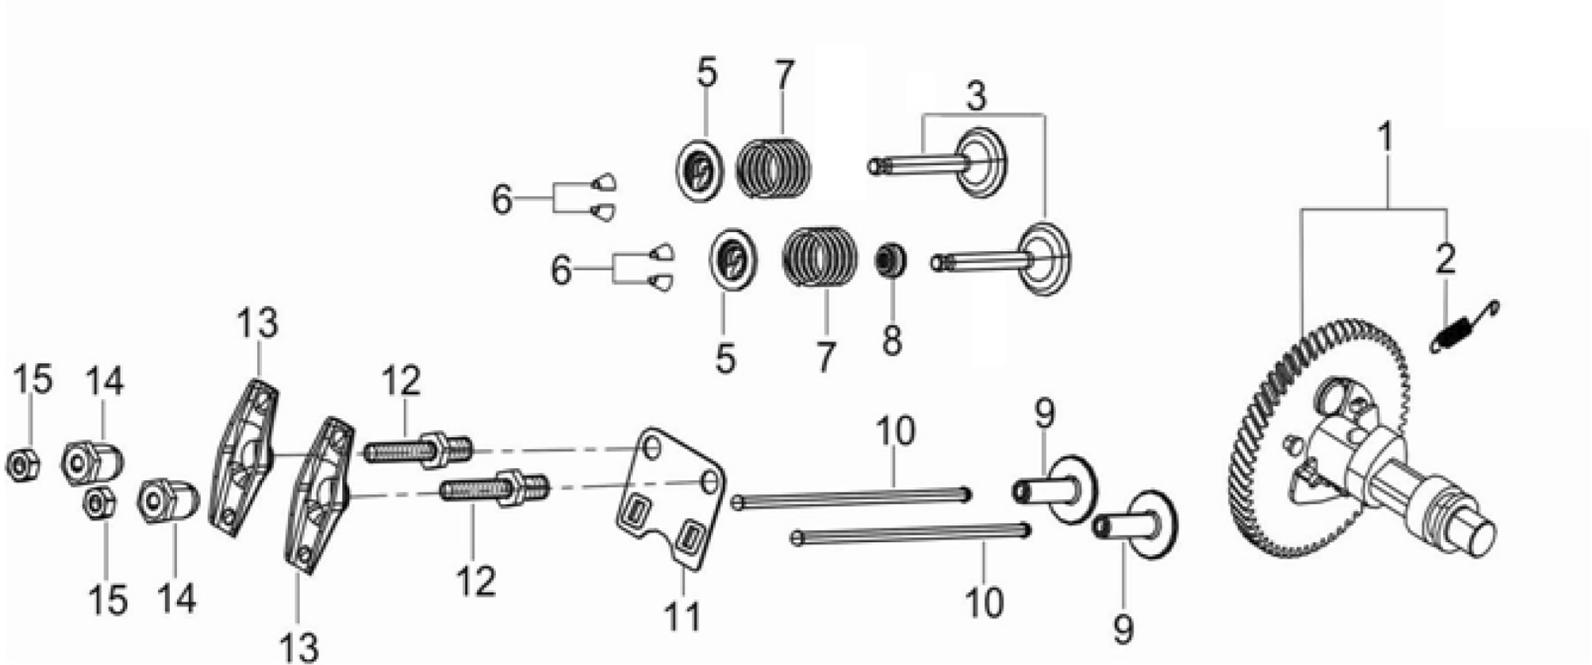


PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
E06-1	6	DA04-WC0311-000409-06-038	CAMSHAFT ASSY.	1
E06-3	6	DA04-WC0311-000409-06-039	VALVES SET	1
E06-5	6	DA04-WC0311-000409-06-040	SEAT, VALVE SPRING	2
E06-6	6	DA04-WC0311-000409-06-041	CLAMP, VALVE LOCK	4
E06-7	6	DA04-WC0311-000409-06-042	SPRING, VALVE	2
E06-8	6	DA04-WC0311-000409-06-043	GUIDE, SEAL	1
E06-9	6	DA04-WC0311-000409-06-044	TAPPET, VALVE	2
E06-10	6	DA04-WC0311-000409-06-045	LIFTER, VALVE	2
E06-11	6	DA04-WC0311-000409-06-046	PLATE SUBASSEMBLY, LIFTER STOPPER	1
E06-12	6	DA04-WC0311-000409-06-047	ROCKSHAFT BOLT	2
E06-13	6	DA04-WC0311-000409-06-048	ROCKER, VALVE	2
E06-14	6	DA04-WC0311-000409-06-049	NUT, VALVE ADJUSTING	2
E06-15	6	DA04-WC0311-000409-06-050	NUT, VALVE LOCK	2

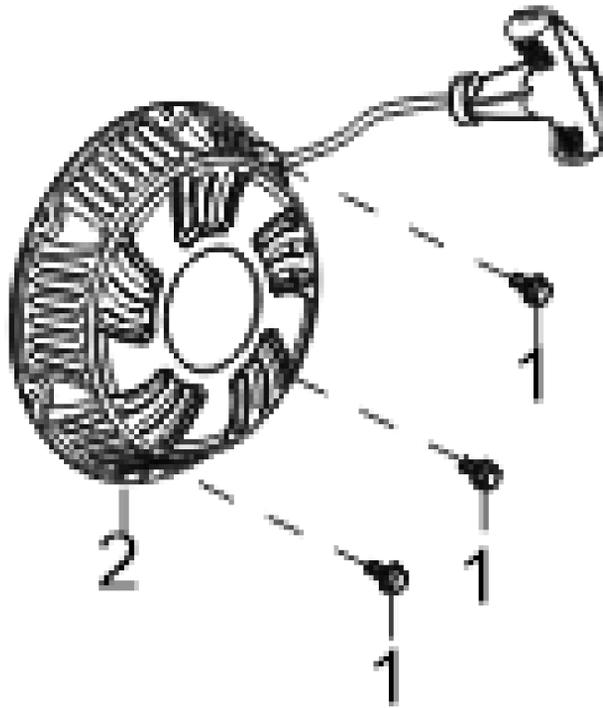


PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
E07-1	7	DA04-WC0311-000409-07-051	BOLT	3
E07-2	7	DA04-WC0311-000409-07-052	STARTER ASSY, RECOIL	1

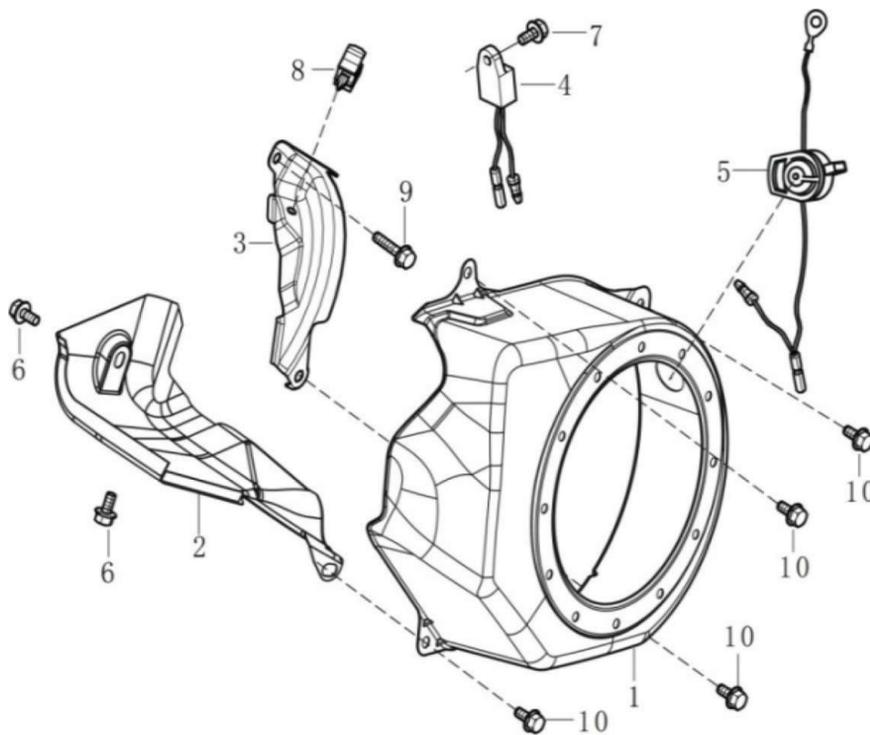


PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
E08-1	8	DA04-WC0311-000409-08-053	SHROUD	1
E08-2	8	DA04-WC0311-000409-08-054	SHROUD, CYLINDER BODY	1
E08-3	8	DA04-WC0311-000409-08-055	SHIELD, LOWER	1
E08-4	8	DA04-WC0311-000409-08-056	PROTECTOR, OIL	1
E08-5	8	DA04-WC0311-000409-08-057	SWITCH SUBASSEMBLY, STOP ENGINE	1
E08-6	8	DA04-WC0311-000409-08-058	BOLT	2
E08-7	8	DA04-WC0311-000409-08-059	BOLT	1
E08-8	8	DA04-WC0311-000409-08-060	COLLAR	1
E08-9	8	DA04-WC0311-000409-08-061	BOLT	1
E08-10	8	DA04-WC0311-000409-08-062	BOLT	4

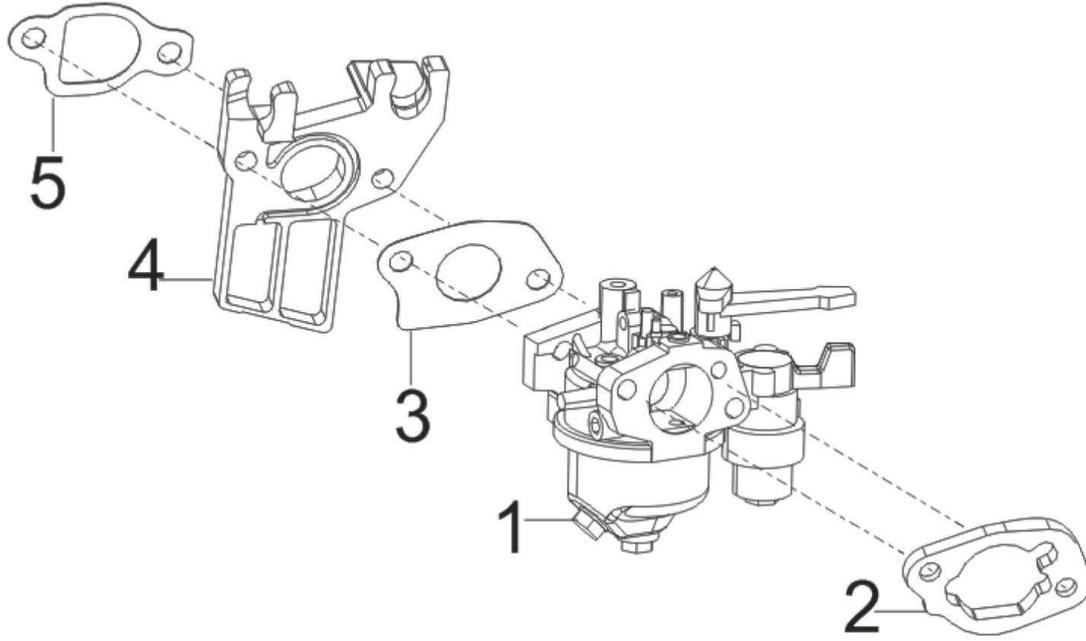


PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
E09-1	9	DA04-WC0311-000409-09-063	CARBURETOR ASSY.	1
E09-2	9	DA04-WC0311-000409-09-064	AIR CLEANER SEAL GASKET	1
E09-3	9	DA04-WC0311-000409-09-065	CARBURETOR SEAL GASKET	1
E09-4	9	DA04-WC0311-000409-09-066	PLATE, CARBURETOR INSULATOR	1
E09-5	9	DA04-WC0311-000409-09-067	GASKET, CARBURETOR INSULATOR	1

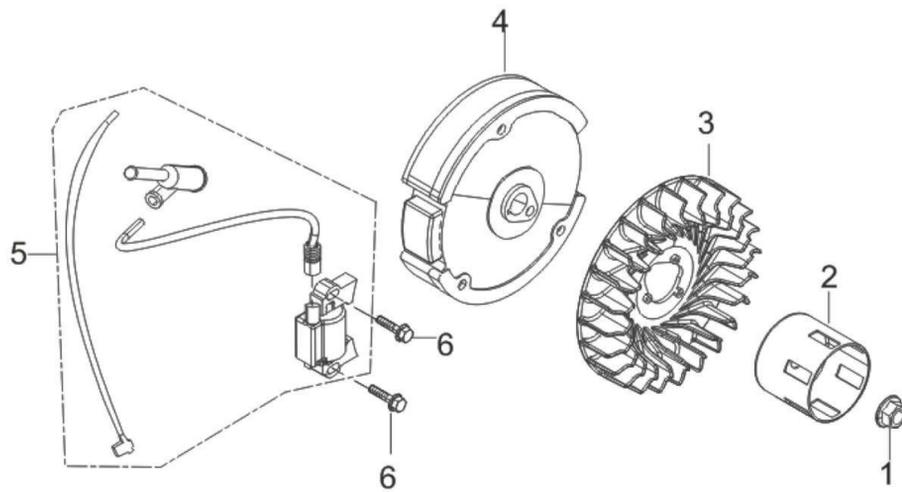


PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
E10-1	10	DA04-WC0311-000409-10-068	NUT, FLYWHEEL	1
E10-2	10	DA04-WC0311-000409-10-069	PULLEY, STARTER	1
E10-3	10	DA04-WC0311-000409-10-070	IMPELLER	1
E10-4	10	DA04-WC0311-000409-10-071	FLYWHEEL SUBASSEMBLY	1
E10-5	10	DA04-WC0311-000409-10-072	COIL, IGNITION	1
E10-6	10	DA04-WC0311-000409-10-073	BOLT	2

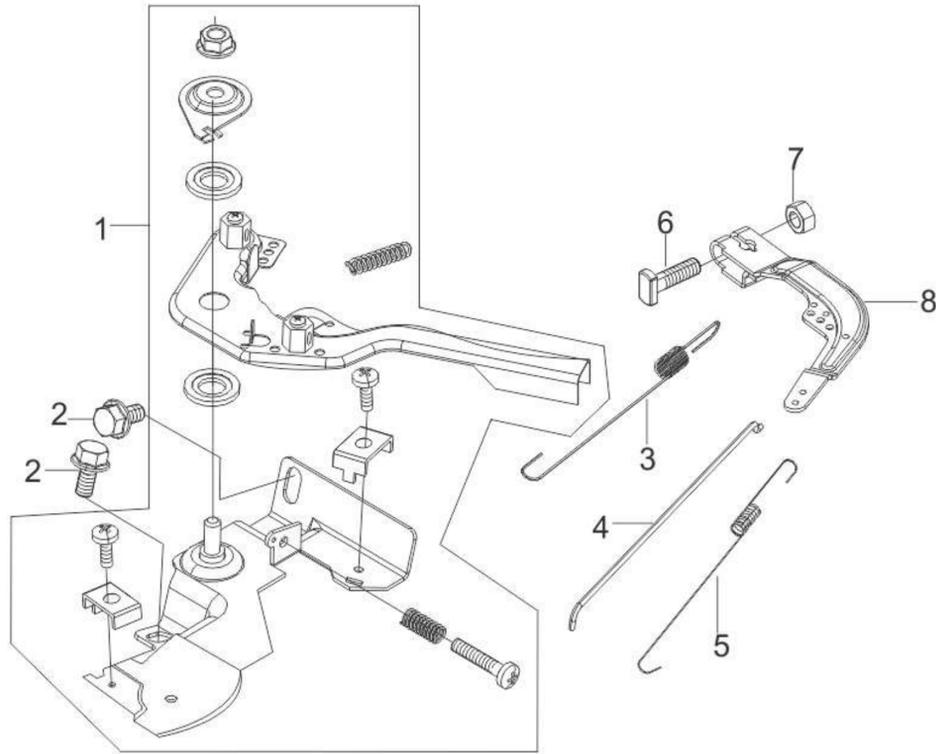


PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
E11-1	11	DA04-WC0311-000409-11-074	CONTROL ASSY, THROTTLE	1
E11-2	11	DA04-WC0311-000409-11-075	BOLT	2
E11-3	11	DA04-WC0311-000409-11-076	SPRING, GOVERNOR	1
E11-4	11	DA04-WC0311-000409-11-077	ROD, GOVERNEOR	1
E11-5	11	DA04-WC0311-000409-11-078	SPRING, THROTTLE VALVE RETURNING	1
E11-6	11	DA04-WC0311-000409-11-079	BOLT, GOVERNOR SUPPORT	1
E11-7	11	DA04-WC0311-000409-11-080	HEXAGON NUT WITH FLANGE	1
E11-8	11	DA04-WC0311-000409-11-081	GOVERNOR BRACKET SUBASSEMBLY	1

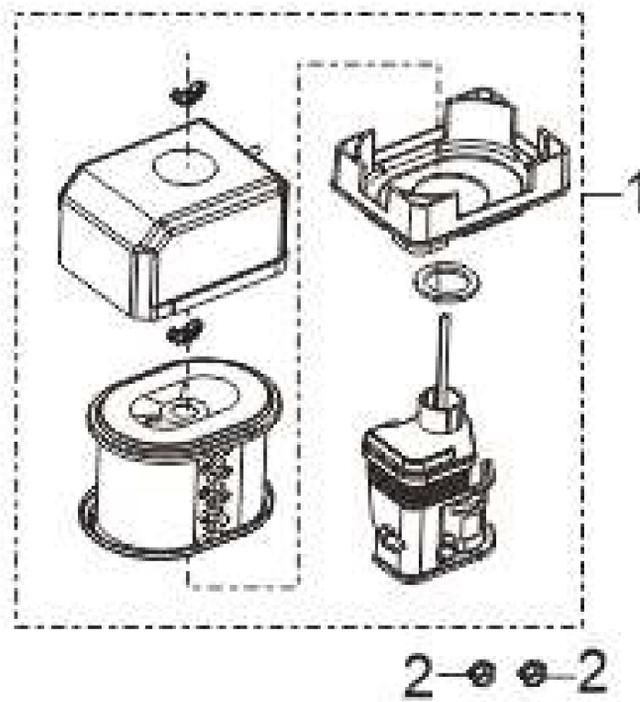


PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
F01-1	12	DA04-WC0311-000409-12-082	AIR CLEANER	1
F01-2	12	DA04-WC0311-000409-12-083	HEXAGON NUT WITH FLANGE	2

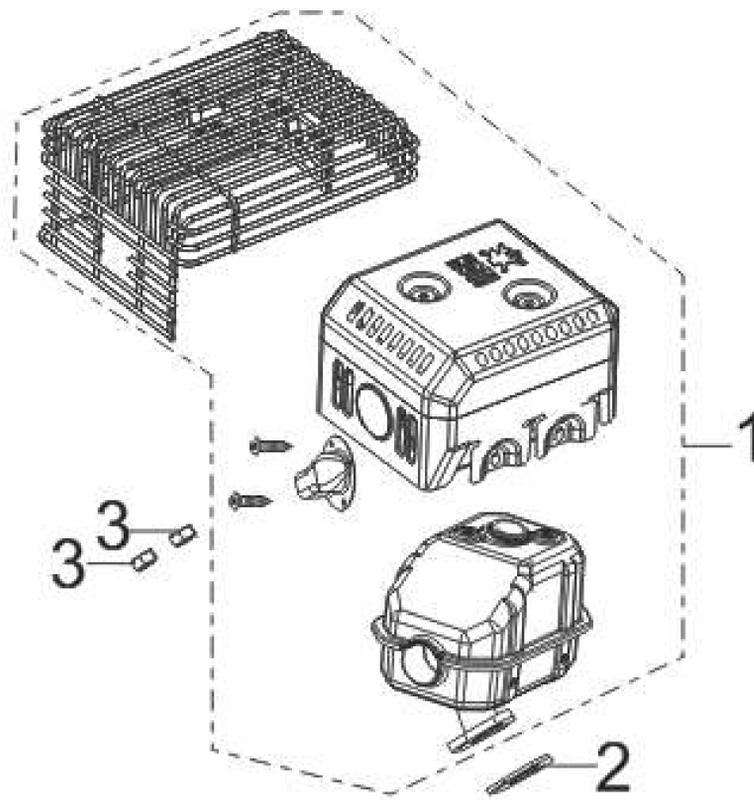

PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
F02-1	13	DA04-WC0311-000409-13-084	MUFFLER ASSY.	1
F02-2	13	DA04-WC0311-000409-13-085	GASKET, EXHAUST OUTLET	1
F02-3	13	DA04-WC0311-000409-13-086	TYPE 1 HEXAGON NUT	2

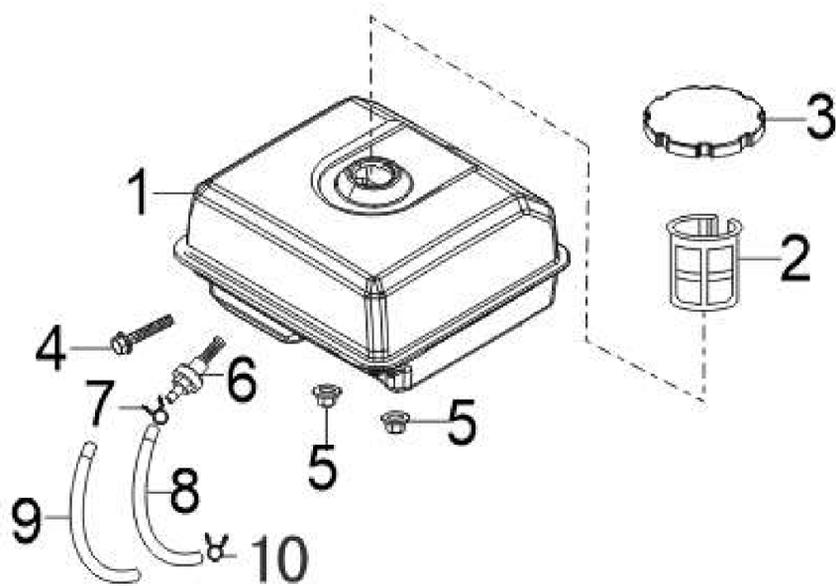

PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
F03-1	14	DA04-WC0311-000409-14-087	FUEL TANK	1
F03-2	14	DA04-WC0311-000409-14-088	STRAINER, FUEL	1
F03-3	14	DA04-WC0311-000409-14-089	COVER, FUEL TANK	1
F03-4	14	DA04-WC0311-000409-14-090	BOLT	1
F03-5	14	DA04-WC0311-000409-14-091	HEXAGON NUT WITH FLANGE	2
F03-6	14	DA04-WC0311-000409-14-092	OUTLET SUBASSEMBLY, FUEL TANK OIL	1
F03-7	14	DA04-WC0311-000409-14-093	COLLAR	1
F03-8	14	DA04-WC0311-000409-14-094	TUBE, FUEL	1
F03-9	14	DA04-WC0311-000409-14-095	JACKET, RUBBER	1
F03-10	14	DA04-WC0311-000409-14-096	COLLAR	1

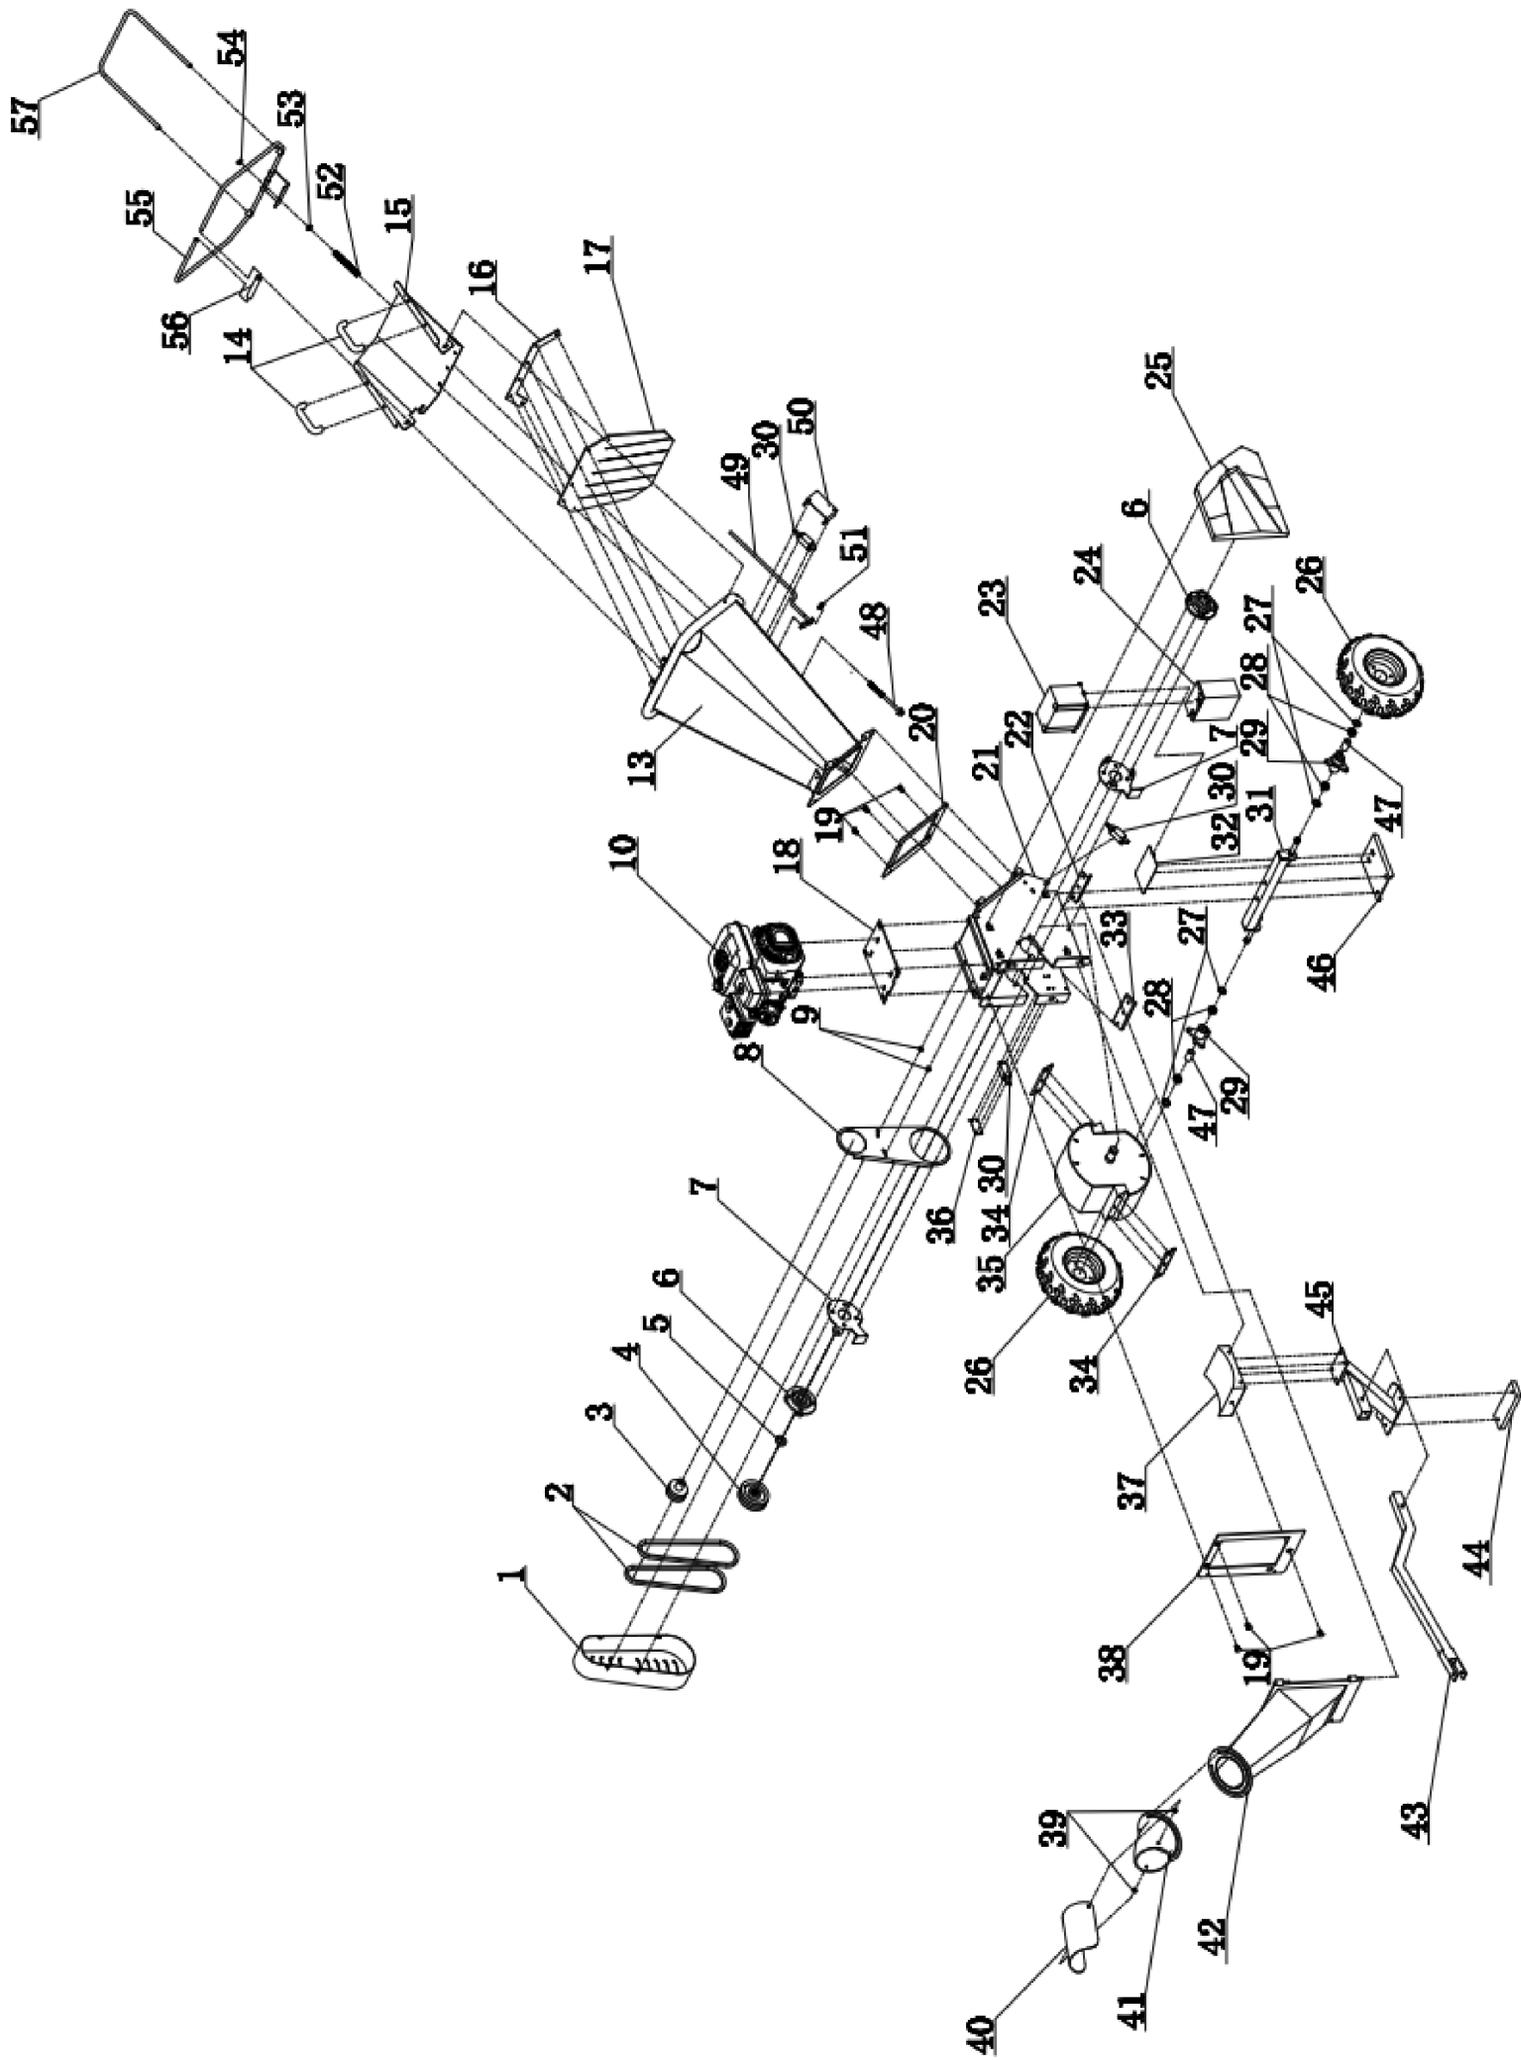

PART NO.	PAGE	DAEWOO PART REFERENCE CODE	SPARE PART DESCRIPTION	QTY
1	15	DA04-WC0311-000409-15-097	BELT COVER	
2	15	DA04-WC0311-000409-15-098	BELT	
3	15	DA04-WC0311-000409-15-099	CLUTCH	
4	15	DA04-WC0311-000409-15-100	DRUM PULLEY	
5	15	DA04-WC0311-000409-15-101	SPACER	
6	15	DA04-WC0311-000409-15-102	BEARING	
7	15	DA04-WC0311-000409-15-103	SEAL PLATE	
8	15	DA04-WC0311-000409-15-104	INNER BELT COVER	
9	15	DA04-WC0311-000409-15-105	SPACER	
10	15	DA04-WC0311-000409-15-106	ENGINE	
11	15	DA04-WC0311-000409-15-107	INFEED HOPPER	
12	15	DA04-WC0311-000409-15-108	HANDLE	
13	15	DA04-WC0311-000409-15-109	INFEED EXTENSION	
14	15	DA04-WC0311-000409-15-110	RUBBER FITTING STRIPE	
15	15	DA04-WC0311-000409-15-111	INFEED RUBBER	
16	15	DA04-WC0311-000409-15-112	ENGINE PLATE	
17	15	DA04-WC0311-000409-15-113	PLASTIC BUCKLE	
18	15	DA04-WC0311-000409-15-114	INFEED DAMPING PAD	
19	15	DA04-WC0311-000409-15-115	MAIN FRAME	
20	15	DA04-WC0311-000409-15-116	ANVIL SPACING BAR	
21	15	DA04-WC0311-000409-15-117	BATTERY BOX	
22	15	DA04-WC0311-000409-15-118	BATTERY	
23	15	DA04-WC0311-000409-15-119	FRAME COVER	
24	15	DA04-WC0311-000409-15-120	WHEEL	
25	15	DA04-WC0311-000409-15-121	SEAL	
26	15	DA04-WC0311-000409-15-122	BEARING	
27	15	DA04-WC0311-000409-15-123	FLANGE	
28	15	DA04-WC0311-000409-15-124	KILL SWITCH	
29	15	DA04-WC0311-000409-15-125	WHEEL AXLE	
30	15	DA04-WC0311-000409-15-126	BATTERY FASTEN BOARD	
31	15	DA04-WC0311-000409-15-127	ANVIL	
32	15	DA04-WC0311-000409-15-128	BLADE	
33	15	DA04-WC0311-000409-15-129	DRUM	
34	15	DA04-WC0311-000409-15-130	SWITCH COVER	
35	15	DA04-WC0311-000409-15-131	ARCH BOARD	
36	15	DA04-WC0311-000409-15-132	DISCHARGE DAMPING RUBBER	
37	15	DA04-WC0311-000409-15-133	DISCHARGE FASTENER	
38	15	DA04-WC0311-000409-15-134	DISCHARGE REGULATOR	
39	15	DA04-WC0311-000409-15-135	DISCHARGE TOP PART	
40	15	DA04-WC0311-000409-15-136	DISCHARGE BOTTOM PART	
41	15	DA04-WC0311-000409-15-137	TOW BAR	
42	15	DA04-WC0311-000409-15-138	FOOT RUBBER	
43	15	DA04-WC0311-000409-15-139	FOREFOOT	
44	15	DA04-WC0311-000409-15-140	BATTERY BASE PLATE	
45	15	DA04-WC0311-000409-15-141	FLANGE SPACER	
46	15	DA04-WC0311-000409-15-142	BOLT	
47	15	DA04-WC0311-000409-15-143	RESTORE HANDLE	
48	15	DA04-WC0311-000409-15-144	SWITCH COVER	
49	15	DA04-WC0311-000409-15-145	SPRING	
50	15	DA04-WC0311-000409-15-146	COMPRESSION SPRING	
51	15	DA04-WC0311-000409-15-147	M10 NUT	
52	15	DA04-WC0311-000409-15-148	M10 LOCK NUT	
53	15	DA04-WC0311-000409-15-149	EMERGENCY STOP FRAME	
54	15	DA04-WC0311-000409-15-150	FITTING PIPE	
55	15	DA04-WC0311-000409-15-151	EXTENSION PIPE	